


TRANSAXLE ASSEMBLY AND PARTS LIST

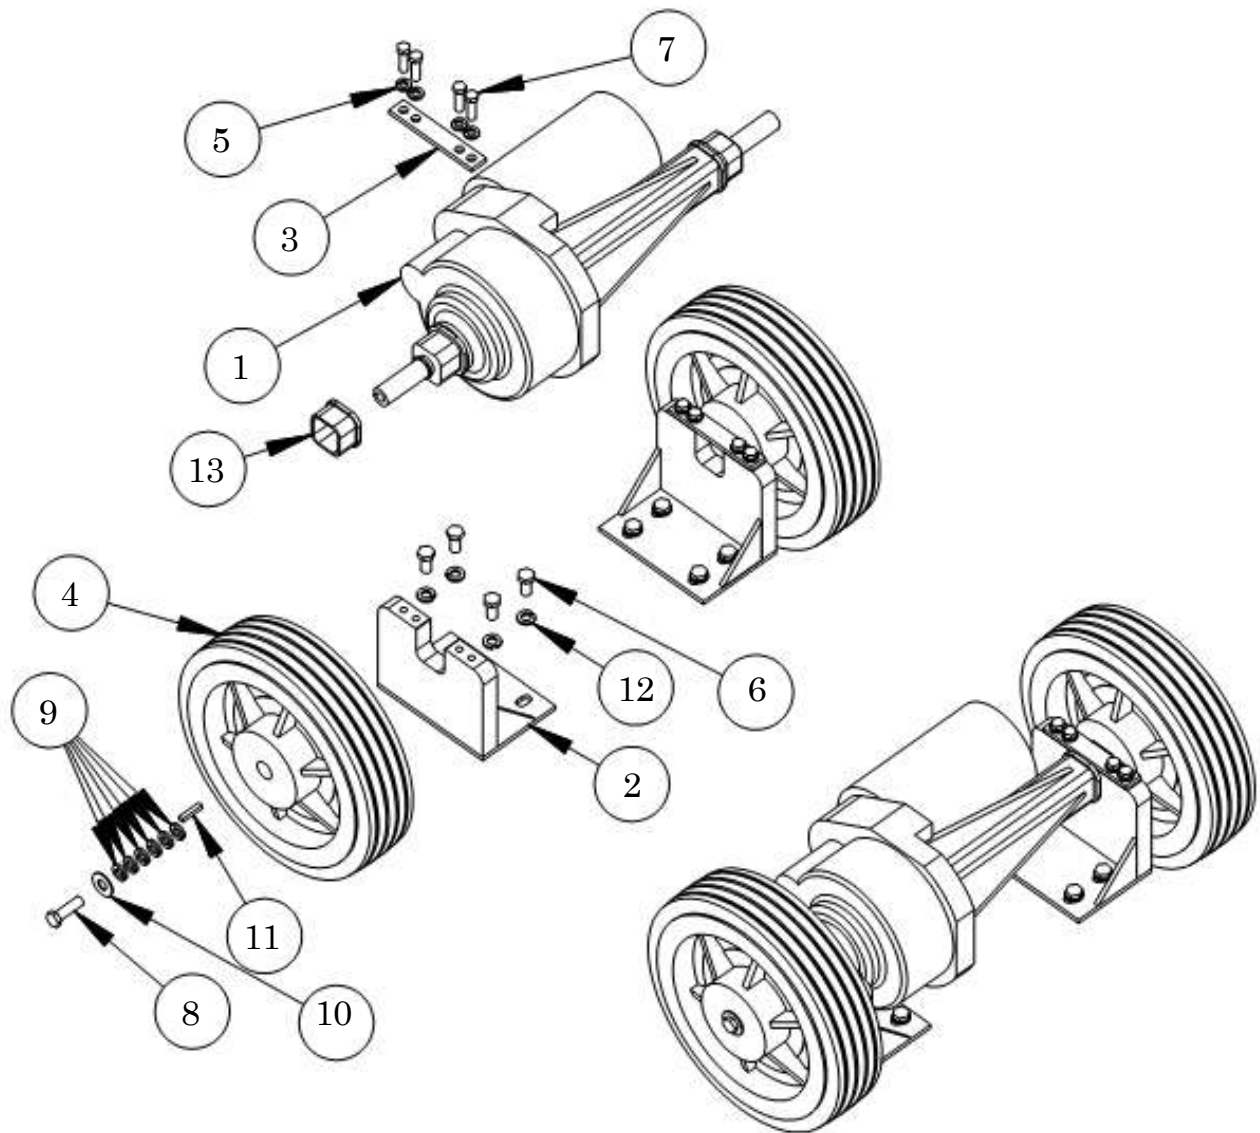

ITEM	SKU	DESCRIPTION	QTY
1	E10509	Transaxle 36V	1
2	E11589	TRANSAXLE BRACKET	2
3	E11590	TRANSAXLE RETAINER	2
4	E11631	10"x2 1/2" Transaxle Wheel	2
5	E81067	Washer, 5/16" Lock	16
6	E81080	Bolt 3/8-16x3/4	8
7	AS26/32337	#N/A	8
8	E83629	Screw, 3/8" - 16 x 1.25 Hex Head	2
9	E81066	Washer, 3/8" Split Lock, Zinc	12
10	AS26/32283	#N/A	2
11	E11721	3/16x3/16x1-1/4" KEYSTOCK	2
12	E81066	Washer, 3/8" Split Lock, Zinc	8
13	E12541	Rubber Mounting Sleeve	2