

SUMMARY

ON CONSIGNMENT OF THE MACHINE	24
INTRODUCTORY COMMENT	24
TECHNICAL DESCRIPTION	24
SYMBOLGY USED ON THE MACHINE	25
SYMBOLGY USED IN THE MANUAL	26
MACHINE PREPARATION	27
HANDLING OF THE PACKED MACHINE	27
HOW TO UNPACK THE MACHINE	27
BATTERY TYPE	28
INSTALLING THE BATTERIES	28
CONNECTING THE BATTERY CHARGER	28
BATTERY CHARGER	29
BATTERY CHARGE LEVEL GAUGE	29
INSTALLING THE SQUEEGEE	29
SQUEEGEE HEIGHT ADJUSTING	30
SQUEEGEE INCLINATION ADJUSTING	30
RECOVERY TANK	30
SOLUTION WATER	30
INSTALLING THE SPLASH-GUARD	31
INSTALLING THE BRUSH 42-52	31
BRUSH ASSEMBLY ABILA 17	32
GENERAL SECURITY RULES	33
WORK	34
WORK PREPARATION	34
OVERFLOW DEVICE	35
TRACTION	35
UPON COMPLETION OF WORK	36
DAILY MAINTENANCE	37
RECOVERY TANK CLEANING	37
SUCTION FILTER CLEANING	37
SQUEEGEE CLEANING	37
BRUSHES DISASSEMBLY ABILA 42 52	38
BRUSHES DISASSEMBLY ABILA 17	38
CLEANING SOLUTION FILTER	38
WEEKLY MAINTENANCE	39
CLEANING SQUEEGEE HOSE	39
CLEANING SOLUTION TANK	39
REAR SQUEEGEE RUBBERS REPLACEMENT	39
WORKING CONTROL	40
INSUFFICIENT WATER TO THE BRUSHES	40
THE MACHINE DOES NOT CLEAN PROPERLY	40
THE SQUEEGEE DOES NOT DRY PERFECTLY	40
FOAM OVER-FORMATION	40
CHOICE AND USE OF BRUSHES	41

On consignment of the machine

When the machine is consigned to the customer, an immediate check must be performed to ensure all the material mentioned in the shipping documents have been received and moreover to find out that the machine has not suffered damage during transportation. If damage has occurred, get the shipping agent to verify immediately the amount and nature of the damage suffered and at the same time inform our claim department. It is only by prompt action of this type that compensation for damage may be successfully claimed.

Introductory comment


This is a sweep-scrubbing machine which, using the mechanic abrasive action of two rotary brushes and the chemical action of a solution water-detergent, is able to clean any type of floor, picking up during its advance movement, the removed dirt and the detergent solution which has not been absorbed from the floor.

The machine must be used only for such purpose. We would impress upon you that any machine will function efficiently and operate successfully, only if used correctly and maintained in fully efficient working order. We therefore suggest you to read this instruction booklet carefully and re-read it whenever difficulties arise in the course of machine use. Our Service Department is at your disposal for all such advice and servicing as may prove necessary.




TECHNICAL DESCRIPTION	U/M	ABILA 17	ABILA 42	ABILA 52
Cleaning width	Mm	420	400	500
Squeegee width	Mm	660	660	660
Working capacity, up to	Sqm/h	1470	1400	1750
Brushes diameter	Mm	1x420	2x210	2x255
Brushes speed	Rpm	140	340	275
Brushes pressure	Kg	20 max	20 max	22 max
Brush motor, nominal power	W	400	400	400
Drive type		semi-aut.	semi-aut.	semi-aut.
Max. movement speed	km/h	3,5	3,5	3,5
Max. gradient		2%	2%	2%
Suction motor, nominal power	W	370	370	370
Suction vacuum	Mbar	100	100	100
Solution tank	L	33	33	33
Recovery tank	L	40	40	40
Machine length	Mm	1060	1060	1100
Machine height	Mm	960	960	960
Machine width (without squeegee)	Mm	455	455	565
Batteries (voltage)	V	24	24	24
Batteries (max. capacity)	Ah	70	70	70
Batteries (compartment)	Mm	360x330x250		
Batteries weight	Kg	40	40	40
Machine weight (empty and without batteries)	Kg	70	70	72
Acoustic radiation pressure level (EN 60704-1)	db (A)	<65	<65	<65
Vibration level	m/sqs	1.00	1.00	1.00


SYMBOLS USED ON THE MACHINE

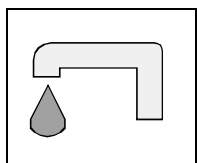


Cock symbol
Indicates the cock lever
Indicates the cock open signal lamp

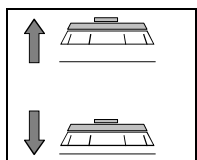


Squeegee base lift/lower symbol
Indicates the base lift lever

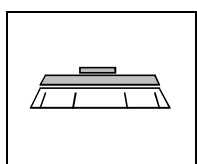


Brush symbol
Indicates the brush motor switch

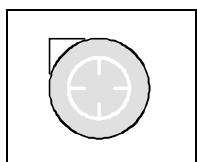


Suction motor symbol
Indicates the suction motor switch

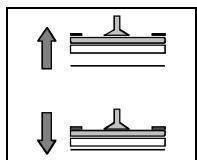


Squeegee lift/lower symbol
Indicates the squeegee lift lever

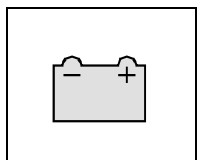


Battery symbol

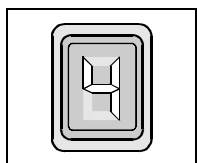

Indicator of the battery charge level
Indicates also the position of the cock level (switched off = cock closed, switched on = opened cock)

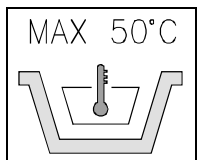


Indicates the detergent solution maximum temperature
It is placed closed to the solution tank inlet opening.

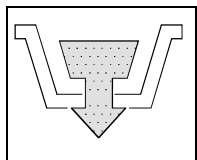


Indicated the recovery tank outlet pipe

SYMBOLS USED ON THE MACHINE

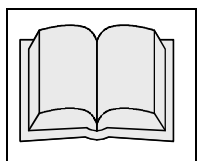

Open book symbol

Indicates to the operator to read the manual before using the machine.

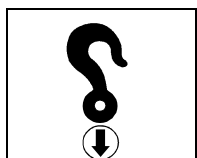

Hooking symbol

Indicates anchoring points and loading direction.

SYMBOLS USED IN THE MANUAL



Warning symbol

Carefully read the sections marked with this symbol, for the security of both the operator and the machine.

MACHINE PREPARATION

HANDLING OF THE PACKED MACHINE


The machine is contained in specific packing with a platform so that a forklift can move it. No more than two packages can be stacked on each other.

The total weight is:

- Abila 42: 136 kg
- Abila 52: 138 kg
- Abila 17: 136 kg


Packing dimensions are the following:

A : 1260 mm
B : 660 mm
C : 1230 mm

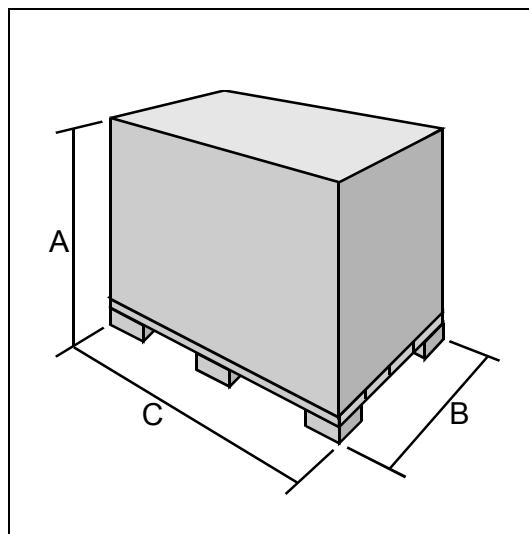


HOW TO UNPACK THE MACHINE

1. Remove outer packing.
2. The machine is strapped to its platform.
3. Remove the strap.

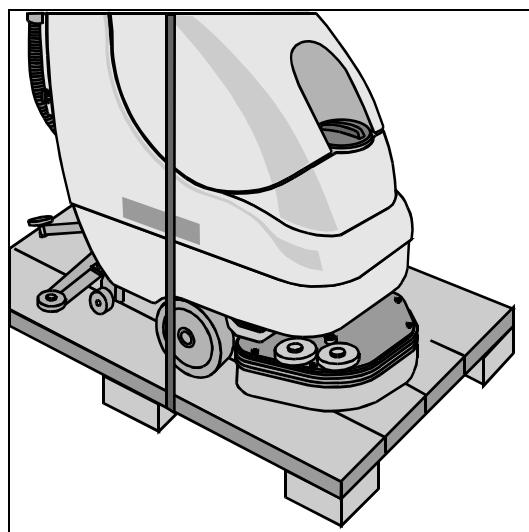

4. Use a ramp to lower the machine from the platform, pushing it backward in reverse. Avoid violent blows against the base.
5. Keep the packing platform for future transport necessities.

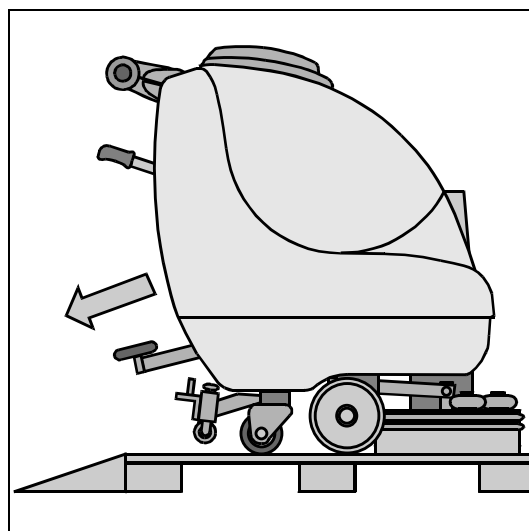

MACHINE PREPARATION

BATTERY TYPE

For the energy supply of the machine use two:

- lead batteries for traction use and tubular plates and electrolyte free;
 - or battery hermetically sealed for traction recombination of gas with gel technology.
- Every battery is compound of elements that are connected in order to get a voltage of 12 V at the holdfasts.

The max. dimensions of every battery should be: width 195 mm, length 360 mm, height 250 mm.

The max. weight of every of the two batteries should be 20kg.

In order to achieve a tension of 24V the batteries must be connected with a serial connection between them and the connection process has to be carried out by specialised persons, which are trained by a Comac service centre.


INSTALLING THE BATTERIES

Battery must be housed in the battery compartment below the recovery tank, and must be handled using special hoisting equipment with suitable grasping systems and designed to support the battery weight.


The battery must also conform to the requirements given in CEI 21-5 standards.

Battery installation procedure:

1. Open the recovery tank lid forward.
2. Disconnect the squeegee cable (1) from the recovery tank.
3. Remove the suction cap (2) by turning it in anticlockwise sense.
4. Disconnect the "recovery tank " outlet pipe from the proper hook.
5. Remove the recovery tank.

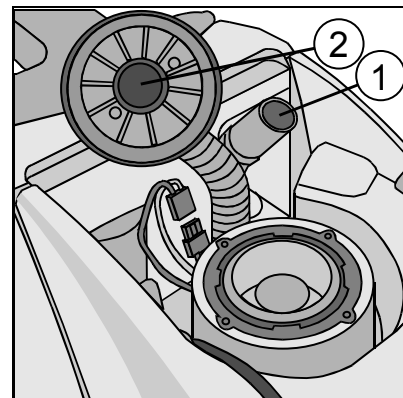

6. Place the battery.
7. Connect the battery connector (2) to the machine connector (1).
8. Reassemble everything.

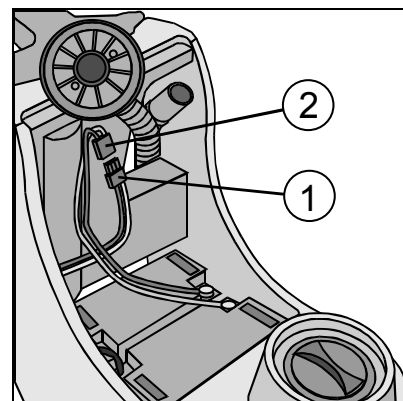


ATTENTION! The installation process has to be carried out by specialised persons.

CONNECTING THE BATTERY CHARGER

The battery connector (2), in which the battery charger connector is to be inserted, is placed under the recovery tank cap. The battery charger connector is delivered inside the bag containing this instruction booklet, and must be fitted to the battery charger cables according to instructions.



ATTENTION! This procedure is to be carried out by specialists. A wrong or defective connection of the cables to the connectors can cause serious damages persons and things.

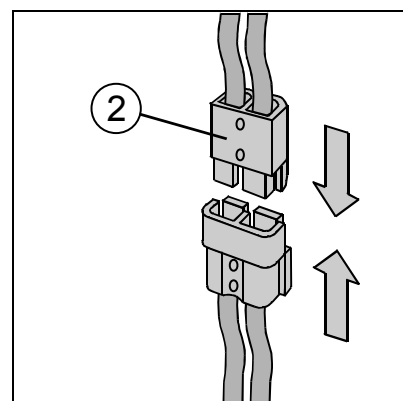

MACHINE PREPARATION

BATTERY CHARGER

Make sure that the battery charger is suitable to the installed battery, both in capacity and in type (lead/acid or GEL and equivalent).



WARNING! Never charge a GEL battery with an unsuitable battery charger. Strictly follow the instructions provided by the battery and battery charger manufacturer.

In order to avoid permanent damages to the battery, they should never be totally discharged. To do this, they should be recharged within a few minutes after the battery discharge signal starts to flash.

NOTE: Never left the battery completely discharged, not even if the machine is not being used.



ATTENTION! For the daily recharging of the battery it is necessary to strictly follow the instructions provided by the manufacturer or dealer. Specialists must carry out all installing and maintenance procedures. Danger of exhalation of gas and emission of corroding substances. Danger of fire: keep away from flames.


BATTERY CHARGE LEVEL GAUGE

The batteries' indicator is digital with 4 fixed positions and a blinking one. The numbers, which appear on the display, show the approximate charge level.

4 = maximum charge, **3** = charge 3/4, **2** = charge 2/4, **1** = charge 1/4, **0** = (blinking) discharged batteries)




WARNING! Some seconds after that "0" blinks, the brush motor automatically switches off. Anyway, the machine can finish to dry before recharging the batteries.

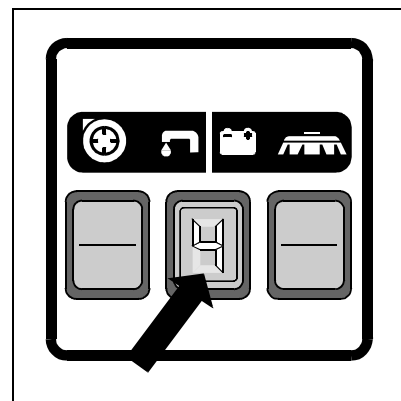

INSTALLING THE SQUEEGEE

The squeegee is supplied separately from the machine, due to packing reasons. It must be installed as shown in the picture, threading the retaining pin into the squeegee column. Put the squeegee suction tube into its sleeve.

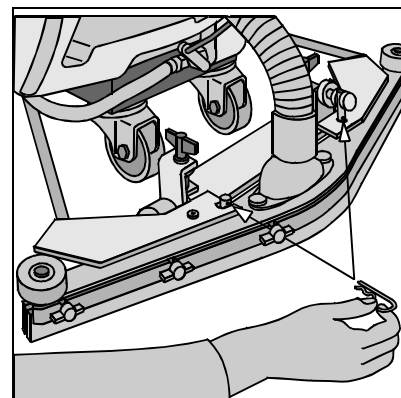


MACHINE PREPARATION

SQUEEGEE HEIGHT ADJUSTING


The squeegee height is to be regulated according to rubbers wearing. To adjust this: rotate the wing nuts (1) anticlockwise to lift the squeegee and clockwise to lower it.

Note: The right and left wheels must undergo the same regulation, to allow the squeegee to work parallel to the ground.

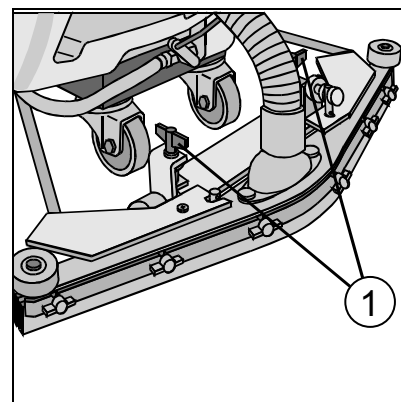

SQUEEGEE INCLINATION ADJUSTING


During the running, the back rubber is to be lightly inclined backwards (about 5 mm, on its whole length). Should it be necessary, you can increase the rubber central inclination by inclining backwards the squeegee body, turning the regulator anticlockwise (1). To increase the bending of the rubber on the squeegee sides, turn the register clockwise. Once the regulation is finished, lock the block nut.

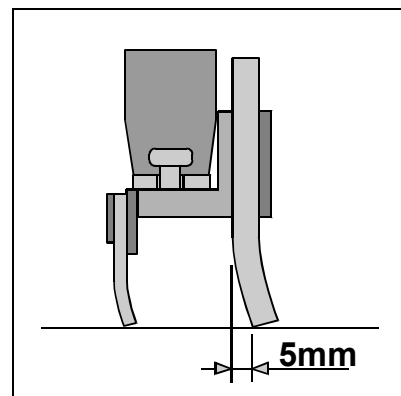

RECOVERY TANK

Open the cover and check if the suction plug (2) is insert correctly and its notches are blocked turning the plug clockwise and is well connected with the hose which leads to the suction motor.

Furthermore check, that the squeegee hose (1) is well connected and that the exhaust plug at the back of the machine is closed.

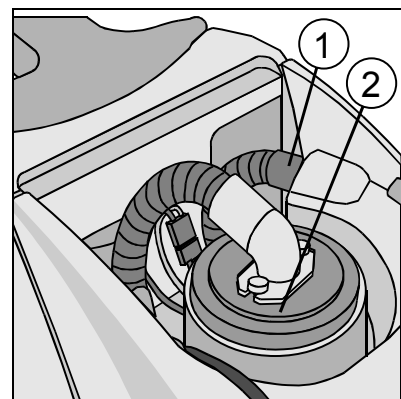


SOLUTION WATER

Fill the solution tank with clean water at a temperature not in excess of 50°C. Add liquid detergent in the amounts and using the procedures recommended by the detergent manufacturer. Use only a minimal percentage of detergent to prevent formation of an excessive quantity of foam, as this could damage the suction motor. Close the cap.




ATTENTION! Always use low-foam detergent. Introduce a small amount of anti-foam detergent in the recovery tank before start working, to be sure to prevent foam formation. **Never use pure acids.**

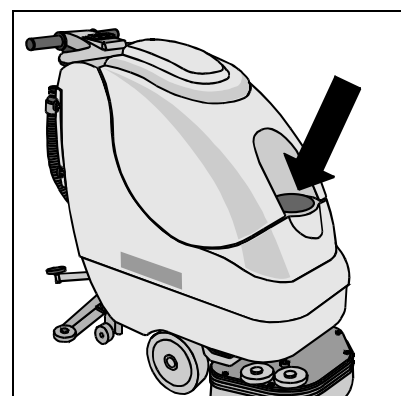

MACHINE PREPARATION


INSTALLING THE SPLASH-GUARD

The splashguard is supplied separately from the machine, for packing reasons, and is to be installed as shown in the picture.

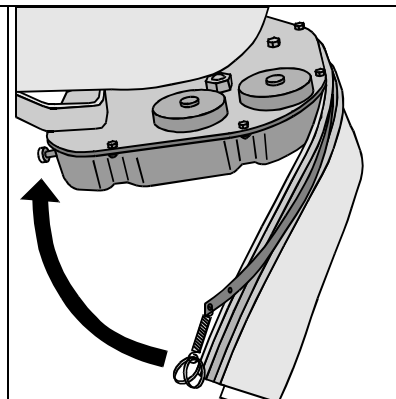


INSTALLING THE BRUSH 42-52

1. Lift the brush base by acting on the pedal.

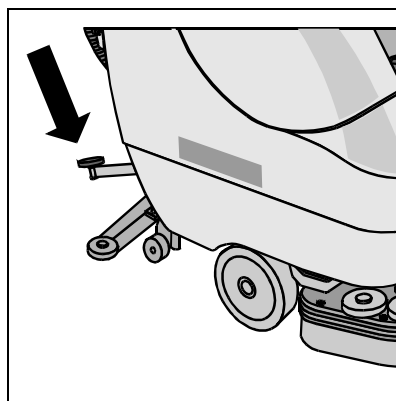


2. Keeping the base lifted, thread the brushes on their seat on the hole under the base, turning them until the three buttons enter the holes in the plate. Snap-shut the button on the coupling spring to block it.

The picture shows the rotation direction just for the right brush: for the left one, turn on the opposite direction.

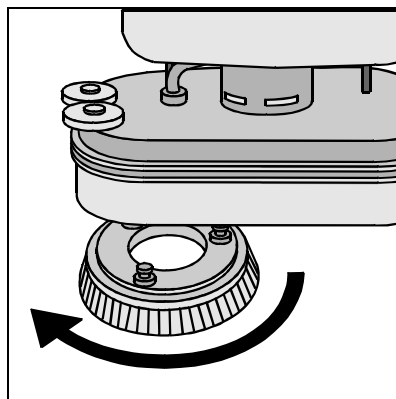


We recommend to exchange daily the right brush with the left brush and vice versa. If the brushes are not new, and their bristles are twisted, you would better reassemble them in their original position, to avoid any overloads on the motor or excessive vibrations.

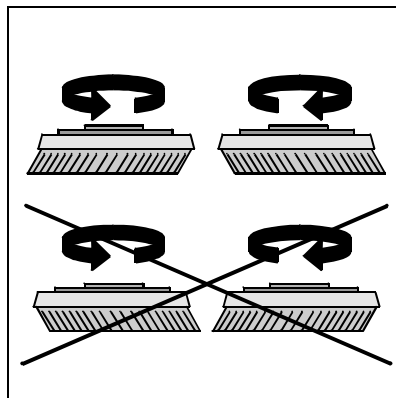


MACHINE PREPARATION

BRUSH ASSEMBLY ABILA 17


1. Push the pedal in order to lift the brush base.
2. With lifted brush base try to bring the brushes in the right position corresponding to the junctions of the machine.
3. Let the brush base down by acting on the pedal.

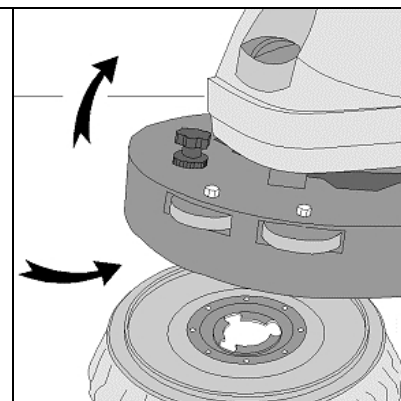

4. Press the operator present control lever (6) and the brush will be hooked automatically.

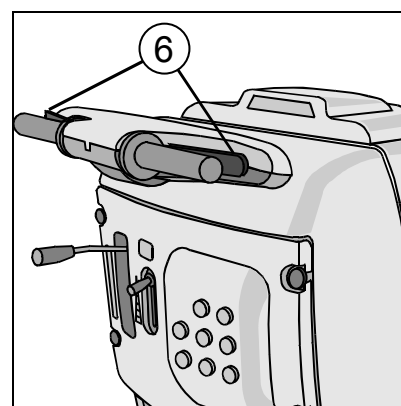

5. In order to vary the advancement speed act upon the knob indicated in the illustration.

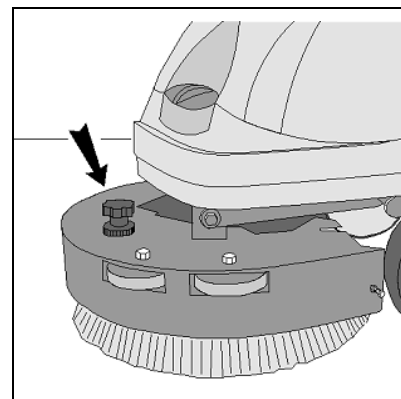

GENERAL SECURITY RULES


Please carefully follow the listed below rules in order to avoid harm to the operator and damage to the machine:

- ☐ Read the labels on the machine carefully. Never cover them for any reason and always immediately replace them if they are damaged
- ☐ The machine is to be used only by authorised and trained staff
- ☐ Pay attention to other people and particularly to children while the machine is working
- ☐ Never mix different types of detergents: this could generate noxious gases
- ☐ Never sets containers of liquids on the machine
- ☐ Machine storage temperature must be between -25°C and +55°C
- ☐ Operating conditions: room temperature between 0°C and +40°C with respective humidity between 30 and 95
- ☐ Never use the machine in an explosive environment
- ☐ Never use the machine to transport goods
- ☐ Never use acid solutions, which could damage people or the machine
- ☐ Avoid running the brushes with the machine stopped: this could damage the floor
- ☐ Never aspirate flammable liquids
- ☐ This appliance is not suitable for picking up hazardous dust
- ☐ Use a powder fire extinguisher in case of fire. Do not use water
- ☐ Do not hit against shelving or scaffolding when there is a danger of falling objects
- ☐ Suit operating speed to traction conditions
- ☐ Do not exceed over the limit gradient stated on the machine plate, to avoid conditions of instability
- ☐ The machine must perform washing and drying operations simultaneously. Any other operations must be done in zones where the presence of unauthorised persons is prohibited. Signal wet floor with suitable signs
- ☐ Whenever the machine has operating troubles check to make sure these are not due to insufficient ordinary maintenance. Should not it be the case, enquire with your nearest **COMAC** assistance centre
- ☐ When replacing machine parts, always ask for ORIGINAL COMAC spare parts from your authorised agent and/or retailer
- ☐ Use only original **COMAC** brushes indicated in the paragraph "CHOICE AND USE OF BRUSHES"
- ☐ Always cut out the electric power supply to the machine whenever maintenance is performed
- ☐ ATTENTION: Restore all electrical connections after any maintenance operation
- ☐ Never remove guards that require tools for removal
- ☐ Never wash the machine with direct pressurised jets of water or with corrosive substances
- ☐ Have your nearest **COMAC** service centre checks the machine every 200 operating hours
- ☐ To avoid encrustation's on the solution tank filter, do not fill it with the detergent solutions many hours before using the machine
- ☐ Before using the machine, make sure that all the doors and coverings are positioned as shown in this use and maintenance booklet
- ☐ Check that the recovery tank is empty before removing it
- ☐ Carry off consumption materials according to the laws in force
- ☐ When, after years of precious work your **COMAC** machine will be ready to be "pensioned", organise the carrying off of its composing materials, in particular oils, batteries and electronics components. Please remember that the machine has been built using totally recyclable materials


WORK

WORK PREPARATION


1. Connect the connector (1) to the battery

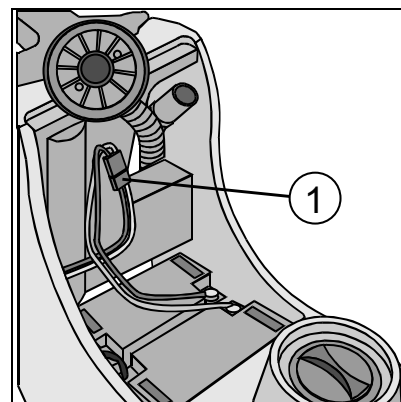


2. Press the brush switch (2)
3. Press the suction switch (3)

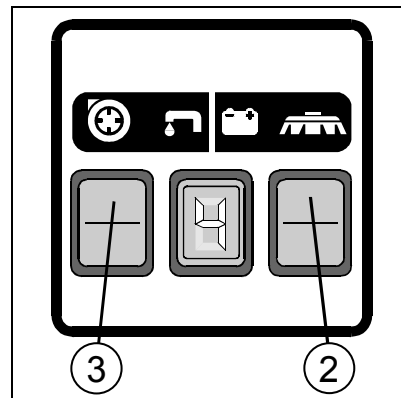

4. Act on the cock lever (4) to adjust the detergent solution quantity: it should be enough to regularly wet the floor but not as much as to flow out the splashguard. Please note the right solution quantity depends on floor type, on dirt importance and on speed.
5. Release the pedal and let the base lower.
6. Lower the squeegee acting on the lever (5).

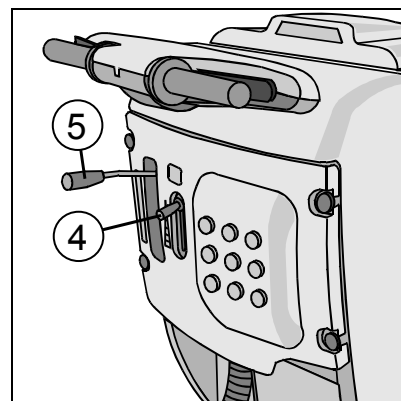

7. Acting on the deadman lever (6) the brushes start turning and the squeegee starts drawing in.
8. During the first few metres check that the amount of water is sufficient and that the squeegee dries the floor perfectly.

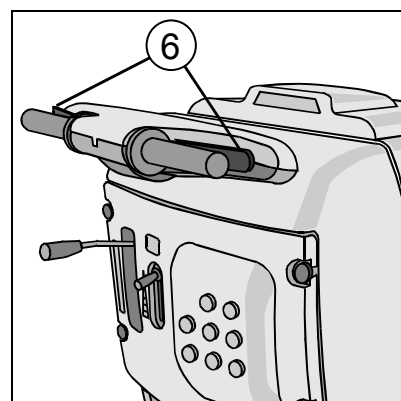


WORK

OVERFLOW DEVICE

The machine is supplied with float that trips whenever the recovery tank is full, closing the suction tube. In this case you should empty the recovery tank by removing the outlet pipe cap.



ATTENTION! Always wear gloves during this procedure, to avoid any contact with dangerous substances.

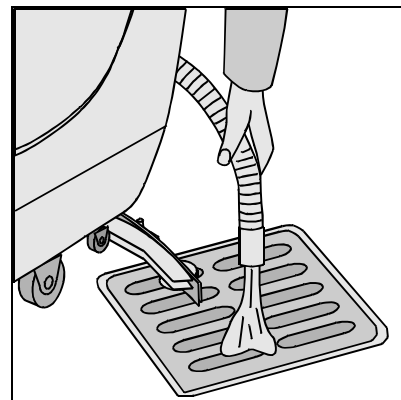

TRACTION

The brush obtains the traction of this machine: its inclination while working allows dragging the machine along.




ATTENTION! While going into reverse, even briefly, make sure that the squeegee is lifted.

UPON COMPLETION OF WORK

At the end of the work, and before performing any type of maintenance:

1. Close the cock by lever (1).
2. Raise base by pedal.
3. Raise squeegee by lever (2)

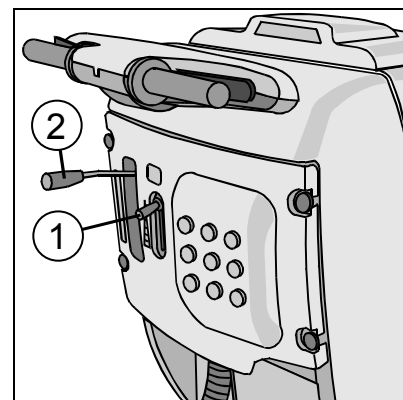


4. Turn off the brush switch (3).
5. Turn off suction motor switch (4).



ATTENTION! If after having switched off the brush switch (3) the display of the battery indicator remains on, this means that, the solution cock is open. Close the water cock through the lever (1) in order to avoid leakage of the detergent solution.

6. Move the machine to the water disposal point.

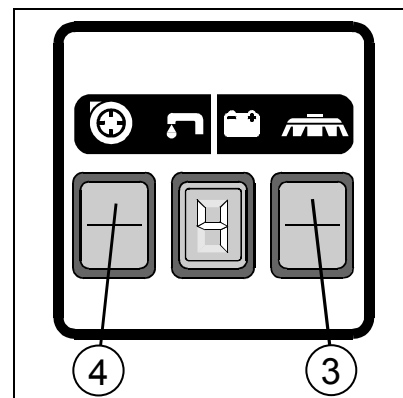


7. Hold the pipe placed on the back of the machine.
8. Remove the outlet cap and empty the tank.



ATTENTION! Always wear gloves during this procedure to avoid any contact with dangerous substances.

9. Disassembly the brush and clean it by a jet of water (for the disassembly of the brush see the following "DISASSEMBLY OF THE BRUSH")

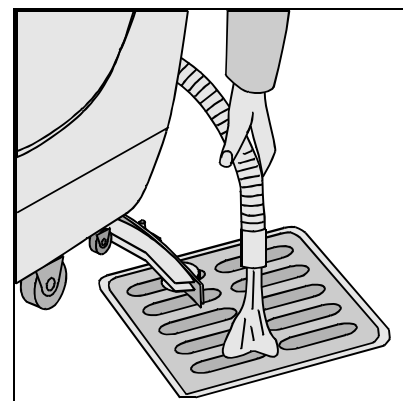


DAILY MAINTENANCE

RECOVERY TANK CLEANING


1. Hold the recovery tank outlet pipe.
2. Remove the outlet cap and empty the tank.



ATTENTION! Always wear gloves during this procedure, to avoid any contact with dangerous substances.

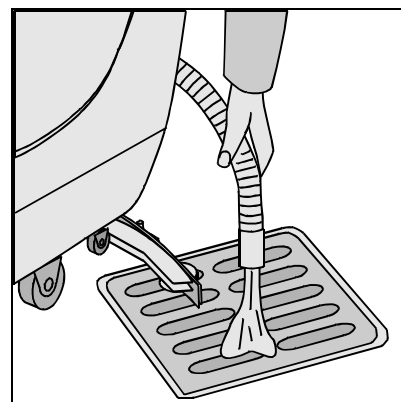


3. Lift the recovery tank lid.
4. Remove the suction cap (1) turning it anticlockwise.
5. Remove the filter and its protection.
6. Rinse the tank with a jet of water.

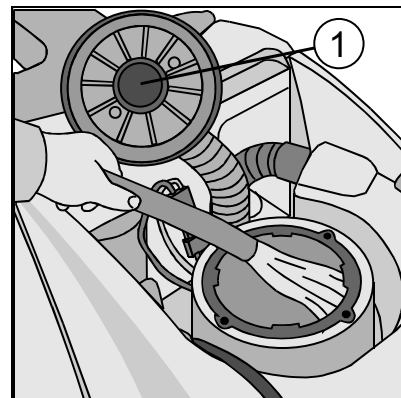

SUCTION FILTER CLEANING


1. Lift the lid.
2. Remove the suction cap turning in anticlockwise.
3. Remove the filter.
4. Clean the filter walls and bottom by a jet of water.
5. Carry out the cleaning procedures very carefully.
6. Reassemble everything.

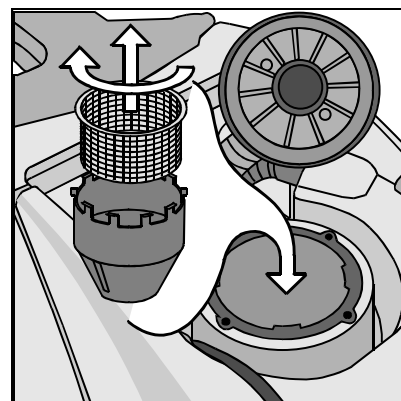

SQUEEGEE CLEANING

The squeegee must be in perfect working condition to achieve a good drying process. Proceed as follows to clean it:

1. Remove the pipe from the squeegee.
2. Loose the knobs (1) shown in picture.
3. Remove the mouth and clean it.
4. Carefully clean the inside of the squeegee.
5. Carefully clean the squeegee rubbers.
6. Reassemble everything.

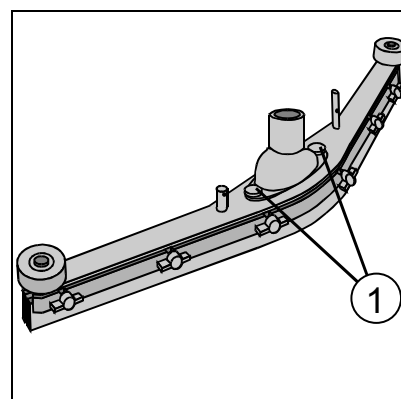


DAILY MAINTENANCE

BRUSHES DISASSEMBLY ABILA 42 52

1. Push lever down to raise the base.
2. Turn key to OFF and remove it from the control panel (1)




WARNING! Removing the brushes with power on may cause injury to the hands.

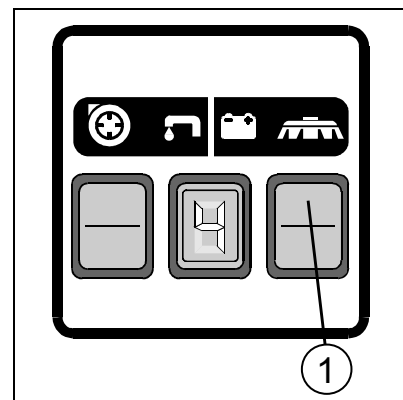

3. Rotate the brush, with base raised, until it exits from the brush-bearing plate as shown in the picture. The picture shows the direction of rotation for releasing the right brush. Rotate in opposite direction for the left brush.




ATTENTION! Make sure that no persons or object are nearby the brush during this operation.

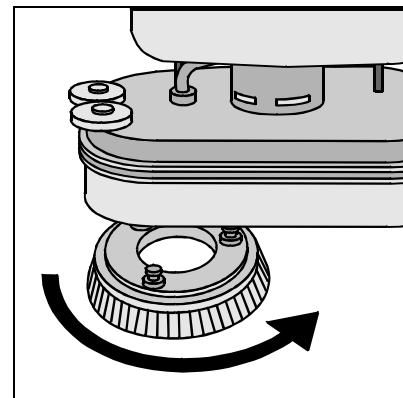

BRUSHES DISASSEMBLY ABILA 17

1. Lift the brush base through the pedal (push down).
2. With brush base in lifted position operate the operator control lever, and the brush will unhook automatically.

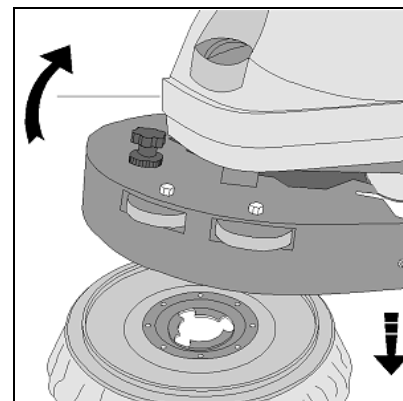


CLEANING SOLUTION FILTER

1. Take off the filter on the solution tank
2. Clean it thoroughly
3. Reassemble everything



ATTENTION! Always wear gloves during this procedure, to avoid any contact with dangerous substances.

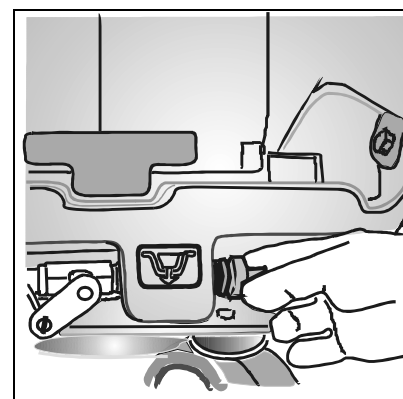

WEEKLY MAINTENANCE


CLEANING SQUEEGEE HOSE

Weekly, or whenever the suction is insufficient, it is necessary to check that the squeegee pipe is not obstructed. Should it be the case, proceed as follows to clean it:

1. Unthread the pipe from the squeegee sleeve.
2. Unthread the other end from the recovery tank.
3. Wash the inside of pipe by a jet of water, from the side it is plug to the tank.
4. To reassemble the pipe repeat the above-mentioned operations.



ATTENTION! Do not wash the pipe connecting the aspirator to the suction cap.

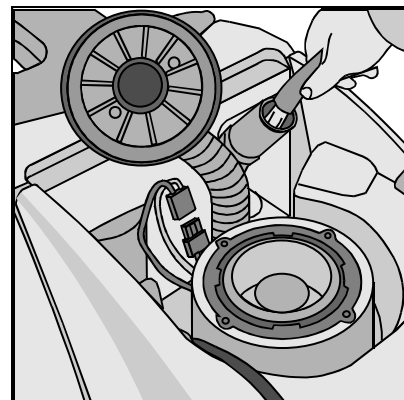


CLEANING SOLUTION TANK

1. Remove the cap from the solution tank.
2. Rinse with a jet of water.
3. Remove the outlet cap (1) and empty the tank




ATTENTION! Always wear gloves during this procedure, to avoid any contact with dangerous substances.

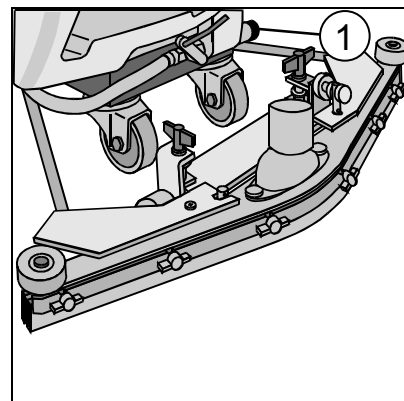

REAR SQUEEGEE RUBBERS REPLACEMENT

Check the squeegee rubbers wear and replace them if necessary.
Proceed as follows


1. Unthread the squeegee pipe from sleeve.
 2. Remove the pin from column.
 3. Remove the squeegee from its support.
 4. Loosen the wing nuts (1) blocking the rubber blades and take them off.
 5. Replace the rubbers
- To reassemble the squeegee repeat the above-mentioned operations.

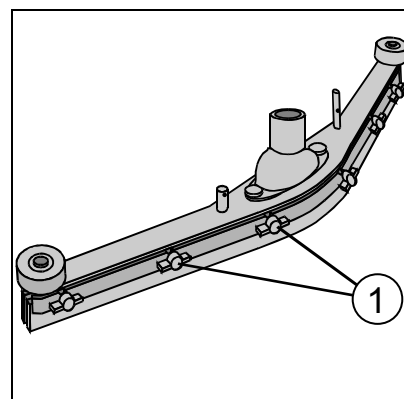

WORKING CONTROL

INSUFFICIENT WATER TO THE BRUSHES

1. Check that the cock (1) is open.
2. Check that there is water in the solution tank.

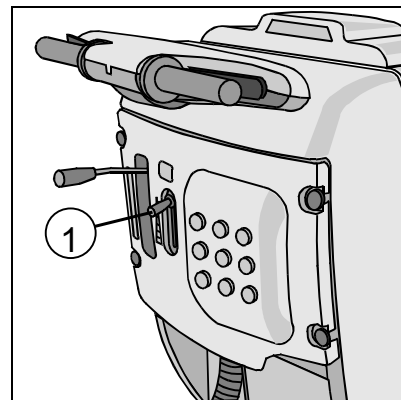

THE MACHINE DOES NOT CLEAN PROPERLY

1. Check the brushes wear and replace them if necessary (the brushes must be replaced when bristles are 15 mm high).
To replace brushes see "BRUSHES DISASSEMBLY" and "BRUSH ASSEMBLY".
2. Use another type of brush rather than the standard brush. We recommend, for cleaning exceptionally difficult dirt floors, the use of special brushes, supplied on request and according to your specific needs (see "CHOICE AND USE OF BRUSHES").

THE SQUEEGEE DOES NOT DRY PERFECTLY

1. Check that the squeegee rubbers are clean
2. Adjust the squeegee inclination (see "SQUEEGEE" in "PREPARING THE MACHINE")
3. Check that the suction pipe is correctly housed in its seat on the recovery tank.
4. Remove the whole suction unit and clean it.
5. Replace the rubbers if worn.
6. Check that the suction motor switch is turn on.
7. Check the wheels regulation.

FOAM OVER-FORMATION

Check that low-foam detergent is used. Add, if necessary, a small quantity of anti-foam liquid to recovery tank.

Please remember that more foam is generated when the floor to be cleaned it is not very dirty. In this case use a more diluted detergent solution.

CHOICE AND USE OF BRUSHES

POLYPROPYLENE BRUSH (PPL)

It is used on all floor types and offers good resistance to wear and to hot water (not over 60°C). PPL is not hygroscopic, then preserves its characteristics even when working on wet floors.

NYLON BRUSH

It is used on all floor types and offers excellent resistance to wear and to hot water (60°C and over). Nylon is hygroscopic and tends, over a period of time, to lose its characteristics when working on wet floors.

ABRASIVE BRUSH

This brush bristles are impregnated with highly aggressive abrasives. This brush is used to clean very dirty floors. We recommend using only the minimum necessary bare pressure to prevent damages to the floor.

BRISTLES THICKNESS

Thicker bristles are stiffer and should be used on smooth floors with narrow joints between tiles.

We recommend using softer bristles when floors are uneven or have deep joints or raised edges. Softer bristles penetrate easier into joints.

Remember that when brush bristles are worn and become too short they become stiffer and are no longer able to penetrate in depth. This is also because, as when using bristles that are too big, the brush tends to jump and skip.

PAD HOLDER

Pad holder is recommended for cleaning polished surfaces.

There are two types of pad holders:

1. Traditional pad holders with set of anchor stubs that retain and drive the abrasive disk during operation.

CENTER LOCK pad holders which, in addition to anchor stubs, also have a plastic snap-in centre lock system. This permits perfect centring of the abrasive disk and ensures it is kept anchored without detaching. This type of pad holder is best for machines with several brushes, where it is difficult to centre the abrasive disks.

LIST FOR THE CHOICE OF THE BRUSHES

Machine	N° Brushes	Code	Bristles type	ØBristles	Ø Brushes	Remarks
ABILA 17	1	66824010	PPL	0.3	420	
		66824020	PPL	0.6	420	
		66824030	PPL	0.9	420	
		66824040	Abrasive	1	420	
		66724010	Pad holder h=40		420	
		66724020	Pad holder h=60		420	
ABILA 42	2	66805020	PPL	0.3	210	Trec System
		66805050	PPL	0.5	210	
		66805060	PPL	0.9	210	
		66805120	Abrasive	1	210	
		66705020	Pad holder		200	
		66724030	Pad holder		200	
ABILA 52	2	66808010	PPL	0.3	255	
		66808040	PPL	0.5	255	
		66808020	PPL	0.9	255	
		66808030	Abrasive	1	255	
		66708010	Pad holder		245	