

Electrical

REF.	CODE	DESCRIPTION
AP1	E87761	Traction Card
AP2	E89524	Brush Delay Control Board
FU1	E87859	Main Fuse FS 28/32
FU4	E86647	Fuse 40A
FU5	E89086	Fuse 10A
FU6	E86825	Fuse 5 amp
FU7	E86825	Fuse 5 amp
FU8	E86825	Fuse 5 amp
FV1	SL23758-1	DIODE
FV2	SL23758-1	DIODE
GB	E86276	BATTERY
H	N/A	HOUR COUNTER
KM1	E87817	Brush Motor Relay FM28/32
KM3	E86420	Relay
M1	E89093	Motor FM28
M2	E89093	Motor FM28
M3	E89478	Vac. Motor
M4	E86787	Traction motor FS28/32
M5	E86996	Actuator
QM1	Internl Part	THERMAL PROTECTION
QM2	Internl Part	THERMAL PROTECTION
QM4	Internl Part	THERMAL PROTECTION
R1	E89122	Resistor
R2	E89433	Resistor

Parts List

REF.	CODE	DESCRIPTION
R3	SL23916	RESISTANCE
RP1	E89153	Potentiometer
S1	E86924	microswitch FS28/32
S2	E86527	Microswitch
S3	E86527	Microswitch
S4	E86527	Microswitch
S5	E86828	Microswitch
S6	SL23599	MICROSWITCH
S7	SL23599	MICROSWITCH
S8	E86828	Microswitch
SB1	E87805	Switch FS28
SB2	E87681	Push button switch
SBF	E86988	Key Switch Complete
VD1	SL23289	DIODE
VD2	E89088	Rectifier
VD3	SL23289	DIODE
VD4	SL23289	DIODE
VD5	E87965	Diode
XC1	E86563	support
XC2	E86563	support
XC3	E86563	support
XC4	SL23414	CLAMP
YV1	E87816	Electrovalve