


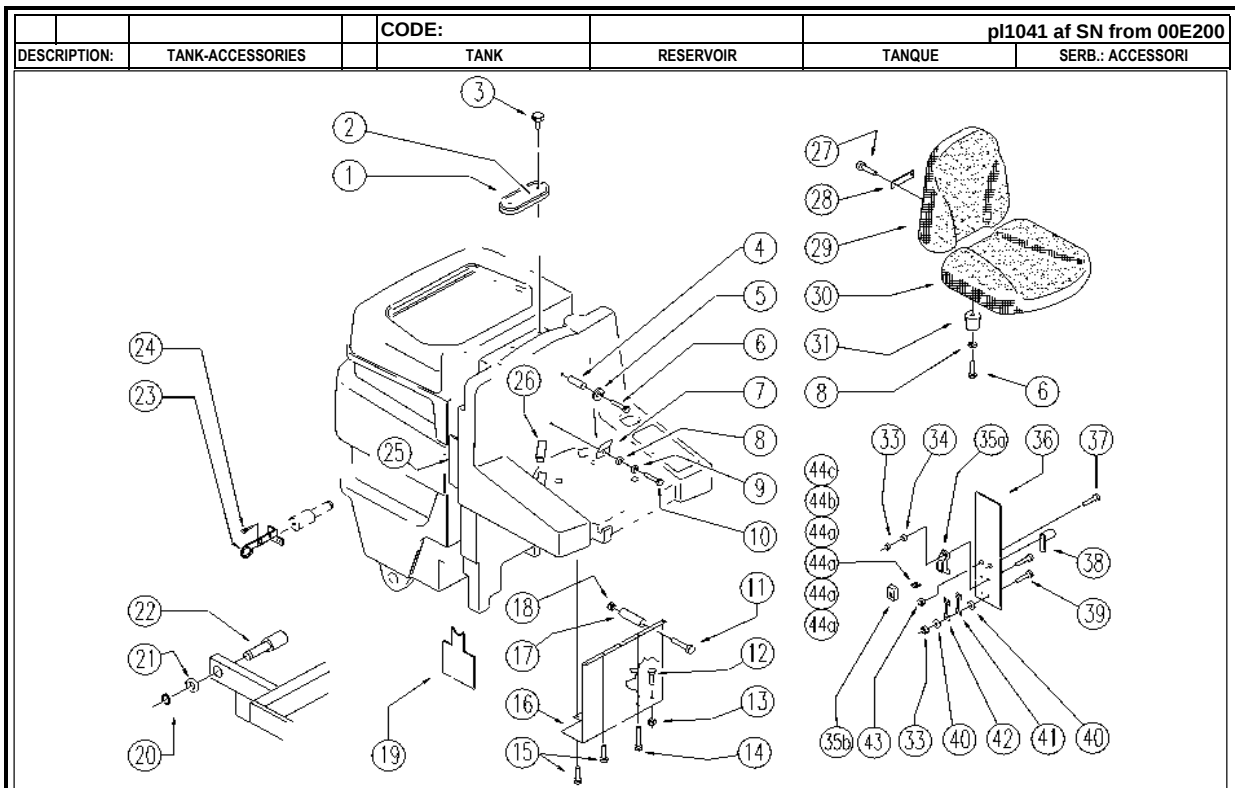

REF.	CODE	DESCRIPTION	QT
1	SL03275	GASKET	1
2	E86974	Sifter Room Cover	1
3	SL20055	HANDWHEEL	2
4	SL07293	SPACER	2
5	E86704	Washer D 6-18	2
6	E86708	Screw TE M 6-35	6
7	SL09540	PLATE	1
8	E86707	Cham Washer D10	4
9	E86700	Cham Washer D6	1
10	SL04180	SCREW	1
11	SL04196	SCREW	1
12	SL04252	SCREW	1
13	E86853	Nyloc Hex Nut, M8	1
14	SL04223	SCREW	2
15	E89276	Screw	7
16	SL09694	PLATE	1
17	SL07337	SPACER	1
18	E86552	nut	1
19	SL17499	PANEL	1
20	SL11108	RING	2
21	SL06080	WASHER	2
22	SL07301	PIN	2
23	SL09962	SUPPORT	1
24	SL04294	SCREW	1
25	SL17395	REINFORCEMENT	1
26	SL14199	TERMINAL	2
27	E86901	AS30/36 Seat Back Screw	1
28	E86902	Seat Anchorage Plate	1
29	SL14191	SEAT BACK	1
30	SL14190	SEAT	1
31	SL03103	PLUG/STOPPER	4
33	SL05012	NUT	4
34	E86750	Washer D5	2
36	SL09901	LID	1
37	SL04161	SCREW	1
38	SL20045	CATCH/LOCK	1
39	E89469	M4 - 15 Screw	4
40	E89118	Washer	4
41	E86836	Fuse 100 amp	1
42	E86643	Fuse 75 amp	1
43	E86875	Self-Locking Nut	1
35a	SL23894	FUSE-HOLDERS	1
35b	SL23893	LID	1
44a	E86825	Fuse 5 amp	4
44b	E86827	Fuse 25 amp	1
44c	E86826	Fuse 15 amp	1