

VACUUM SHOE ASSEMBLY PARTS LIST

Item	SKU	QTY	Description
1	05130	1	ARM, BRUSH HOUSING RIGHT
2	05131	1	ARM, BRUSH HOUSING LEFT
3	E88576	2	BEARING, 1/2 NYLINER SI
4	E87386	2	BUSHING, BRZ FLG.50 X.75 X.75
5	E88571	1	WELDMENT, HEIGHT ADJ ROD
6	E87742	1	KNOB, 1.380D X 3/8-16 X 3.00
7	E87260	1	NUT, 3/8-16 HEX FLG
8	E85358	15	NUT, 1/4-20 HEX NYLOCK
9	E87636	1	NUT, 3/8-16 HEX NYLOCK
10	E87535	1	PLATE, VAC
11	E87537	1	PLATE, VAC TRAP
12	66205	1	PIN, ROLL 3/16 X 1.13
13	66219	2	PIN, COTTER HAIR.059 X 1
14	66231	2	PIN, CLEVIS 1/4 X 1.75
15	67132	3	RING, 1/2 RETAINING HD SH
16	67394	1	ROD, VAC PIVOT
17	70015	4	SCR, 1/4-20 X 3/4 HHCS SS
18	E87253	1	SCR, 3/8-16 X 1.5 CARRIAGE PLTD
19	70634	5	SCR, 1/4-20 X 1.25 CARRIAGE
20	70635	2	SCR, 1/4-20 X 2.0 CARRIAGE
21	70636	2	SCR, 1/4-20 X 2.5 CARRIAGE
22	70637	2	SCR, 1/4-20 X 1.5 CARRIAGE
23	73907	1	SPRING, COMP .5501D X.7200D X.085W
24	E87574	1	VACUUM SHOE, INSERT
25	E87414	15	WASHER, 1/4 X 5/8 FLAT SS
26	87136	4	WASHER, .52 X.88 FLAT
27	87167	1	WASHER, .39 X 1.50 FLAT
28	89051	2	WHEEL, VAC SHOE
29	E87261	1	BRKT, VAC SHOE ADJ. WELDMENT
30	E87442	1	CUFF, BLK VAC HOSE
31	E87443	1	HOSE, 1.5 BLK VAC X 30