

TABLE OF CONTENTS

<i>Machine Data Log/Overview.....</i>	<i>1</i>
<i>Table of Contents.....</i>	<i>2</i>

HOW TO USE THIS MANUAL

<i>How to use this Manual.....</i>	<i>1-1</i>
------------------------------------	------------

SAFETY

<i>Important Safety Instructions</i>	<i>2-1</i>
<i>Hazard Intensity Level.</i>	<i>2-2</i>
<i>Grounding Instructions.....</i>	<i>2-3</i>

OPERATIONS

<i>Technical Specifications.</i>	<i>3-1</i>
<i>Controls/Component Location</i>	<i>3-2</i>
<i>Filling Operation.....</i>	<i>3-5</i>
<i>Operations.</i>	<i>3-6</i>
<i>Cleaning Procedure.</i>	<i>3-8</i>
<i>Accessory Tool Usage.</i>	<i>3-10</i>

MAINTENANCE

<i>Periodic Maintenance.</i>	<i>4-1</i>
<i>Daily/ Regular Maintenance.....</i>	<i>4-1</i>
<i>Vacuum Motor Replacement</i>	<i>4-2</i>
<i>Solution Pump Replacement</i>	<i>4-3</i>
<i>Belt Replacement.....</i>	<i>4-3</i>
<i>Wiring Diagram.</i>	<i>4-4</i>
<i>Machine Troubleshooting.....</i>	<i>4-5</i>

GROUP PARTS LIST

<i>Frame Assembly.</i>	<i>5-1</i>
<i>Brush Assembly.</i>	<i>5-3</i>
<i>Pump Assembly.</i>	<i>5-5</i>
<i>Vacuum Shoe Assembly.....</i>	<i>5-7</i>
<i>Control Panel Assembly.....</i>	<i>5-9</i>
<i>Solution Tank Assembly.</i>	<i>5-11</i>
<i>Recovery Tank Assembly.</i>	<i>5-13</i>
<i>Suggested Spare Parts/Notes</i>	<i>5-15</i>