


TRS17 Pump Prime Quick Start Guide

Follow these 4 easy steps to ensure proper pump priming on the TRS17

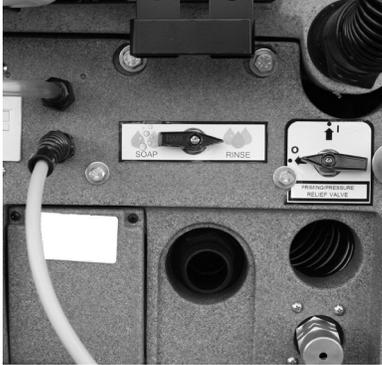

STEP 1:

Make sure you have water in the solution tank in the TRS17. Set the mode selector switch to RINSE and the pressure release valve to PRIME as shown in the photo.




Step 2:

Using the control switches found on the handle of the TRS17, turn on the pump and the vacuum.



Step 3:

Place your hand over the vacuum connection on the TRS17 for about 20 to 30 seconds to help pull the air out of the solution lines. Release the hand from the vacuum connection and move to step 4.

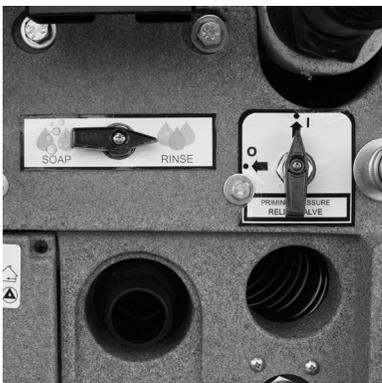

Step 4:

Turn off the pump and the vacuum from the switches on the handle of the TRS17. **VERY IMPORTANT** - move the prime release valve back to the up position or operation mode before you start cleaning. Failure to do this will result in no pressure at the end of the spray gun.