

## **ENGINE**

# **PARTS MANUAL**

P-248 20 hp.

This parts manual applies to the standard Elite horizontal engine as listed in the Engine Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Throughout this manual, left and right sides are determined by facing the oil cooler (front) end of the engine.

Using the MODEL and SPECIFICATION NUMBER from the nameplate, consult the SALES OPTION CODE TABLE in the back of the book to identify factory installed parts that are unique to your engine (\*Note: The diagonal line (/) in the model and specification number separates engine characteristics from the specification number/letter. The specification number denotes customer requested features. The specification letter advances [A to B, B to C, etc] with major manufacturing changes.)

#### **Engine Data Table**

Model/Spec No.	Rating
P216V/	16 Horsepower
P218V/*	18 Horsepower
P220V/*	20 Horsepower
P248V/*	20 Horsepower
OLV18/*	18 Horsepower
OLV20/*	20 Horsepower
LXV770/*	18 Horsepower
LXV790/*	20 Horsepower

Adapter, Breather, 6
Adapter, LP Gas, 19
Adapter, Oil Filter, 29
Arm, Governor, 10
Arm, Governor Control, 15

Baffle, Oil Cooler, 12 Ball, Governor, 7

Ball, Governor Shaft Bearing, 10

Base, Oil, 12

Bearing, Camshaft, 6

Bearing, Governor Shaft, 10 Bearing, Lower Crankshaft, 12 Bearing, Oil Bypass Ball, 12

Bearing, Upper Crankshaft, 6

Block, Cylinder, 6

Bracket, Breather Mounting, 6 Bracket, Choke Cable, 21, 22 Bracket, Governor Mounting, 15

Bracket, Lifting, 9
Bracket, Support, 30

Bushing, Governor Control, 15

Cable, Spark Plug, 28

Camshaft, 7

Cap, Fuel Fitting (Fuel Pump Outlet), 14

Cap, Solenoid, 27 Cap, Valve, 6 Capacitor, 14 Carburetor, 18

Carburetor, Gasoline, 17

Carburetor, LP, 19 Cleaner, Air, 25

Clip, Air Cylinder Wire, 15 Clip, Control Rod, 17, 19

Clip, Governor Shaft Retaining, 10 Clip, Spark Plug Cable Wire, 15

Clip, Wire, 28 Coil, Ignition, 14

Components, Carburetor, 18

Components, Starter (191–1808–06), 26 Components, Starter (191–1949–06), 27

Control, Ignition, 10
Cooler, Oil, 12
Cover, Element, 25
Cover, Oil Base, 12
Cover, Valve Box, 6

Cover, Voltage Regulator, 15

Crankshaft, 8 Cup, Governor, 7 Cup, Oil Pickup, 12

Definitions, Sales Option Code, 37

Drain, Oil, 29

Elbow, Brass, 20

Elbow, LOPKO Street, 29

Elbow, Pipe, 12

Elbow, Street, 12 Element, Air Cleaner, 25

Fill, Oil, 30 Filter, Fuel, 23, 24 Filter, Oil, 29 Filter, Precleaner, 16 Flywheel, 9

Gasket, Carburetor Mounting, 17, 19 Gasket, Cover Plate, 6 Gasket, Cylinder Head, 6 Gasket, Exhaust Manifold, 31 Gasket, Gearcase Mounting, 10 Gasket, Intake Manifold, 19 Gasket, Manifold, 17 Gasket, Muffler, 32 Gasket, Oil Base, 12 Gasket, Oil Cooler, 12 Gasket, Oil Filter Adapter, 29 Gasket, Valve Cover, 6 Gear, Camshaft, 7 Gear, Crankshaft, 8 Gear, Ring, 9 Gearcase, 10 Guard, Muffler, 31 Guard, Stationary, 14

Harness, Engine Wiring, 34
Head, Cylinder, 6
Hood, Air Cleaner, 25
Hose, Breather, 6
Hose, Fuel, 23, 24
Hose, Fuel Pump Pulse Line, 14

Guide, Valve, 6

Hose, LP Regulator, 20
Housing, Air Cylinder, 15
Housing, Blower, 14
Hub, Governor Cup, 7

Ignition, Electronic, 28 Indicator, Oil Level, 30 Insulator, Ignition Control, 10

Jet, Fixed Power, 18 Jet, Idle, 18 Jet, Power, 18

Key, Camshaft Gear, 7 Key, Crankshaft Gear, 8 Key, Flywheel, 9

Key, Woodruff, 8

Kit, Accelerator Pump Repair, 17 Kit, Altitude Jet, 17

Kit, Carburetor, 19 Kit, Carburetor Repair, 18 Kit, Catalyst Muffler, 31 Kit, Choke Lever, 18 Kit, Choke Shaft, 18

Kit, Float, 18

Kit, Float and Gaskets Repair, 17

Kit, Front Pull Choke, 22

Kit, Fuel Shutoff Solenoid, 17

Kit. Gasket, 35

Kit, Gearcase, 10

Kit, Muffler, 32

Kit, Piston, 6

Kit, Piston Ring, 6

Kit, Starter Bracket Mounting, 27

Kit, Starter Brush, 27

Kit, Starter Brush Holder Assy, 26

Kit, Starter Bushing, 26, 27

Kit, Starter Clutch, 26

Kit, Starter Drive, 27

Kit, Starter Dust Seal, 27

Kit, Starter Hardware, 26, 27

Kit, Starter Shift Lever, 26, 27

Kit, Starter Solenoid, 26, 27

Kit, Throttle Shaft, 18

Knob, Air Cleaner Cover, 25

Labels, 35

Lever, Choke, 22

Line, Fuel, 23, 24

Line, Oil Transfer, 6

Link, Choke, 22

Linkage, Choke (Front Pull), 21

Linkage, Choke (Rear Pull), 22

Lock, Valve Spring, 6

Manifold, Gasoline Intake, 17

Manifold, LPG Intake, 19

Muffler, 31, 32

Nameplate, Stationary Guard, 14

Nipple, Pipe, 12

O'Ring, Oil Fill, 30

Paint, 35

Pan, Air Cleaner, 25

Pin, Alignment Dowel, 6

Pin, Camshaft Center, 7

Pin, Choke Cotter, 22

Pin, Drive, 6

Pin, Governor Dowel, 10

Pin, Piston, 6

Plate, Ignition Plunger Cover, 6

Platform, Muffler Guard, 31

Plug, 31

Plug, Breather Hole, 6

Plug, Camshaft Expansion, 6

Plug, Core Hole, 6

Plug, Dowel Pin, 6

Plug, Fuel Pump Hole, 14

Plug, Oil Base Pipe, 12

Plug, Oil Drain Hex Pipe, 12

Plug, Oil Filter Adapter Pipe, 29

Plug, Spark, 28

Probe, CO Exhaust, 33

Pump, Fuel, 14

Pump, Oil, 6

Rectifier, Silicon, 34

Regulator, LP, 20

Regulator, Voltage, 15

Retainer, Valve Spring, 6

Ring, Camshaft Retaining, 7

Ring, Crankshaft Retaining, 8

Ring, Oil Base Retaining, 12

Ring, Piston Retaining, 6

Rod, Connecting, 6

Rod, Governor Control, 17, 19

Rotor, Ignition, 28

Sales Option Code Definitions, 37

Sales Option Code Table, 36

Screen, Air Inlet, 9

Seal, Governor Shaft Oil, 10

Seal, Intake Valve, 6

Seal, Lower Crankshaft Oil, 12

Seal, O'Ring, 12

Seal, Oil Base, 12

Seal, Oil Drain, 29

Seal, Oil Fill Tube, 30

Seal, Starter Dust, 26

Seal, Upper Crankshaft Oil, 10

Sealant, Thread, 35

Seat, Valve, 6

Sensor, Oxygen, 31

Shaft, Governor, 10

Shim, Crankshaft End Play, 6

Shim, Muffler Balancer, 31

Solenoid, Fuel Cutoff, 18

Spacer, Air Cleaner Cover, 25

Spring, Bypass Valve, 6

Spring, Governor Idle, 15

Spring, Governor Return, 15

Spring, Governor Rod, 17, 19

Spring, Oil Bypass, 12

Spring, Oil Pickup Tube, 12

Spring, Valve, 6

Starter (191-1808-06), 26

Starter (191-1949-06), 27

Stator, 10

Stud, Gearcover Mounting, 10

Support, Air Cleaner Hood, 25

Support, Precleaner, 16

Switch, Low Oil Pressure, 29

Swivel, Choke Lever, 22

Table, Sales Option Code, 36

Tappet, Valve, 6

Tube, Breather, 6, 25

Tube, Exhaust, 33


Tube, Fuel Pump Vacuum, 6
Tube, Oil Fill, 30
Tube, Oil Pickup, 12

Valve, Exhaust, 6 Valve, Fuel Shutoff, 20 Valve, Intake, 6 Valve, Oil Drain, 12

Wrapper, Element, 25


Yoke, Governor Shaft, 10

#### **Cylinder Block**

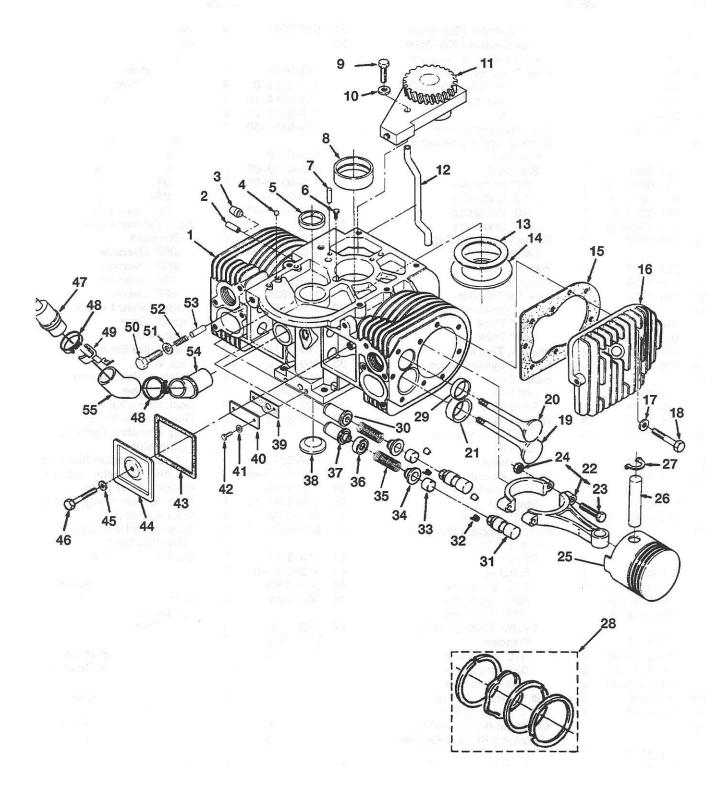


### Cylinder Block


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	-	1	Block, Cylinder (See Short Block Catalog #932–0109)	27 28	518-0311	4	Ring, Retaining Kit, Piston Ring
2	149-1299	1	Tube, Fuel Pump Vacuum	99			Specs A-C
3	517-0120	1	Plug, Breather Hole		113-0314	2	Standard
4	517-0067	1	Plug, Core Hole (.258" OD)		113-0314-05	2	.005" Oversize
5	101-0405	2	Bearing, Camshaft		113-0314-10	2	.010" Oversize
6	516-0072	2	Pin, Drive		113-0314-20	2	.020" Oversize
7	516-0141	2	Pin, Alignment Dowel		113-0314-30	2	.030" Oversize
8	010 0141	_	Bearing, Upper Crankshaft			-	Begin Spec D
U			(Flanged)		113-0310	2	Standard
	101-0805	1	Standard		113-0310-05	2	.005" Oversize
	101-0805-02	1	.002" Undersize		113-0310-01	2	.010" Oversize
	101-0805-02		.010" Undersize		113-0310-02	2	.020" Oversize
	101-0805-10		.020" Undersize		113-0310-02	2	.030" Oversize
				29	110-0310-03	_	Seat, Exhaust Valve
0	101-0805-30		.030" Undersize	29	110-1824	2	Standard
9	800–0007	2	Screw, Hex Head Cap		110-1824-02	2	
40	740 4004	•	(1/4–20 x 1")			2	.002" Oversize
10	740–1004	2	Washer, Flat (M6)		110-1824-05	2	.005" Oversize
11	120-1209	1	Pump, Oil		110-1824-10	2	.010" Oversize
12	120-1320	1	Line, Oil Transfer	- 00	110-1824-25	2	.025" Oversize
13	Marin Art	1.1	Shim, Crankshaft End Play	30	110–3527	2	Guide, Exhaust Valve
	104–0776	AR	.005" Thick	31	115-0006	4	Tappet, Valve
W 80	104-0776-01	AR	.003" Thick	400			Standard
14	104-0575	2	Washer, Thrust	32	110–3511	8	Lock, Valve Spring
15	110-3181	2	Gasket, Cylinder Head	33	110–3510	4	Cap, Valve
16			Head, Cylinder	34	110-3487	4	Retainer, Valve Spring
	110-3508	1	Left Side	35	110-3485	4	Spring, Valve
	110-3509	1	Right Side	36	509-0289	2	Seal, Intake Valve
17	526-0122	18	Washer, Flat (5/16")	37	110–3526	2	Guide, Intake Valve
18	800–0571	18	Screw, Hex Head Cap (Special)	38			Plug, Camshaft Opening Expansion
19	110-3479	2	Valve, Intake		517-0048-01	1	1.625" Diameter Standard
20	110-3480	2	Valve, Exhaust		517-0048-40	1	1.665" Diameter Oversize
21			Seat, Intake Valve	39	160-1368	1	Gasket, Cover Plate
	110-0197	2	Standard	40	160-1345-01	1	Plate, Ignition Plunger Cover
	110-0197-10	2	.010" Oversize	41	740-1004	2	Washer, Flat (M6)
22			Rod, Connecting (Includes Nuts and Bolts)	42	800–0004	2	Screw, Hex Head Cap (1/4-20 x 5/8")
			P216V	43	110-3709	2	Gasket, Valve Cover
	114-0394	2	Standard	44	110-3637-01	2	Cover, Valve Box
	114-0394-10	2	.010" Undersize	45	526-0063	2	Washer, Copper Flat (1/4")
	114-0394-20	2	.020" Undersize	46	800-0009	2	Screw, Hex Head Cap
	114-0394-30	2	.030" Undersize				(1/4-20 x 1-3/4")
			P218V, P220V, P248V	47	123-1784	1	Tube, Breather
	114-0397	2	Standard	48	503-1673	2	Clamp, Hose
	114-0397-10	2	.010" Undersize	49	123-1838	1	Bracket, Breather Mounting
	114-0397-20		.020" Undersize				(Use with Plastic Breather
	114-0397-30		.030" Undersize				Tube)
23	114-0392	4	Bolt, Connecting Rod	50	801-0049	1	Screw, Hex Head Cap
24	870-0533	4	Nut, Connecting Rod				(3/8–24 x 7/8")
25	0,0 0000	1.11	Kit, Piston (Includes Pin,	51	526-0066	1	Washer, Copper Flat (3/8")
20			Retaining Rings & Ring Set)	52	120-0140	i	Spring, Bypass Valve
	112-0264	2	Standard	53	516-0230	i	Plug, Dowel Pin
	112-0264-05	2	.005" Oversize	54	123-1834	i	Adapter, Breather
	112-0264-01	2	.010" Oversize	55	503–1646	i	Hose, Breather
			.020" Oversize	33	000-1040	31.5	11036, Dieather
	112-0264-02 112-0264-03		.030" Oversize				
26	112-0264-03	2	Pin, Piston				
20	112-0229	2	гш, <b>г</b> ібілі				

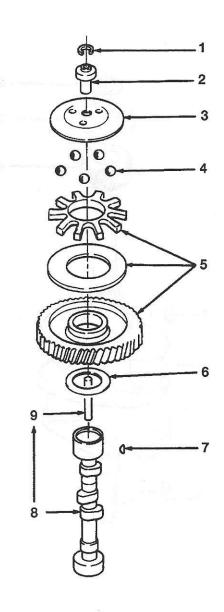


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-0078	nzánr <b>1</b> 0 o	Ring, Retaining	7	515-0001	a art over	Key, Camshaft Gear
2	150-1519	1 1	Hub, Governor Cup	8			Camshaft Assy (Includes
3	150-1520	Tumber 78	Cup, Governor				Center Pin)
4	510-0015	5	Ball, Governor		105-0637	1 1	P216V, P218V
5	105-0700	1	Gear Assy (Includes Spacer		105-0639	580 1 oc	P220V, P248V
			and Plate)	9	150-0075	1	Pin, Center
6	105-0541	1	Washer, Thrust				Will spraint. Numeropeansabastical

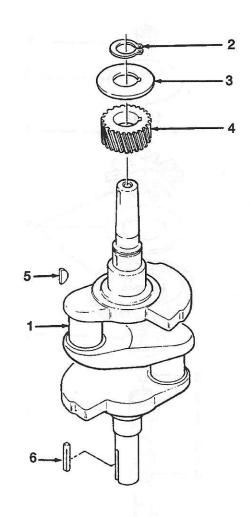


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Crankshaft (Code 45DV)	4	104-0032	omo 16. s	Gear, Crankshaft
	104-1707	en <b>H</b> ales	P216V	5	515-0001	1.0	Key, Crankshat Gear
	104-1708	tai neim	P218V, P220V, P248V	6	515-0103	See 1 1	Key, Woodruff (1/4 x 1/4 x
2	518-0014	100	Ring, Retaining				(Code 45BW)
3	104-0043	1	Washer, Gear Retaining				

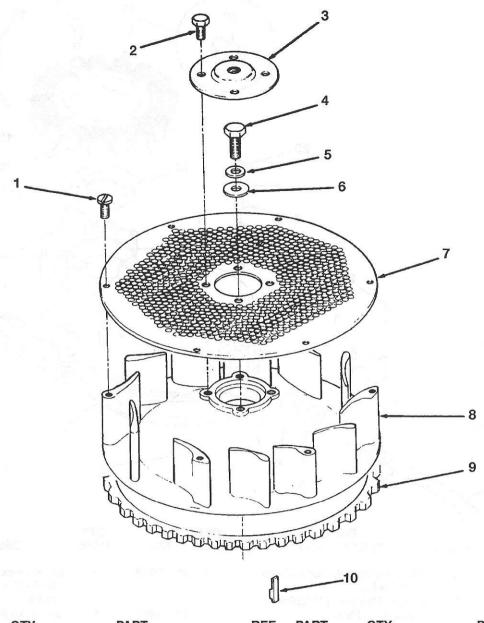


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION		
1	815-0687	6	Screw, Locking Head Flange	6	526-0017	1	Washer, Flat (7/16")		
			Torx Drive (#10-24 x 3/8")	7	134-4553-50	1	Screen, Air Inlet		
2	821-0014	4	Screw, Self-Locking Hex	8			Flywheel (Includes Ring Gea		
			Washer Head (5/16-18 x 1/2")		134-4633	1	Code 31AZ, 31BD		
3	403-2860-01	- No 1 at 1	Bracket, Lifting		134-4633-02	1	Code 31BN		
4	104-0170	1	Screw, Hex Head Cap	9	104-0779	1	Gear, Ring		
			(Special)	10	515-0284	1	Key, Flywheel		
5	526-0356	1	Washer Flat (7/16")						

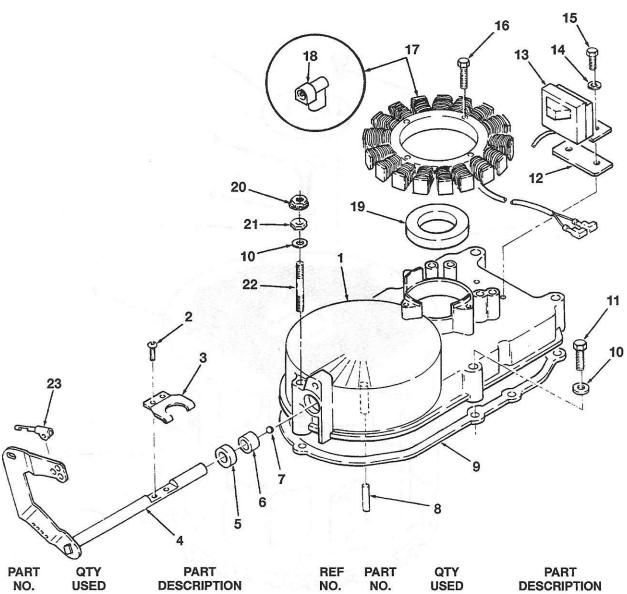

			<u> </u>				
REF		QTY	PART	REF		QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	103-0806	1	Kit, Gearcase (Includes Parts Marked +)	16	815–0659	3	Screw, Hex Head Machine (#10-32 x 1") Code 31AZ,
2	815-0046	2	+Screw, Pan Head Machine	1975			31BN
			(#8-32 x 3/8")	17	191–1456	1	Stator, 20 Amp (Includes
3	150-1187	_ 1	+Yoke, Governor Shaft				Terminals) Code 31AZ, 31BN
4	150-2265	1	+Shaft and Arm, Governor	18	332-2572	2	Terminal, Stator Leads (90°)
5	509-0008	1	+Seal, Governor Shaft Oil	19	509-0040	1	+Seal, Upper Crankshaft Oil
6	510-0105	1	+Bearing, Governor Shaft	20	870-0399	1	Nut, Self-Locking (Flange)
7	510-0014	1	+Ball, Governor Shaft Bearing				(5/16–18)
8	516-0130	1	+Pin, Governor Cup Stop Dowel	21	862-0015	1	Nut, Hex (5/16-18)
9	103-0810	1	Gasket, Gearcase Mounting	22	520-0933	1	Stud, Mounting
10	526-0065	5	Washer, Copper Flat (5/16")	23	518-0004	1	Clip, Retaining (Control Rod
11	800-0032-01	4	Screw, Hex Head Cap (5/16–18 x 1–3/4")				to Governor Shaft)
12	166-0786	1	+Insulator, Ignition Control				
13	166-0785	1	+Control, Ignition	+ - F	Parts Included	in Gear	case Kit.
14	854-0010	2	+Washer, IT Lock (#10)				
15	815-0340	2	+Screw, Hex Washer Head Thread Forming (#10-32 x 3/8")				

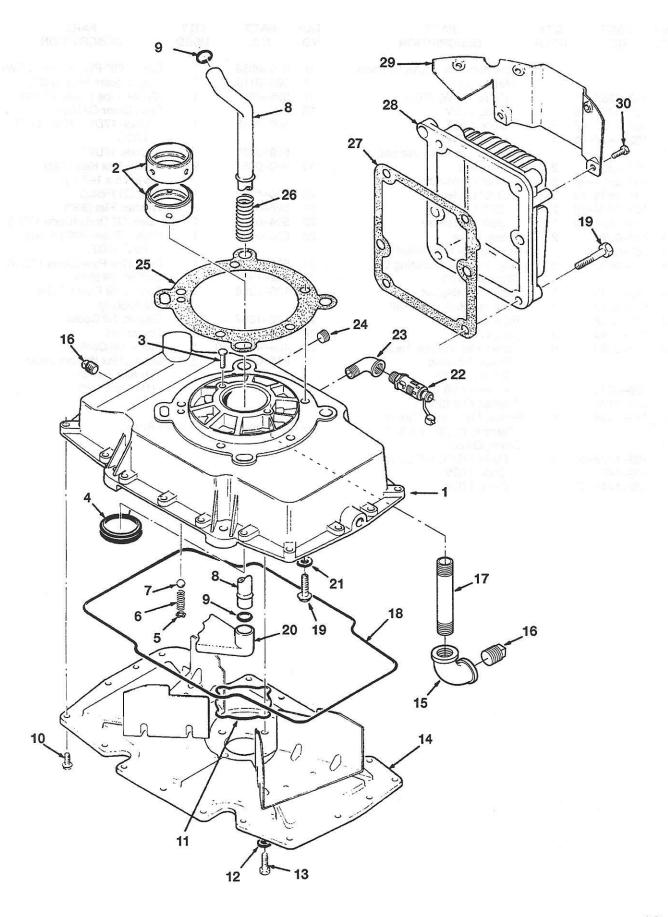

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Base Assy, Oil (Includes Parts	15	505-0039	1	Elbow, 90° Pipe (Code 17DW)
			Marked +)	16	505-0110	3	Plug, Square Head (3/8")
	102-1352-01	1	Code 17BW, 17CG	17	505-0240	1	NIpple, Pipe (Code 17DW)
	102-1352-06	1	Code 17DV	18			Seal, Outer Oil Base
	102-1352-07	1	Code 17DT		509-0245	1	Code 17DV, 17BW, 17DT,
	102-1470-01	1	Code 17DW				17CG
2			Bearing, Lower Crankshaft		509-0338	1	Code 17DW
	101-0804	2	+ Standard	19	800-0053	9	Screw, Hex Head Cap
	101-0804-02	2	.002" Undersize				(3/8-16 x 1-3/4")
	101-0804-10	2	.010" Undersize	20	120-1213	1	Cup, Oil Pickup
	101-0804-20	2	.020" Undersize	21	526-0250	5	Washer, Flat (3/8")
	101-0804-30	2	.030" Undersize	22	504-0186	1	Valve, Oil Drain (Code 17DT)
3	516-0072	2	+Screw, Drive	23	505-0120	1	Elbow, Street (3/8") (Code
4	509-0239	1	+Seal, Lower Crankshaft Oil				17DV, 17DT)
5	518-0560	1	+Ring, Internal Retaining Oil	24	505-1516-03	1	Plug, Hex Pipe (Code 17DW)
			Bypass (3/8")	25	102-1381	1	Gasket, Oil Base
6	120-0140	1	+Spring, Oil Bypass	26	120-1208	1 🤿	Spring, Oil Pickup Tube
7	510-0043	1	+Bearing, Oil Bypass Ball				Tensioning
8	120-1202	1	Tube, Oil Pickup	27	102-1387	1	Gasket, Oil Cooler
9	509-0240	2	Seal, O'Ring	28	110-3605	1 -	Cooler, Oil
10	815-0290	19	Screw, Hex Washer Head	29	134-4794-50	_1	Baffle, Oil Cooler
			Thread Forming	30	815-0261	2	Screw, Hex Washer Head
	•		(1/4-20 x 5/8")				Thread Forming
11	509-0244	1	Seal, Inner Oil Base				(1/4-20 x 1/2")
12	526-0174	4	Washer, Flat (5/16")				
13	815-0508	4	Screw, Hex Head Thread		Santa Inglindad!	- O'I D-	
			Forming (5/16–18 x 3/4")	+-1	Parts Included i	n Oil Ba	se Assy.
14			Cover, Oil Base				
	102-1378-01	1	Code 17BW, 17CG, 17DT				
	102-1477	1	Code 17DV				
	102-1475-02	1	Code 17DW				

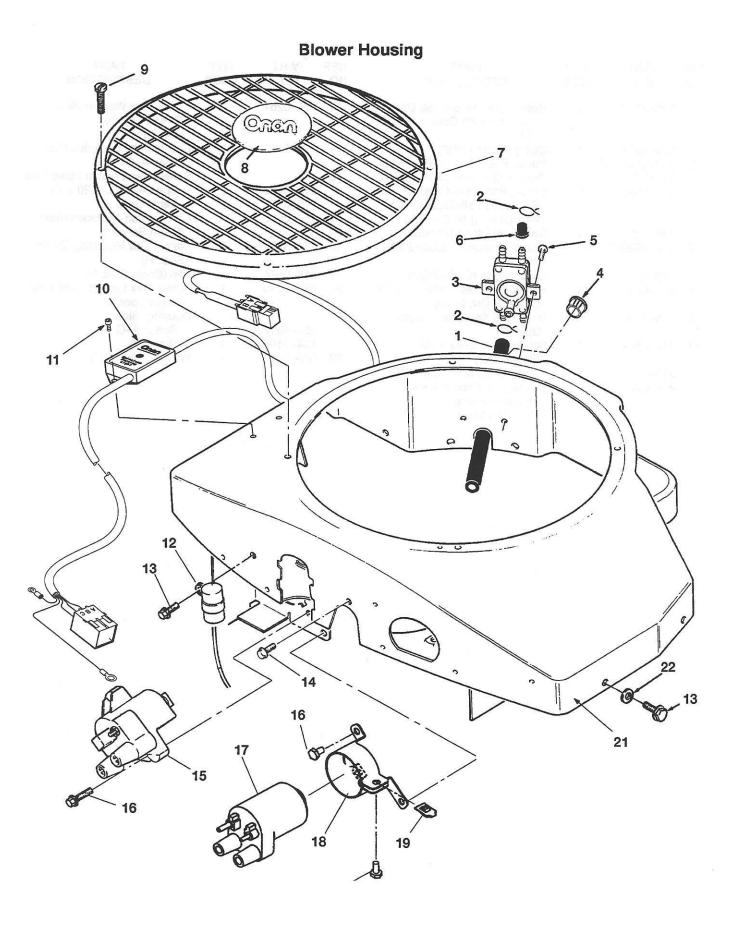

**Blower Housing** 

				1000	9		
REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0707	1	Hose, Fuel Pump Pulse Line (1/4" ID x 9.7") Code 15BL, 15AZ	14	815–0261	2	Screw, Hex Washer Head Thread Forming (1/4–20 x 1/2")
2	503-0301	4	Clamp, Hose (7/16")	15	166-0761	1	Coil, Ignition (Includes Nuts)
3	149-2187-03	1	Pump, Fuel (Code 15BL, 15AZ)				(Spec A-G)
4	517-0136	1	Plug, Hole (Code 15BB, 15BC)	16			Screw, Hex Washer Head Cap
5	815-0555	2	Screw, Pan Head Cross		815-0650	2	Spec A-G (1/4-20 x 1")
			Recessed Self-Tapping with		815-0261	2	Begin Spec H
			Wax Coating (#10-24 x 5/8")	17	166-0820	1	Coil, Ignition (Includes Nuts)
6	149-1321	- 1	Cap, Fuel Fitting (Outlet)				(Begin Spec H)
7	134-4689-01	1	Guard, Stationary (Code 23DN, 23EJ)	18	134–5129–02	1	Clamp, Coil Mounting (Begin Spec H)
8	099-2393	1	Logo, Name (Code 23DN)	19	518-0574	1	Clip (Begin Spec H)
9	815-0721	4	Screw, Pan Head (#10-32 x 1") (Code 23DN, 23EJ)	20	821-0010	1	Screw, Hex Lock (1/4–20 x 1/2") (Begin Spec H)
10	148-1116	1	Unit, Auto Shutdown (Begin	21			Housing, Blower
			Spec H)		134-4917-02	1	Specs A-G
11	815-0844	2	Screw, Torx (8-32 x 1/2")		134-5180-03	1	(Spec H)
			(Begin Spec H)	22	526-0018	4	Washer, Flat (1/4")
12	312-0256	1-	Capacitor (.3 MFD, 300 VDC)				
13	815–0290	4	Screw, Hex Washer Head Thread Forming (1/4–20 x 5/8")				