

12.0.2 Fuel tank installation


Contents	Page
----------	------

Disassembling and assembling the fuel tank	2-4
--	-----

12.0.2 Fuel tank installation

Disassembling and assembling the fuel tank (diesel tank):

- Pump out the fuel tank.
- Disconnect the connector of the fuel level sensor.
- Unscrew the two retaining bolts from the fuel tank.
- Disconnect the three fuel lines.
- Disassemble the tank.

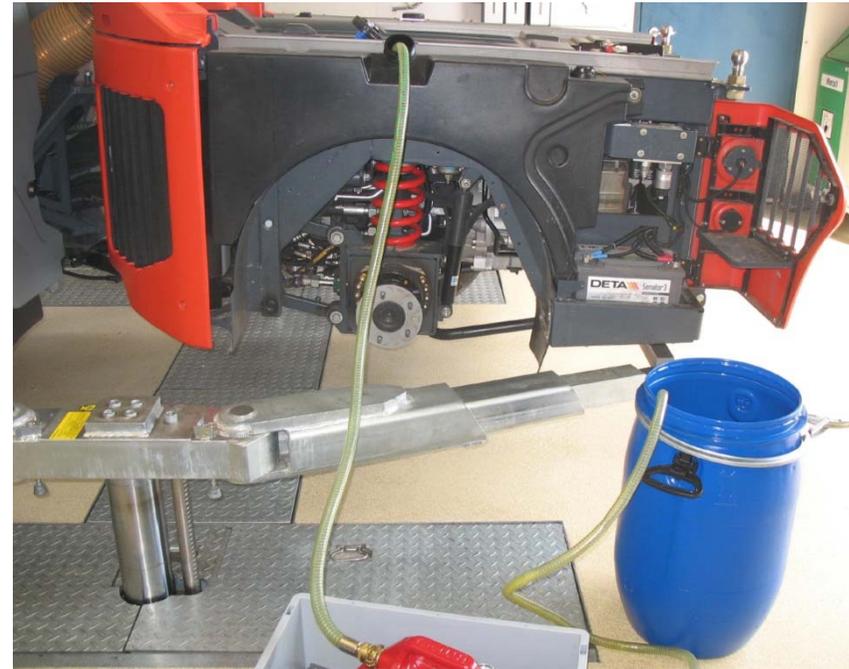

12.0.2 Fuel tank installation



The arrows indicate the position of the three fuel hoses.



12.0.2 Fuel tank installation

**Disassembled tank from the rear:
The arrows indicate the position of the three fuel
hoses.**

Assembly is in reverse order.

