



F1 - 5A, switched
12 Volt

F3 - 15A, relay
fused power, to
coils, alternator etc

F2 - 20A,
Battery to
ECU

MAXI Fuse
50A, Battery
12 V to engine
harness

Starter Relay

Power Relay