

ITEM	SKU	Description	QTY
01	E83989	Switch	3
03	E82486	Rocker Switch	1
03A	E88305	Cover, Black	1
04	E88441	Control Panel Cover, Upper	1
05	E82493	Grips, Handle	2
06	E82782	Washer	2
07	E85751	Trigger Lever	1
08	400648	PLAQUE	2
09	E82304	Spring	1
10	E81653	Shaft	1
11	E82284	Lever	1
12	E82270	Micro Switch	1
13	203297	SUPPORT	1
14	409370	SPRING PIN	1
15	400662	PLAQUE	1
16	400663	PLAQUE	1
17	206818	SPECIAL SCREW	2
18	E81704	Gasket	5
19	206196	PIPE	1
20	409815	FAIRLEAD	1
21	210310	HANDLE BAR BODY	1
22	E82603	Battery check card	1
23	E83316	Key Switch	1
24	E83173	Contact, Key Switch	1
25	E83315	Switch Key	1
26	404990	DECAL	1
26A	404991	DECAL	1
27	E81358	Switch Flange	1
28	E82351	Key Switch Assembly w/Keys	1
29	E83175	battery level display	1
30	E83157	battery indicator card	1
50	E81673	Hex Nyloc Nut, M3 Zinc	5
51	408639	SCREW	4
52	409034	NUT	2
53	408834	SCREW	4
54	E88362	Screw M5 x 30	8
55	408334	LOCK WASHER	2