



- Remove the cladding parts at the rear right.
- Empty the fuel tank completely.
- Remove the circulating water hose.
- Remove the sheet metal of the fuel filling nozzle and air intake nozzle.

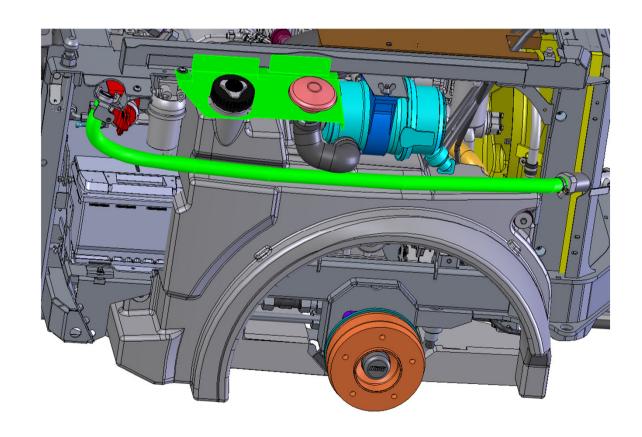

00.00.0001 - DP




Remove the plug-in connection of the fuel level sensor.

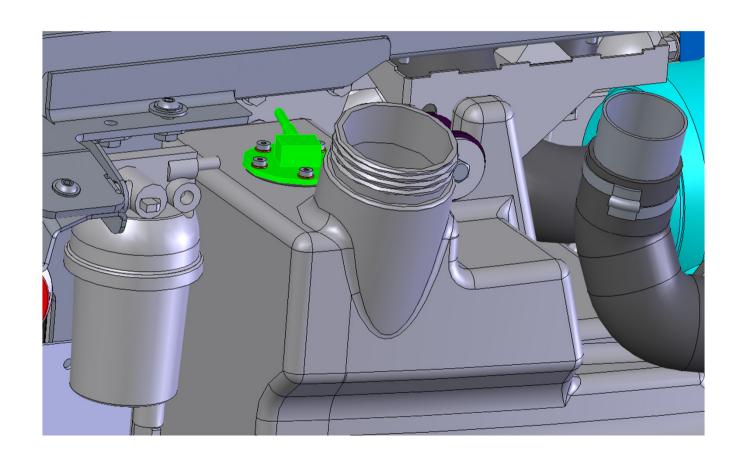

00.00.0001 – DP




Remove the fuel tank fastening screws and pull out the fuel tank a little.

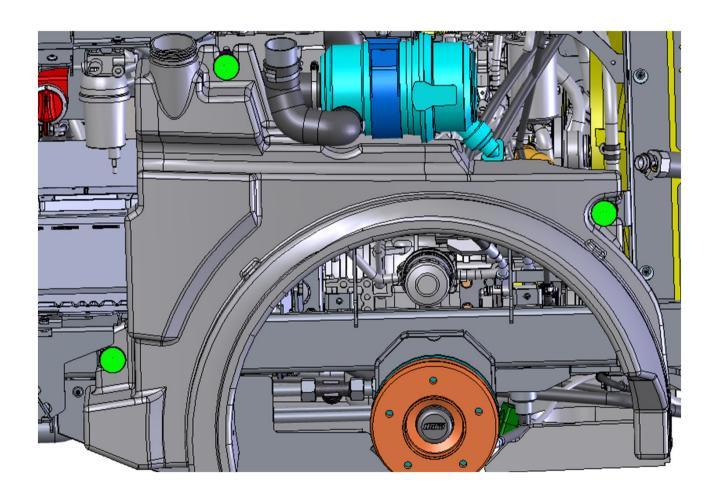

00.00.0001 - DP




Remove the fuel lines 3x on the back of the fuel tank.

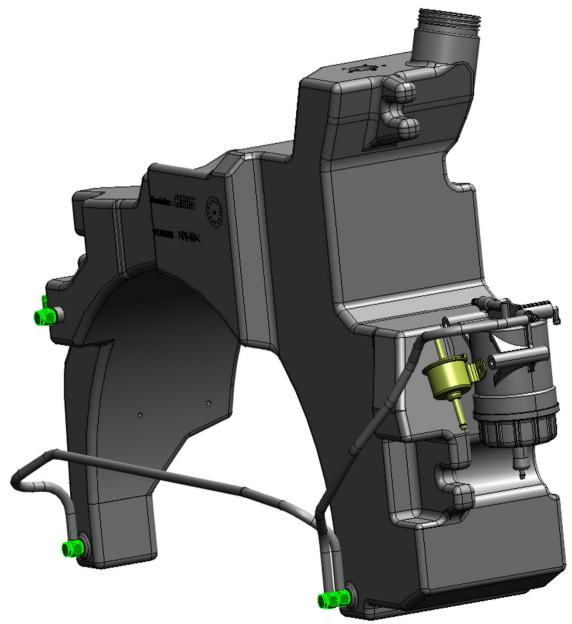



Now the fuel tank can be completely removed.

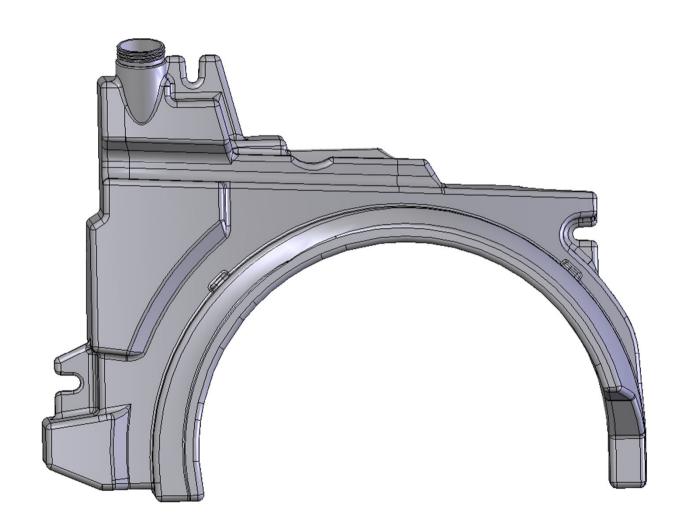

00.00.0001 – DP