

Quick Guide Filon Futur S

Minuteman Models 957937, 957938 and 957939



1. General

Up to eight charging characteristics are programmed in the charger. A switch is used to select a characteristic. LEDs display the selected characteristic(s).

2. LED Display

The different information supplied by the display is described below.

Charging mode:

| | LED Display | | | |
|-----------------------------------|-------------|------|------|--|
| Charging Mode | 0000 | 0000 | 0000 | |
| Primary charging | X | | | |
| Secondary charging | | Х | | |
| Charging end / charge maintenance | | | Х | |

Error messages:

| | LED Display | | | | |
|--------------------|-------------|------|------|------|--|
| Error Message | •000 | •000 | •000 | ••00 | |
| Battery is missing | Х | | | | |
| Time error | | X | | | |
| Hardware error | | | X | | |
| Temperature error | | | | X | |

Program selection mode: Checking and setting the charging characteristics.

The current setting is indicated with a higher flashing frequency.

See section 3. or 4. for details.

| | LED Display | | | | | | | |
|-----------------------------------------------------------|-------------|-----|------|------|------|-----|-----|-----|
| Charging Characteristics Program (flashing LEDs) | •000 | 000 | 0000 | 0000 | ••00 | 000 | 000 | 000 |
| Program 0 | Х | | | | | | | |
| Program 1 | | Х | | | | | | |
| Program 2 | | | Х | | | | | |
| Program 3 | | | | Х | | | | |
| Program 4 | | | | | Х | | | |
| Program 5 | | | | | | Х | | |
| Program 6 | | | | | | | Х | |
| Program 7 | | | | | | | | Χ |

See the charging characteristics table for settings of the individual programs.



Minuteman Models 957937, 957938 and 957939



3. Switch

The switch has different functions depending on the operating status of the charger.

- Switching charger ON/OFF.
- Setting pause mode.
- Program selection mode. Checking / setting the charging characteristics.

a) Charger is switched on

Switch < 1 sec PAUSE mode on/off.

Charging is stopped/continued. The green 100% LED and

the yellow <80% LED flash alternately.

(Pause mode is autom. deactivated after 1 minute.)

Switch ≥ 2 secs Charger switches off. Display goes out.

(Condition for charging characteristic setting.)

b) Charger is switched off

The charger automatically starts again after 15 seconds.

Switch < 1 sec Charger switches on.

Switch > 10 secs **Program selection mode on.** The current setting is

displayed. Display flashes 4x per second.

c) Program selection mode is enabled (selection of the charging characteristics)

The program selection mode is cancelled automatically 1 minute after the last switch use. If a new setting has not been confirmed, the original setting is kept.

Switch < 1 sec The **next** respective program is displayed.

If the displayed charging characteristic is the current setting, the display flashes faster $(1x \rightarrow 4x/second)$.

Switch > 5 secs The displayed program is applied as the new setting. The

display flashes faster (4x/second).

Switch 2 to 4 secs Exit program selection mode. Charger switches off.

12.11.08



Quick Guide Filon Futur S

Minuteman Models 957937, 957938 and 957939



4. Checking and Changing Charging Characteristic Setting

The following describes the steps to check or change the charging characteristics setting.

| <u>Action</u> | <u>Switch</u> | Response | | |
|------------------------------------------------------------------|---------------|--------------------------------------------------------------------------------------------------|--|--|
| 1. Plug in power cord | | Charger switches on | | |
| 2. Switch off charger | >2 secs | Charger switches off | | |
| 3. Program selection mode on | >10 secs | Program selection mode on The current setting is displayed (Display flashes 4x per second) | | |
| If only checking "settings": Continue with step 6 | | (Bioplay Hadrics 4x per second) | | |
| 4. Change setting: | <1 sec | The next parameter is displayed. (Display flashes 1x per second) | | |
| Repeat step 4 until desired charging characteristic is displayed | | | | |
| 5. Apply setting | > 5 secs | The setting is applied (Display flashes faster (4x/second) | | |
| Program selection mode off (Or wait 1 minute.) | 2 to 4 secs | Charger switches off | | |
| 7. Switch on charger (Or wait 15 seconds) | <1 sec | Charger switches on | | |

12.11.08