
## Replacing the belt on the Ambassadors

## 1. Remove Belt Cover

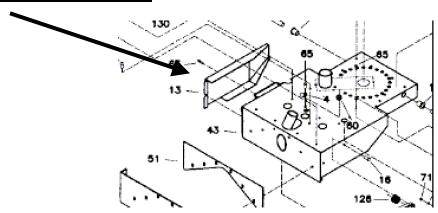

- 2. Loosen nuts on motor
- 3. Move the motor forward.
- 4. Install belt
- 5. Tighten the belt
- 6. Tighten motor nuts.
- 7. Replace the belt cover.

