

Setting the Battery Type on the ER21

NOTE: Perform each operation within 10 seconds of the previous operation otherwise the board will be reset and you will have to resume operations from the start.

1. Turn the machine on.
2. During the start-up simultaneously press and hold down the (-) button of the water dosage and the (+) button of the detergent dosage - the display shows "USER CHECK - PASSWORD: "0"
3. Press the button (+) of the detergent dosage until you reach the number **61**.
4. Press (Turbo) button.
5. Press the button (+) of the water dosage until the display shows "SET TARGET: FUNCTION BOARD"
6. Press the button (TURBO) to confirm – **Note:** The display will show the type of battery type the machine is set for.

The available battery options are:

"**PB24**", corresponding to WET lead acid batteries

"**GeE24**", corresponding to GEL batteries

"**Optima**", corresponding to Optima AGM batteries

"**AGM**", corresponding to AGM batteries

7. Press water (+) button to select a different battery type.
8. **Wait** for the machine to reset.
9. Turn the machine off and on again.
10. The new setting will take effect.

11/12/2013