



Pins on Connector

7	1
8	2
9	3
10	4
11	5
12	6

The LDS is mounted underneath the dash board. Via a DIP-Switch it is possible to change the battery type. As, at the moment, there is only one battery type it is factory programmed.