

957724 PRIME Charger INSTALLATION




CHARGER INSTALLATION



Using the (3x) included #10-24x3/4" flat head machine screws (p/n: 712544), attach the Charger Adapter Plate (p/n: 172089) to the upper electrical box, as shown.




Angle the charger unit (p/n: 957724) as shown to insert inside electrical control box. Mount using (2x) #8-32x3/8" pan head machine screws (p/n: 711133) on the top tab-mounts.

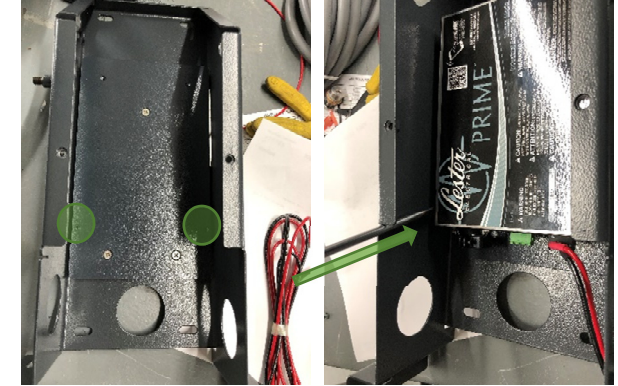


Install lower (2x) #8-32x3/8" pan head machine screws (p/n: 711133) by using a long magnetic philipps-head driver and angling the screw driver as shown.

CHARGER WIRING

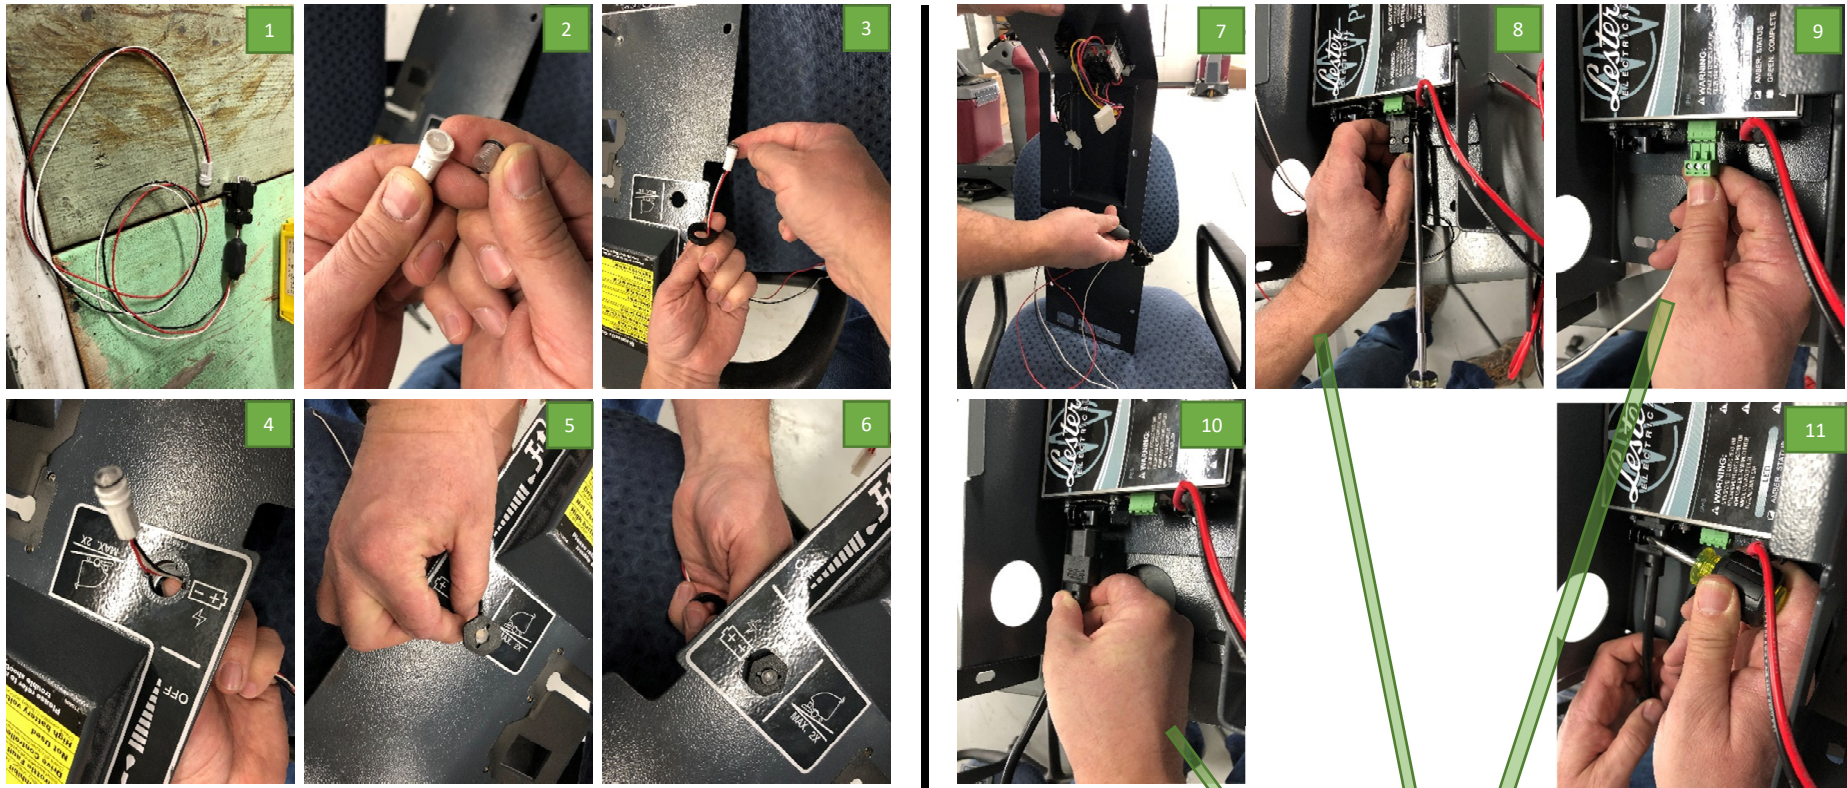


Remove indicator light cap (fig. 2) and insert plastic lock nut through indicator light assembly (fig. 3). Insert light end of assembly through the opening on the machine's back panel (fig. 4) and insert cover over light housing (fig. 5). Re-install indicator light cap and secure onto back panel by tightening the retaining ring on the rear of the panel (fig. 6). **NOTE: This can be done before or after the indicator light is attached to the charger.**



Attach indicator light wiring into the port as shown (fig. 7 & 8) and secure connector onto the charger. Connect green connector onto green terminal on the charger (fig. 9). Attach power cord and tighten screw to secure power cord (fig. 10 & 11).

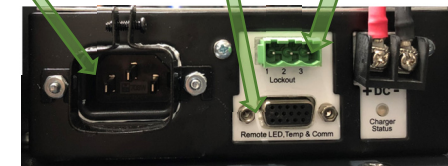



WIRING

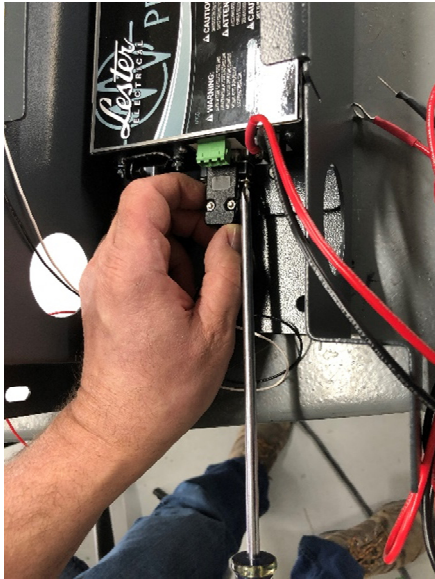




Attach indicator light onto back-panel if this has not been attached yet. See page 3 for exact details.

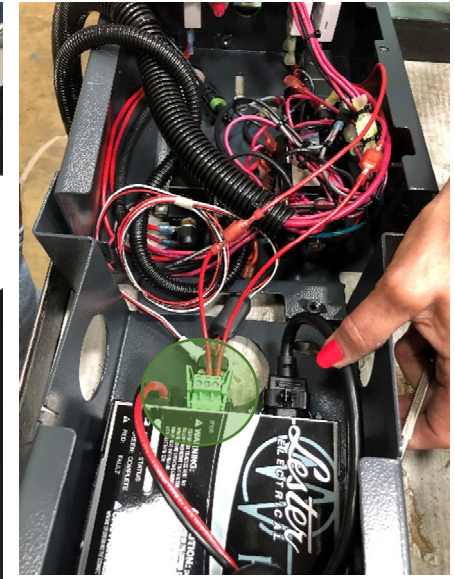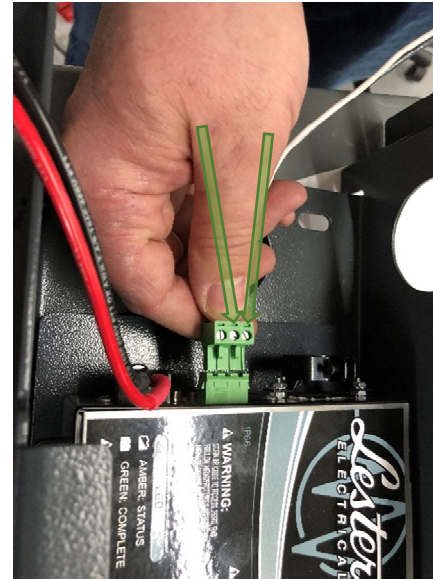

Attach common wire, from battery, into Lockout 2.
Attach harness wire, from harness, into Lockout 1.

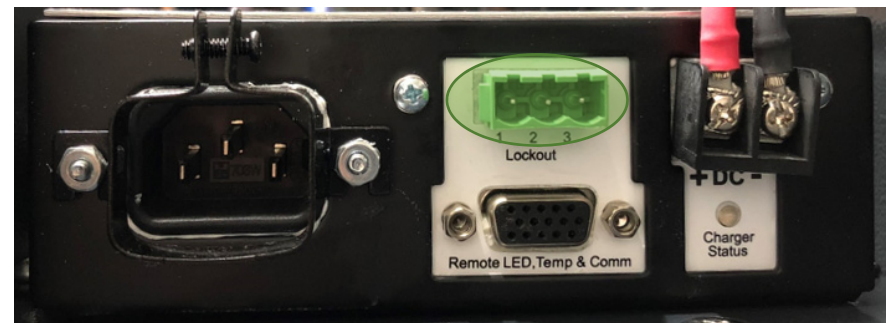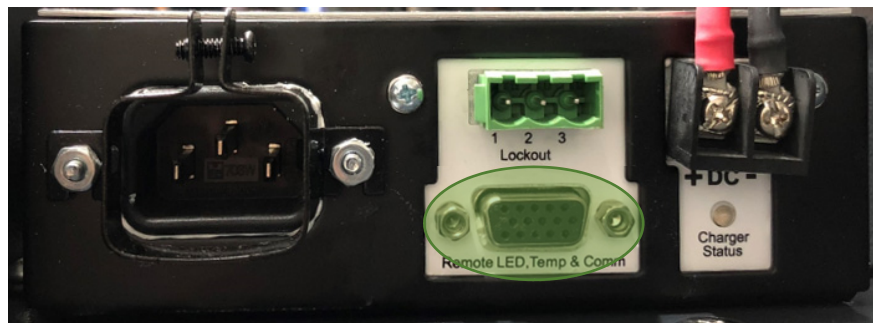

DC OUTPUT WIRING

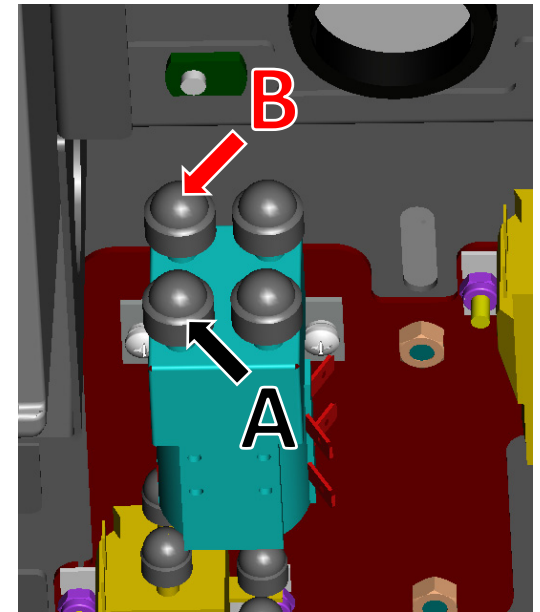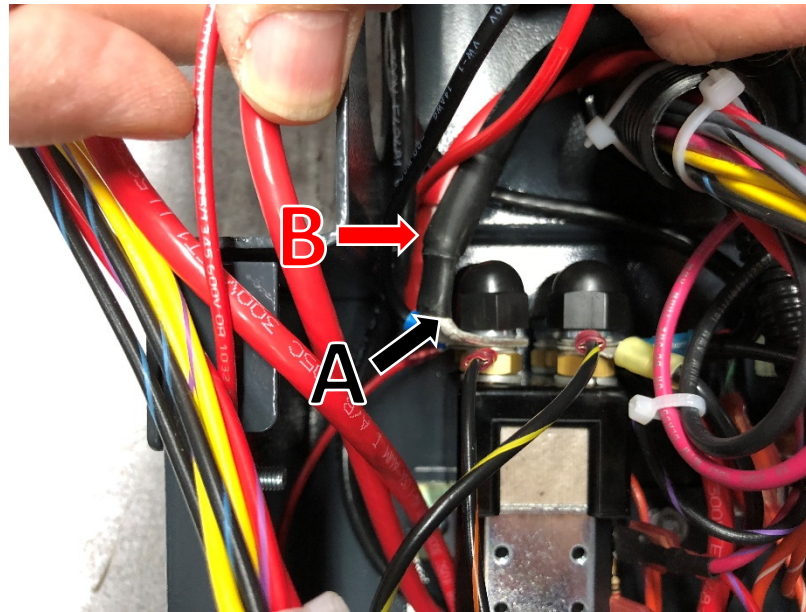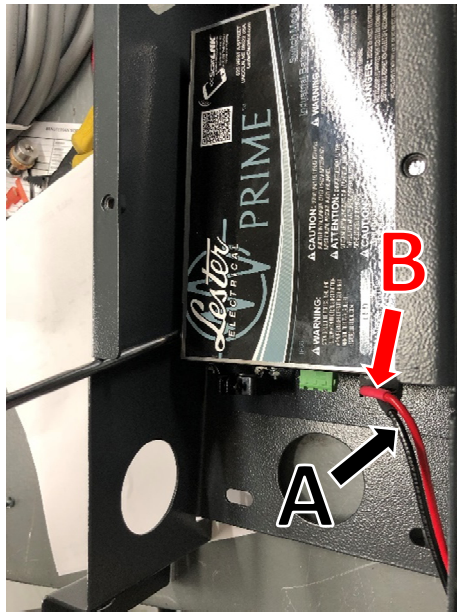

Remove cap screw and attach black wire onto (A) and red wire onto (B) as shown.

