



Instruction manual
Check of the valves inside the front wheel engines Bosch/Rexroth

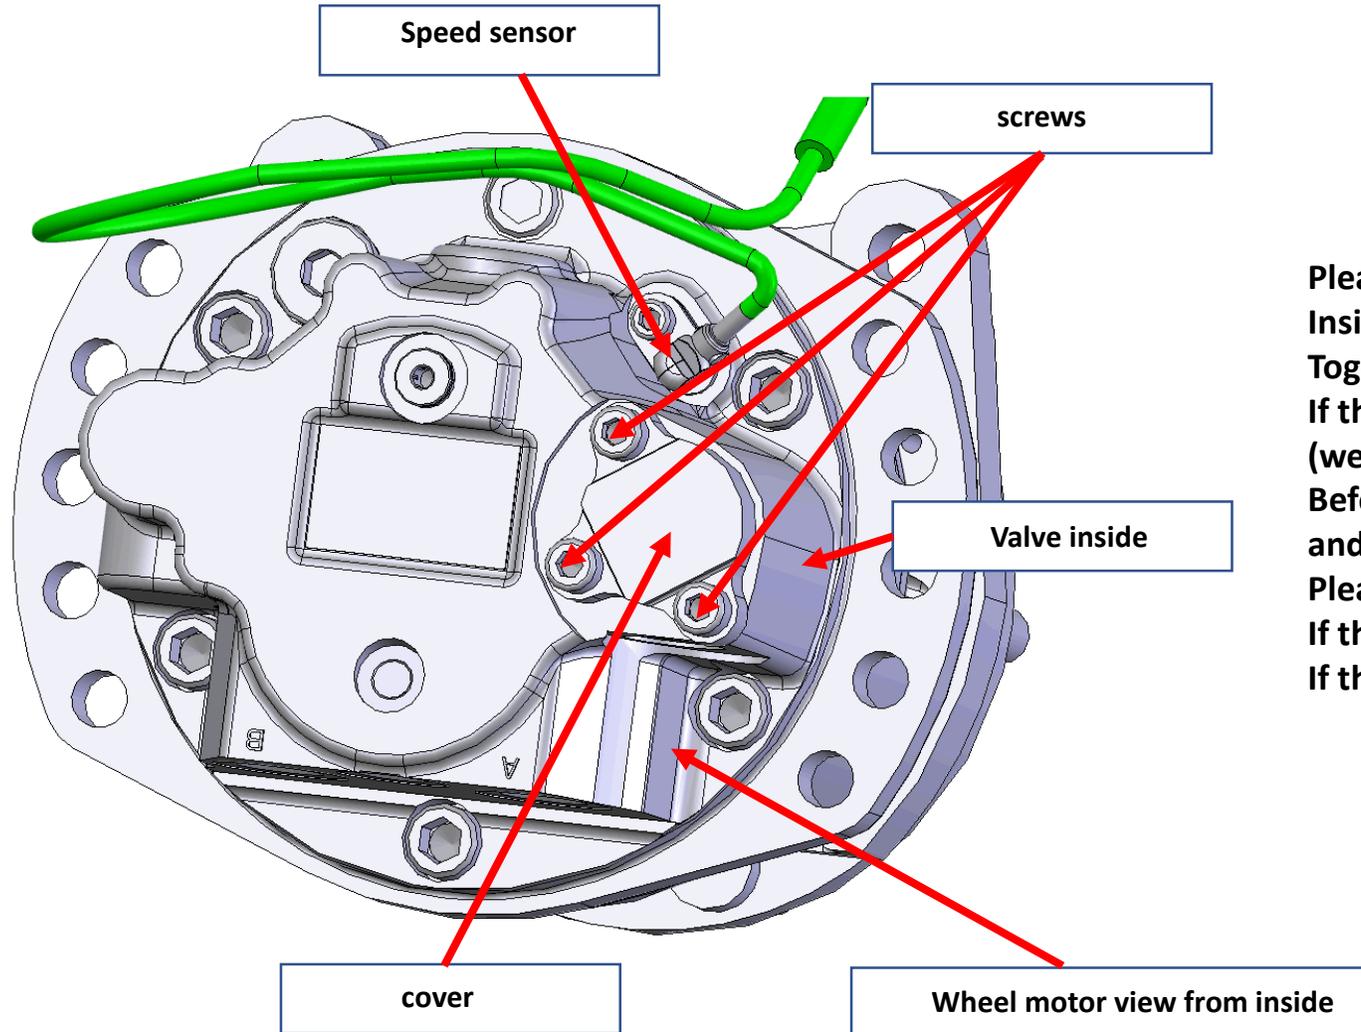

Please remove the 3 screws and then the cover.
Inside there is a valve including a spring.
Together these parts must be a unit.
If the spring is separated from the valve, change the wheel motor
(we work on a solution, to get these valves separately) .
Before you change it, remove the speed (tacho-) sensor carefully
and check the point of the sensor, if there are any chips.
Please make fotos of the sensors and the valves!
If there are chips, clean the sensors and mount it again.
If the valve is fine, remove both wheel motors at the front axle.

Instruction manuel
Check of the valves inside the front wheel engines Bosch/Rexroth

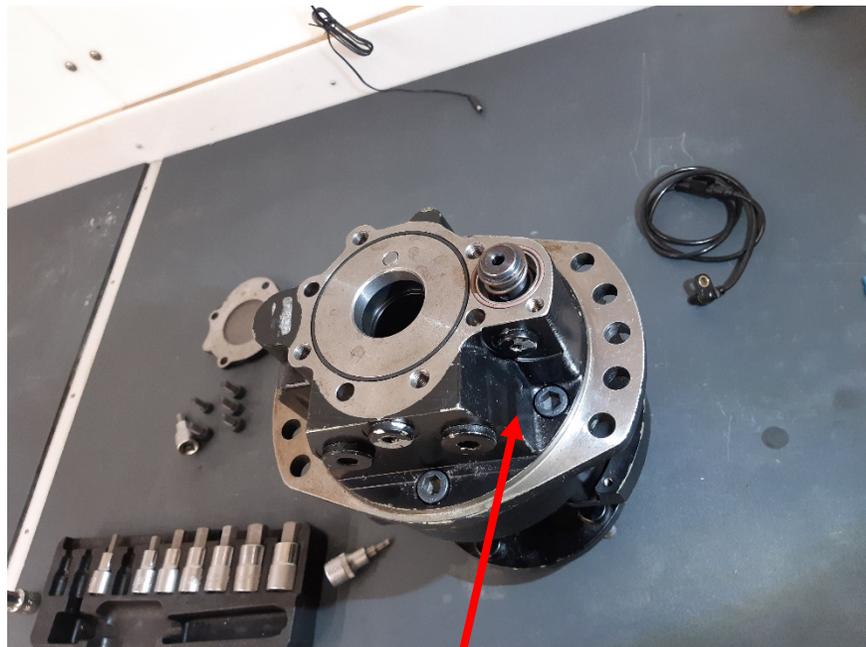

Wheel motor




Valve with spring - correct position



Valve with spring - wrong



Instruction manuel
Check of the valves inside the front wheel engines Bosch/Rexroth

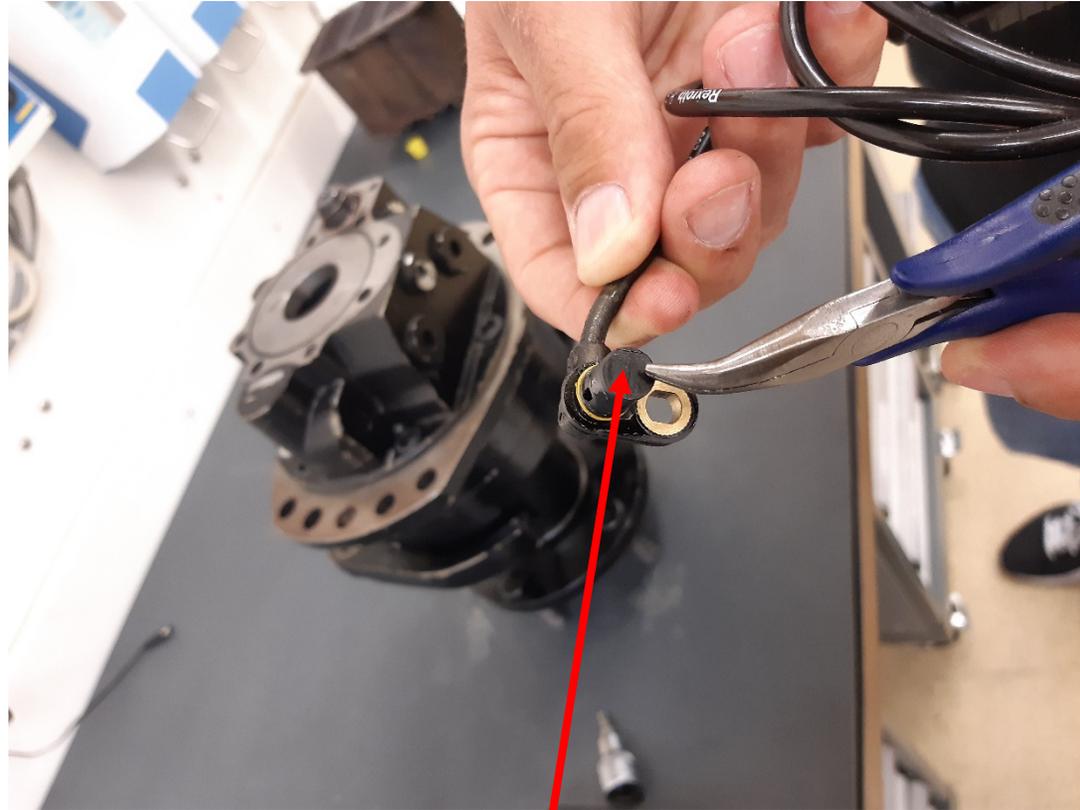

Speed - sensor