

**Service-Handbuch**  
**Service Booklet**

# **Scrubmaster B 175 R**

(7180.XX)

Schulung/Training  
Fehlersuche/Troubleshooting  
Einstelldaten/Adjustments



Hako GmbH · Technisches Produktmanagement · D-23840 Bad Oldesloe · Updated 09/2018 - Rev.1.01  
Vertraulich – nur für den internen Gebrauch · **Confidential - For internal use only!**

# Table of contents

<b>1</b>	<b>Information</b>	<b>6</b>
<b>2</b>	<b>General information</b>	<b>7</b>
	2.1 Settings	10
	2.1.1 Control panel	11
	2.1.2 Machine control unit	12
	2.2 Brief description	13
	2.2.1 Switching off suction / waste water tank full	14
	2.2.2 Solution tank display	15
	2.2.3 Machine home position	16
	2.2.4 Seat contact switch (3.6.6.4.)	17
	2.3 Diagnostics and communications	19
	2.3.1 Prerequisites	19
	2.3.2 Diagnostic software on the diagnostic computer	20
	2.3.3 Connecting to the diagnostic PC	21
	2.3.4 Connection scheme with the diagnostic PC	23
	2.3.5 Flashing the software	24

# Table of contents

2.4	Configuration menu	25
2.4.1	Entering the configuration menu	25
2.4.2	Time and Date setting menu	28
2.4.3	Configuration setting menu	29
2.4.4	Settings, that can be carried out without code	31
2.4.5	Settings, that can only be carried out with code	32
2.4.6	Resetting the last error and deleting the error memory	33
2.4.7	Deleting the last error on the display panel	34
2.4.8	Deleting error entries	35
<b>3</b>	<b>Technical data</b>	<b>36</b>
<b>4</b>	<b>Maintenance intervals</b>	<b>43</b>
4.1	Hako system maintenance (customer)	44
4.2	Hako system maintenance I	46
4.3	Hako system maintenance II	49
4.4	Hako system maintenance S	50
<b>5</b>	<b>Cleaning programmes (FPV)</b>	<b>51</b>

# Table of contents

<b>6</b>	<b>Machine settings</b>	<b>54</b>
	6.1 Basic settings	54
	6.1.1 Cleaning units	55
	6.1.2 Battery and charger settings	57
	6.1.3 Battery setting (LDS)	58
	6.1.4 Charger	60
	6.1.5 Charger characteristic curves	62
	6.1.6 Charging data table of the integrated charger	63
	6.1.7 4-wheel drive variant	64
	6.1.8 SD storage medium in control panel	65
	6.2 Customer-specific settings (PPV)	66
<b>7</b>	<b>Mechanical components</b>	<b>69</b>
	7.1 Squeegee	69
	7.2 Rotating brush heads	75
	7.3 Roller brush heads	76
	7.4 Lifting element brush head	77
	7.4.1 Potentiometer in the lifting element for the brush head	77

# Table of contents

<b>8</b>	<b>Water pump</b>	<b>78</b>
	8.1 Water quantities	79
	8.2 Water pump standstill detection	80
<b>9</b>	<b>Drive</b>	<b>81</b>
	9.1 DMC drive control unit (front)	82
	9.1.1 Connection description	83
	9.2 Service codes DMC control unit	84
	9.3 Brake – manual release of the brake	89
	9.4 Testing the brake function	90
<b>10</b>	<b>Service messages</b>	<b>91</b>
	10.1 Service alarm clock 3.3.1.1	96
<b>11</b>	<b>Battery charger</b>	<b>97</b>
	11.1 Operating manual	97
	11.2 Programming the charger	101
<b>12</b>	<b>Options</b>	<b>102</b>
<b>13</b>	<b>Notes</b>	<b>107</b>

# 1. Information

## Caution:

- During all work at the machine, secure it against unintentional movement.
- Only carry out work at the machine when it has been de-energised (disconnect the battery plug), except for current and voltage measurements.
- After repairing electrical drives, measure the starting and operating currents to detect possibly still present errors.
- During all work at the machine, always observe the general safety and accident prevention regulations of the legislation.

## **2. General information**

The Scrubmaster B175 R is equipped with a multifunction display on which all machine statuses are displayed and machine settings can be made.

If a fault occurs, the wrench in the display lights up and the machine beeps. The current **service code** (four-digit alphanumerical code in the service indicator) is shown **with flashing dots between the characters**.

It is only a current service message if these criteria apply!

## **2. General information**

### **Scrubmaster B175 R**

The Scrubmaster B175 R is available in working widths of between 85 cm (roller brush) as well as 90 cm and 108 cm (rotating brush).

The machines are delivered from the factory with batteries as standard; here it is possible to choose between a maintenance-free 36V/280Ah PzV trough battery and a 36V/320Ah PzS trough battery.


Furthermore, it is differentiated between edition machines and configuration machines. Edition machines are machines that have a clearly defined scope of equipment. In this context, only a limited scope of additional equipment features is available. Additional options are not installed in the factory but supplied loose with the delivery for installation on site at the customer's.

A separate operating manual, which describes the operating and service statuses of the charger, is available for the chargers and supplied together with the device. The charge indicator is shown on the machine display. Service messages of the charger are also shown on the machine display.

## 2. General information

Configuration machines are manufactured order-specifically according to customer wishes from a pool of available equipment features. Additional options (chemical dosing, working light, warning signal, etc.) are installed in the factory. For more details, see the relevant current price lists.

### Matrix for a ready-for-use machine
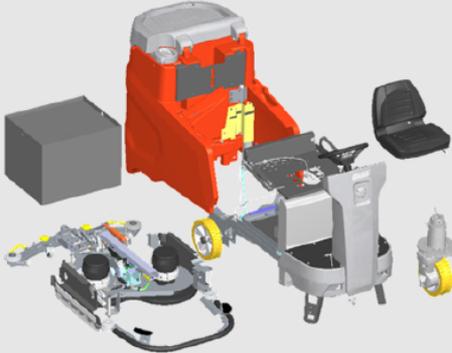
<div data-bbox="285 689 542 786" data-label="Text"> <p>Configurable basic unit</p> </div> 	+ required equipment	
	<div data-bbox="678 746 921 786" data-label="Text"> <p>Working tools</p> </div> 	<div data-bbox="1213 725 1528 808" data-label="Text"> <p>Solution/recovery tank</p> </div> 
	<div data-bbox="678 868 774 908" data-label="Text"> <p>Drive</p> </div> 	<div data-bbox="1213 868 1346 908" data-label="Text"> <p>Battery</p> </div> 
	<div data-bbox="678 989 824 1029" data-label="Text"> <p>Charger</p> </div> 	<div data-bbox="1213 989 1437 1029" data-label="Text"> <p>Power cable</p> </div> 
	<div data-bbox="678 1110 871 1150" data-label="Text"> <p>Driver seat</p> </div> 	<div data-bbox="1213 1110 1315 1150" data-label="Text"> <p>Tyres</p> </div> 
	<div data-bbox="678 1232 929 1272" data-label="Text"> <p>Cleaning tools</p> </div> 	<div data-bbox="1213 1232 1464 1272" data-label="Text"> <p>User manuals</p> </div> 

## 2.1 Settings

Respective settings can be carried out via the machine's configuration menu. Currently, these settings are carried out via the machine display. There are settings which can also be carried out by the operator without restrictions (e.g. cleaning programmes in Chapter 3 and several settings in Chapter 2). This is always possible if a diskette is displayed next to the value (Chapter-Configuration-Content). However, if a lock is displayed a diagnostic connector with order number PN 03006790 is required to adjust this value, or a 4-digit pin must be entered in the field above it. This is described in more detail in the Configuration chapter.

## **2.1 Settings**

### **2.1.1 Control panel**

In order for the display of the control panel to work, a micro-SD card must be inserted on the PCB of the control panel containing a special image file. This is required to make the control panel work. A micro-SD card with the required image file can be written to using the Hako diagnostics. If the micro SD card is missing or the image file on the card is defective or missing, the control panel will only show a “blue screen”. The micro SD card must not be formatted, and cannot be read by the usual computer operating systems (Windows, Linux, IOS, Android).

## 2.1 Settings

### 2.1.2 Machine control unit

A new machine control unit is supplied without machine software ex spare parts warehouse. Following mechanical and electrical installation of the central control unit in a machine and switching on the key switch, the display will be in an indeterminate state, since no data has been transferred from the machine control unit to the control panel.

Therefore, the machine software must be “flashed” onto the central control unit after mechanical installation and electrical connection of the central control unit.

- Service PC on which the current Hako diagnostic software is installed. (Windows 7 or higher)
- 1 free USB 2.0 port
- CAN-FOX interface PN 03502430
- Alternatively, CANUSB interface PN 03501750
- Interface cable PN 03502750

## 2.2 Brief description

Machine control takes place with the following electronics:

- Central electronics (A01)
- Control and display panel (A02) (MFD)
- Drive control unit (A04) / All-wheel-drive-option — 2. Drive control unit (A05)
- Chemical dosing (A101)
- Side brush control (A07)

The control electronics (A01) assumes all control and monitoring tasks in the machine except for the drive functions.

As well as the group messages of the drive control unit on the display of the machine, these are displayed as detailed flash codes on the drive control using flashing LEDs (see Chapter 9).

It is possible to toggle back and forth between the tip switches for scrubbing, suction and the green Hakomatic button for combined cleaning, thus ensuring that the selected function is activated. When pressing tip switch “boost”, the brush pressure is increased and the water quantity set to max. as long as the tip switch is pressed. Tool operation can only be switched on if the parking brake is applied and the seat contact switch is open.

## **2.2 Brief description**

### **2.2.1 Switching off suction / waste water tank full**

Suction is switched off by the operator via the tip switch or automatically in case of the signal “waste water tank full” to protect the suction turbine.

#### **Switching off by the operator:**

- The squeegee is raised.
- The suction motor switches off with a delay (15 seconds).

#### **Switching off because the tank is full:**

The suction motors are shut off when the waste water tank is full via float switch S04, which is connected to the machine control unit A01:X15.4 and A01:X15.16.

## **2.2 Brief description**

### **2.2.2 Solution tank display**

The machine has a fill level indicator for the fresh water tank in the MFA which displays the current fill level in steps of 20%.

The fill level is measured via a differential pressure sensor. The pressure sensor is connected to an immersion tube via a hose which is located next to the water filling opening of the fresh water tank. The immersion tube extends to just above the bottom of the fresh water tank. A certain pressure is present at the pressure sensor via the immersion tube and the hoses, which is converted into an electrical signal by the electronics of the pressure sensor. This signal is evaluated by the machine control unit and shown on the display as a fill level signal.

The sensor is supplied with a voltage of 5V via A01:X14.5. The minus connection comes from A01:X15.15, and the analogue signal of the pressure sensor is present at A01:X15.3.

## **2.2 Brief description**

### **2.2.3 Machine home position**

After switching on the machine, all components are set to “home position” provided that the seat contact switch is actuated (closed).

The lifting elements will lift unless they have been switched off via the micro-switch for the upper end position integrated in the lifting element (squeegee) or the upper end position is detected by the control unit via the integrated potentiometer.

When removed, the spindle of the lifting element may not be twisted as otherwise the positioning of the lifting element is misaligned.

## 2.2 Brief description

### 2.2.4 Seat contact switch (3.6.6.4.)

The seat contact switch (S05) is connected to the control electronics A1 at A1:X15.6+18 and A1:X15.7+19.

The control electronics (A1) responds to the relief of the seat with an approx. 2 second delay. This means: If the contact at A1:X15.6+18 is open for more than 2 seconds during machine operation, the motors stop.

If the switch is closed again within 2 seconds, the machine continues to operate without any interruptions.

If the seat contact switch is not actuated for > 6 hours while the key switch is switched on, the machine is locked in all functions (driving and cleaning). The same applies if both contacts of the seat contact switch have the same switch status for longer than a few seconds, i.e. both switches are detected as being open or closed by the machine (seat switch manipulation).

The service code 3.6.6.4. is shown in the operating hours meter. If the seat contact switch is actuated, only driving is now possible. If the key switch is switched off and then back on without the seat contact switch being relieved or actuated again, the driving function is also deactivated. The machine is blocked for use if the seat contact switch is not actuated.

## 2.2 Brief description

To reactivate the machine after triggering “seat switch manipulation”, the machine control unit must “register” the change of the switch status or the change between ‘operator is sitting on the machine’ and ‘operator has left the seat’.

To achieve this, the seat contact switch must be opened and closed several times while the machine is on.

A seat contact switch that has been detected as “open” by the machine (no operator on the seat) is indicated on the control panel display via the “operator” in the top line of the MFA. If the seat contact switch is detected as “closed”, i.e. the operator is on the seat, the operator symbol in the MFA will go off.

Seat contact switch closed means there is an operator on the seat; Seat contact switch **open** means there is **no** operator on the seat.

The second seat contact switch always has the respective opposite switching status.

## **2.3 Diagnostics and communication**

### **2.3.1 Prerequisites**

**The following components are required to activate the control unit of the Scrubmaster B175 R after a replacement:**

- Current Hako diagnostic software (via the Hako WebX download portal)
- Service PC (e.g. Panasonic CF19 / CF20)
- Interface PN 03502430 \* (preferred variant) or alternatively also: PN 03501750 \*\*
- Diagnostic cable PN 03502750
- Diagnostic connector PN 03006790

**See Chapter 2.3.4 for connections to the recommended interface**

## **2.3 Diagnostics and communication**

### **2.3.2 Diagnostic software on the diagnostic computer**

**Download the “HakoDiagnostics” software as a zip file or as a folder from the Hako WebX download area.**

Information on accessing the download server can be requested from Maike Christiansen, e-mail: [mchristiansen@hako.com](mailto:mchristiansen@hako.com).

**To install the software on a service computer or for software updates:**

Follow the steps in the “Instructions” for Hako diagnostics setup which is supplied with the diagnostic software.

## **2.3 Diagnostics and communication**

### **2.3.3 Connection to the diagnostic PC**

- Ensure that the –A01 control unit has been fully installed in the machine before activating the backup battery. To do this, remove the insulating strip between the battery (CR2032) and the battery holder on the control unit.
- Connect the interface (\* / \*\*) to a free USB port of the service PC.
- Establish a connection between the machine and the diagnostic computer using the diagnostic cable (PN 03502750) and the interface (PN 03502430 or 03501750).
- Connect the OBD connector (blue contact protection) of the diagnostic cable to the OBD contact of the machine (located behind the cover in the steering column).

## 2.3 Diagnostics and communication

With CAN-FOX interface PN 03502430 (\*): (recommended variant – see Chapter 2.1.3)

Connect the D-Sub 9 connection of the diagnostic cable marked CAN1 (red marking) to the D-Sub 9 connection of the interface marked “CAN”.

**Caution:** Do not use the D-Sub 9 connection with the designation RS232.


With CANUSB interface PN 03501750 (\*\*): (*alternative connecting option*)

Connect the D-Sub 9 connection of the diagnostic cable marked CAN1 (red marking) to the round jack of the interface using the adapter (D-Sub 9 to 7-pin round plug) included in the scope of delivery of the diagnostic cable.

- Carry out the settings for operative units, options, battery and parameters via the display according to the training documents.

## 2.3 Diagnostics and communication

### 2.3.4 Diagram for connection between machine and the diagnostic PC

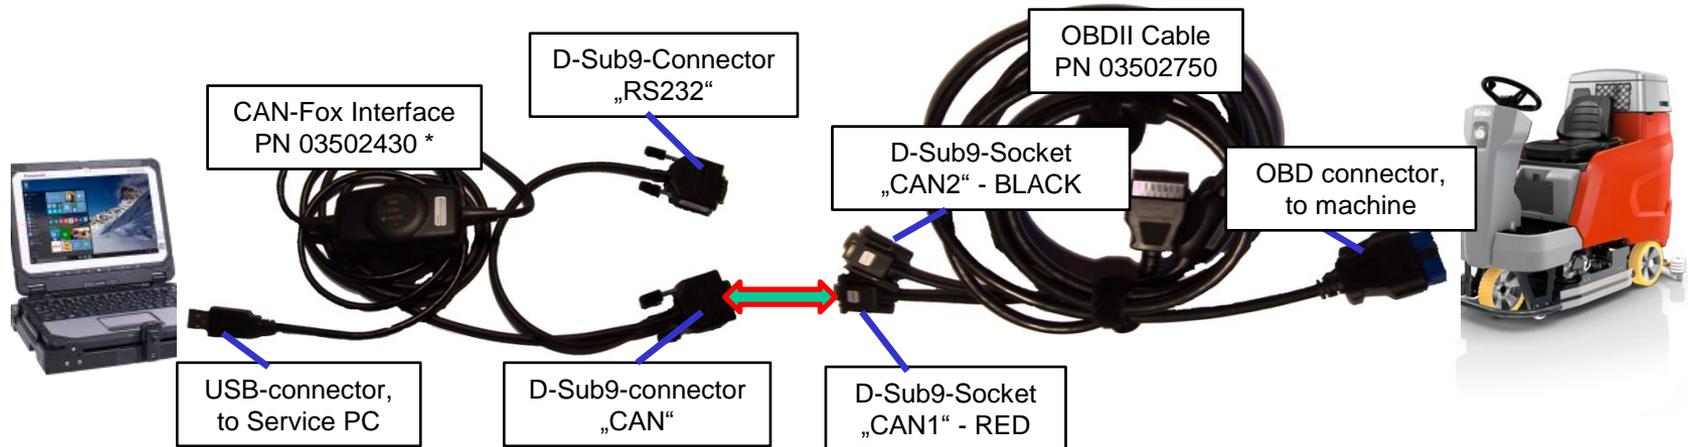

## **2.3 Diagnostics and communication**

### **2.3.5 Flashing the software:**

- Turn on the machine.
- Start the Hako diagnostic software. Select the “HAKO” button, then click the “Scrubmaster B175 R” button. The application independently searches for a new, blank control unit.
- Follow the instructions of the programme. Do not turn off the machine or disconnect the connection before flashing has been completed.
- Carry out the settings for operative units, options, battery and parameters via the display according to the training documents.

## 2.4 Configuration Menu

### 2.4.1 Entering the configuration Menu

The turn-push knob can be used to access sub-menus in which it is possible to

- set machine configurations
- set the clock
- delete the last error in the display and the error overview


Select the sub-menus:

In the main display screen, use the turn-push knob to select the red button with the green arrow and actuate it by pressing the turn-push knob. The display screen jumps into the sub-menu on the operating hours meter page.

Use the turn-push knob to select the desired menu item and actuate it by pressing the turn-push knob.

- Time/Date setting
- Configuration menu
- Error memory for resetting the last error

## 2.4 Configuration Menu

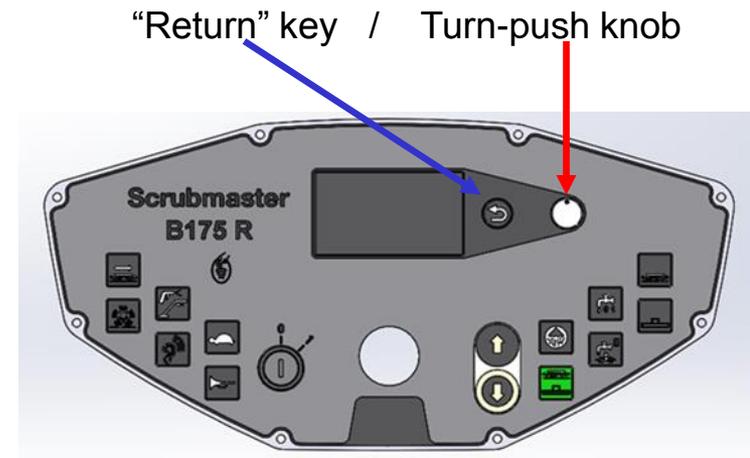

“Menu selection” softkey for selecting the sub-menus.

The sub-menu of the operating hours appears and the select buttons are displayed on the left-hand side (with yellow border for selection).

## 2.4 Configuration Menu

Go back to the main menu using


- the return key on the keypad
- or
- the home button (softkey) on the display panel

“Menu selection” softkey for selecting the sub-menus.  
The sub-menu of the operating hours appears and the select buttons are displayed on the left-hand side (with yellow border for selection).  
The individual menus can be selected using the turn-push knob.

Time setting menu

Configuration setting menu

Service messages menu

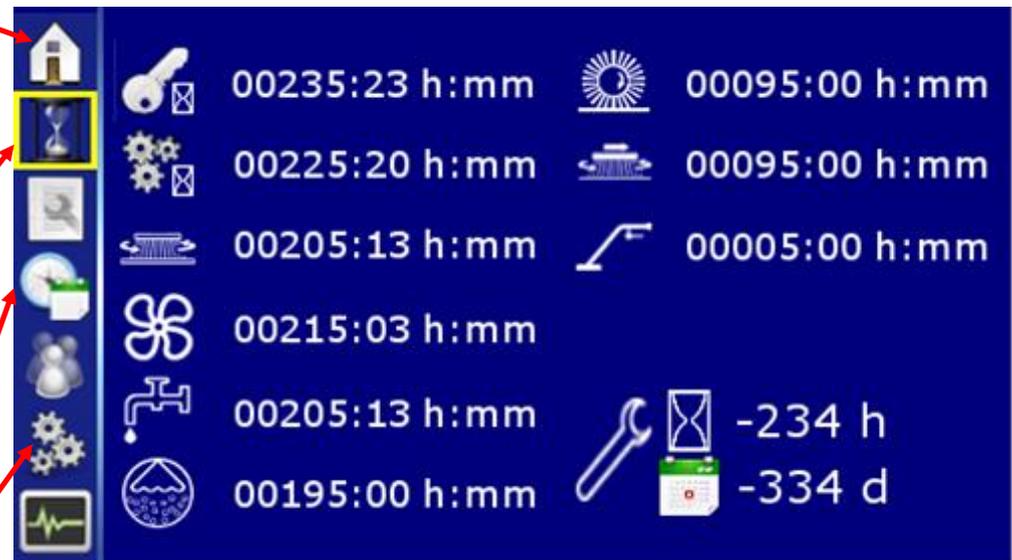

## 2.4 Configuration Menu

### 2.4.2 Time and date setting menu

- Respective times and dates can be set in the time/date setting sub-menu.
- Time selection 12 h / 24 h in hours/minutes,
- Date in day/month/year
- Turn the turn-push knob to the adjustable parameters and press. If the border turns green, the parameter can be adjusted. Press again to save. Turn further to the next value to be adjusted.
- Values are saved automatically when exiting the menu item (turning the turn-push knob on the time setting menu item).

Menu item for setting the time. Select the softkey via the turn-push knob and press to confirm.

Time setting section


12 h / 24 h setting

Hour setting

Minute setting

Date setting section

Setting: Day Month Year

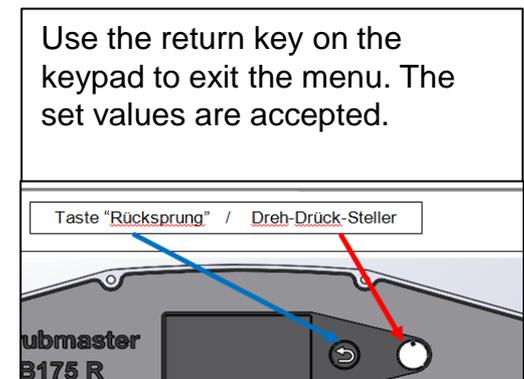


## 2.4 Configuration Menu

### 2.4.3 Configuration setting menu

- Respective options and values can be adjusted in the system settings sub-menu “configuration menu”.
- Adjustable values are divided into operator settings (can be changed by the operator), service settings (can only be changed by service staff using a password, diagnostics plug PN 03006790 or diagnostics device), and non-adjustable values (can only be changed via a software update).
- Turn the turn-push knob to the adjustable parameter and press. If the border turns green, the content can be adjusted. Save the value via the “disk” icon.

Menu item for setting the configurations. Select the softkey via the turn-push knob and press to confirm.

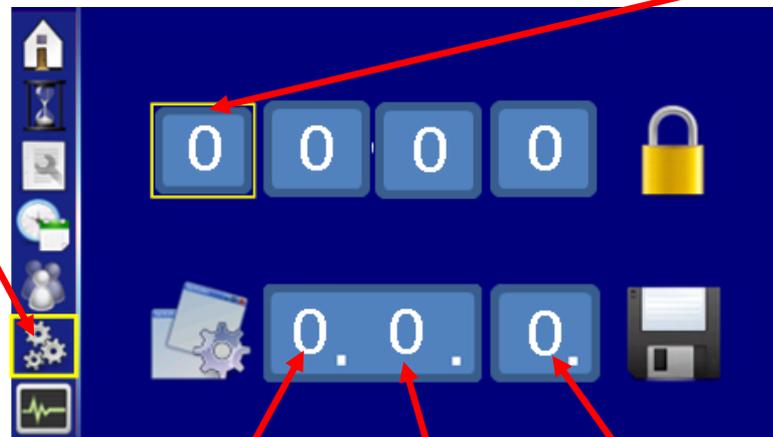

Chapter

Configuration

Content


Enter the code here.

The code is calculated using the last 4 digits of the 12-digit serial number of the machine plus 1.

These are the positions 9 to 12 of the serial number of the machine.

## 2.4 Configuration Menu


Use the return key on the keypad to go back without saving the currently selected value.

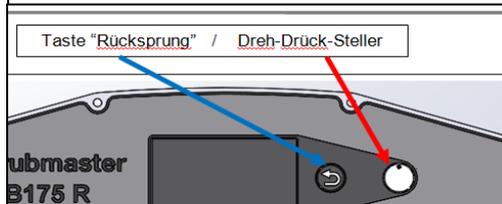

### Menu operation:

- Turn the turn-push knob to access the field of the value to be changed.
- Press the turn-push knob to be able to adjust the value (the border turns green).
- Adjust by turning the turn-push knob.
- Press the turn-push knob to exit the field. Turn further to the disk to save the value.


- Connect the diagnostics plug PN 03006790 to –A01/X20 to change the protected parameters.

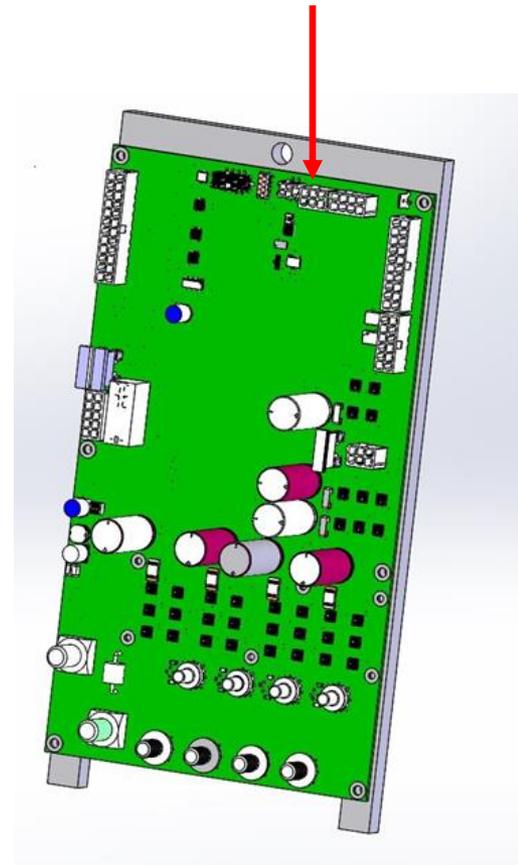

## 2.4 Configuration Menu

### 2.4.4 Settings that can be carried out without code or diagnostics plug

Settings that can be carried out by the operator are indicated by not having to enter a code in the top field (or connecting a diagnostics plug) and by the disk displayed next to the configuration setting for saving. Without a code, all settings can be viewed but only released ones can be adjusted.

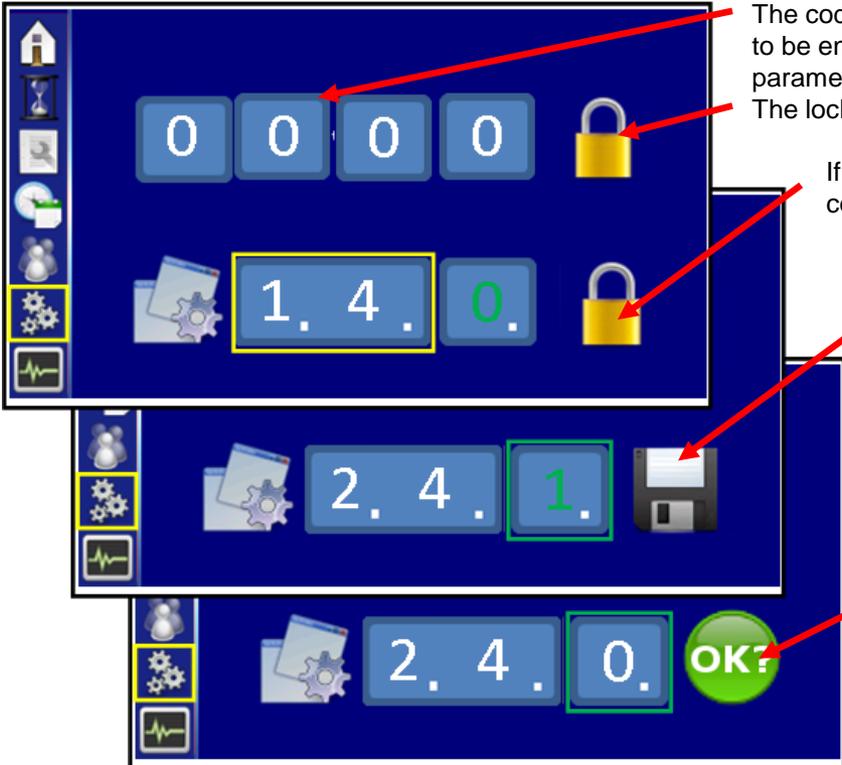

The diagram illustrates the configuration menu interface across three levels. Each level shows a set of four numeric fields and a lock icon. The top level has all fields set to '0' and a yellow padlock icon. The middle level has the first field set to '1', the second to '4', and the third to '0', with a yellow padlock icon. The bottom level has the first field set to '2', the second to '4', and the third to '0', with a green 'OK?' button and a disk icon. Red arrows point from text annotations to these specific elements.

The code or diagnostics plug for setting parameters does not have to be entered or connected if the operator wants to adjust parameters (only released parameters can be adjusted). The lock is locked.

If a locked lock is shown next to the configuration setting, the configuration cannot be changed by the operator.

If a disk is shown next to the configuration setting, the configuration can be changed by the operator. A green number means: currently saved content. A green border means: the value can be adjusted.

The content can be adjusted by turning the turn-push knob. The number turns white and "OK?" appears as a prompt to save this value. After saving, the disk appears and the number turns green. If saving should not take place, use the "return" key on the keypad or the turn-push knob to exit the setting.

## 2.4 Configuration Menu

### 2.4.5 Settings that can only be carried out with code or diagnostics plug


Settings that can be carried out by service staff are indicated by having to enter a code in the top field and by the disk displayed next to the configuration setting for saving.

To avoid having to enter a code, it is also possible to use the diagnostics plug PN 03006790 at connection – A01.X20 of the control unit.

The code is assigned by the HAKO Service during production at the assembly line or when installing a new control unit. The code is calculated from the running sequence number of the machine plus 1.

The running sequence numbers are the positions 8 to 11 of the serial number of the machine.

If no code has been assigned, release for adjusting the configuration can only take place via the service plug.

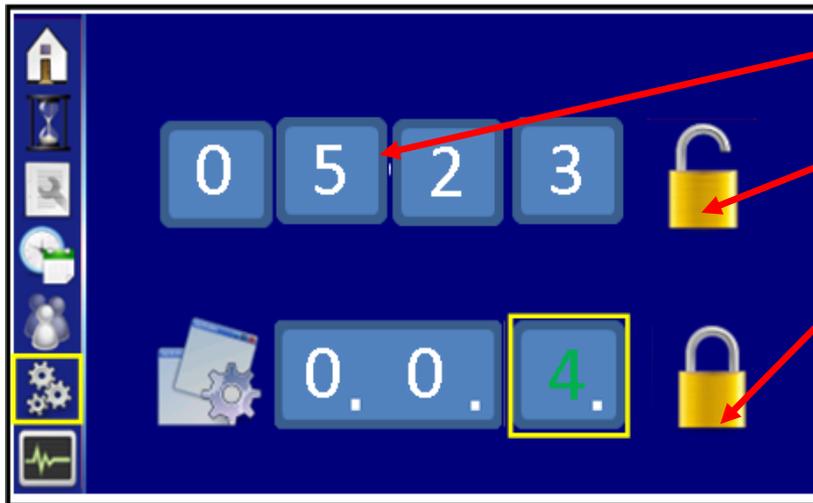

If parameters are to be changed, the code for setting parameters must be entered (alternatively, diagnostics plug).

The lock is unlocked.

If a locked lock is shown next to the configuration setting, the configuration cannot be changed by service staff.



If a disk is shown next to the configuration setting, the configuration can be changed by service staff. A green number means: the currently saved content.



The content can be adjusted by turning the turn-push knob, the number then turns white and “OK?” appears as a prompt for saving the value. After saving, the disk appears and the number turns green. If saving should not take place, use the “return” key on the keypad to exit the setting.

## 2.4 Configuration Menu

### 2.4.6 Resetting the last error and deleting the error memory

- The last ten errors can be displayed with real time and date in the error information sub-menu.
- The last error can be deleted in the main display.
- The display of the last ten errors can be deleted. However, the diagnostics memory cannot be deleted.

Shows the time when the error occurred in:  
 24 h display – hh:mm:ss or  
 12 h display – pm/am hh:mm:ss

Shows the date when the error occurred in: DD.MM.YYYY

Shows the status of the error (several errors can be active / inactive):

- Service key RED:  Active/Inactive error
- DEL:  The error is displayed for 3 seconds after switching on the machine.

Menu item for displaying the last ten errors. Select the softkey via the turn-push knob and press to confirm.



	13:06:00 - 31.03.2016		2.5.5.2	
	13:06:00 - 31.03.2016		1.2.4.0	
	13:06:00 - 31.03.2016		1.2.4.0	
	13:06:00 - 31.03.2016		2.5.5.2	
	13:05:00 - 31.03.2016		1.2.3.5	
	13:04:00 - 31.03.2016		1.2.3.6	
	13:03:00 - 31.03.2016		2.5.5.2	
	13:02:00 - 31.03.2016		1.2.3.8	
	13:00:00 - 31.03.2016		2.5.5.2	
	13:01:00 - 31.03.2016		1.2.3.9	

Error display sequence: The last occurred error is displayed at the top, previous errors are displayed underneath.

Service code

Call detailed information

## 2.4 Configuration Menu

### 2.4.7 Deleting the last error on the display panel

- Use the cursor to navigate to “DEL” between time / date and the error message of the last occurred error (“DEL” is only visible if the error has been reset, i.e. the service key has extinguished).
- Press and hold the turn-push knob for 3 seconds to reset the error indicators for the main display screen.
- “DEL” disappears from the display.




The screenshot shows a blue configuration menu with a vertical list of icons on the left. The icons from top to bottom are: a house, an hourglass, a document, a clock, a person, gears, and a monitor with a pulse line. The monitor icon is highlighted with a yellow border. The menu displays a list of time/date ranges and version numbers. The word "DEL" is visible in green text between the second and third rows.

	13:06:00 - 31.03.2016	DEL	2.5.5.2	
	13:06:00 - 31.03.2016		1.2.4.0	
	13:06:00 - 31.03.2016		1.2.4.0	
	13:06:00 - 31.03.2016		2.5.5.2	
	13:05:00 - 31.03.2016		1.2.3.5	
	13:04:00 - 31.03.2016		1.2.3.6	
	13:03:00 - 31.03.2016		2.5.5.2	
	13:02:00 - 31.03.2016		1.2.3.8	
	13:00:00 - 31.03.2016		2.5.5.2	
	13:01:00 - 31.03.2016		1.2.3.9	

## 2.4 Configuration Menu

### 2.4.8 Deleting error entries

- The entries in the display (not the diagnostics memory) can only be deleted via the HAKO diagnostics system.
- New error entries are saved chronologically (the last occurred error is displayed at the top position).

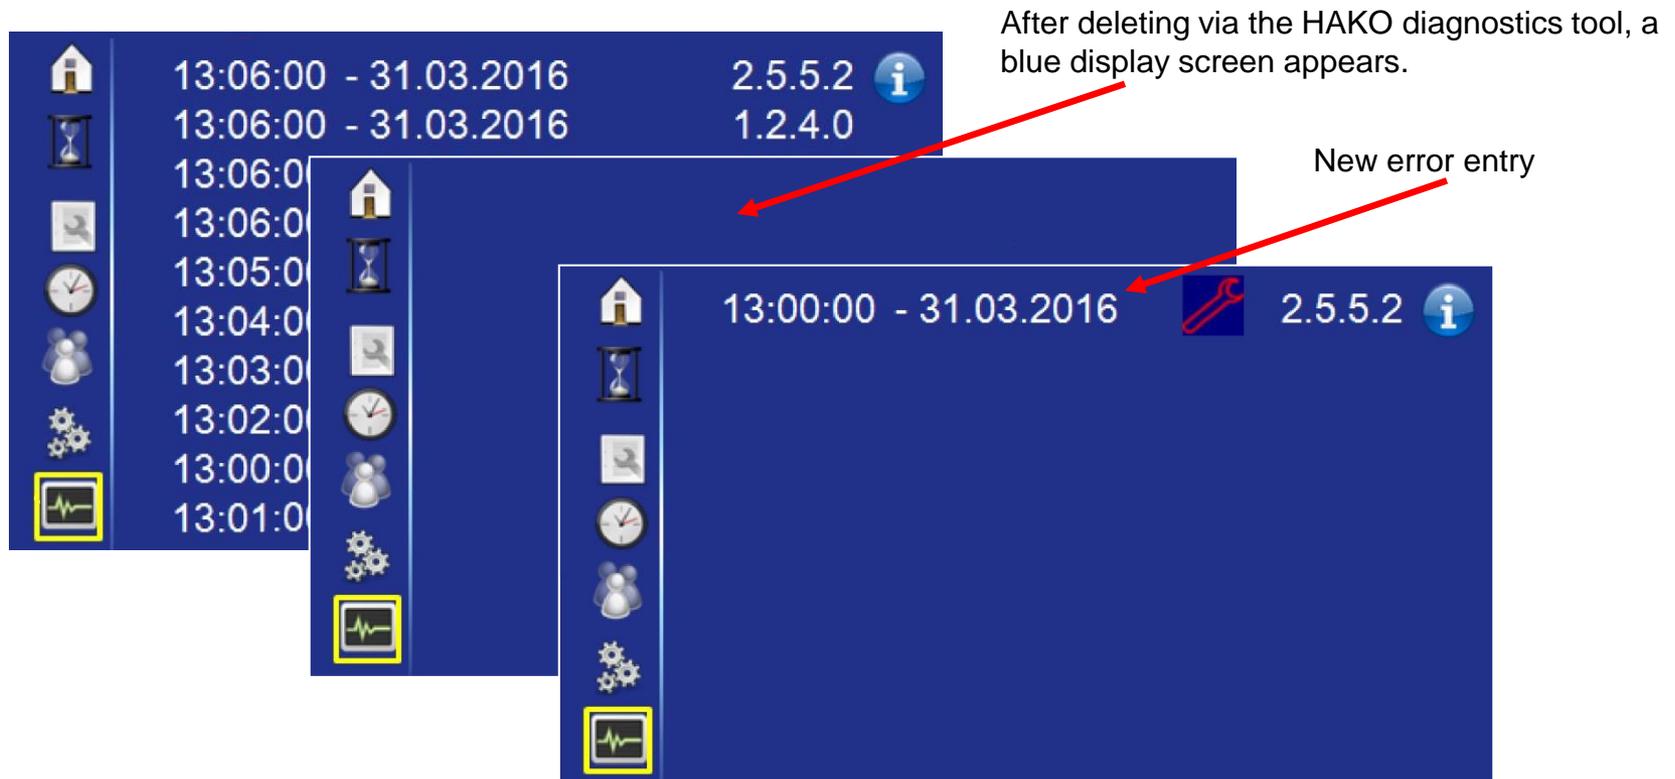

## 3 Technical Data

### Dimensions

Name	Unit	TB 900	TB 1080	WB 850
Length of machine with squeegee without/with pre-sweep unit	mm	1890/2670	1890/2670	1890
Width of machine without/with squeegee	mm	940/1130	1120/1290	940/1130
Height of machine without/with driver protection roof	mm	1450/2080		

### Working width

Brush unit	mm	900	1080	850
Squeegee	mm	1100	1260	1100

### Weights

Weight (empty, without batteries)	kg	450	455	440
Total weight (ready for use)	kg	1010	1015	1100
Permissible total weight	kg	1310		

### 3 Technical Data

#### Driving performance

Name	Unit	TB 900	TB 1080	WB 850
Driving speed transportation (forwards/reverse)	km/h	8/4		
Climbing capacity when cleaning	%	6 (2 min)		
Climbing capacity during transport journey (ready for operation)	%	10 (1 min)		
Ramp angle/Slope angle	%	16		
Turning circle (with squeegee)	mm	2960	2970	2960

#### Wheels

Wheel diameter	mm	305
Specific wheel contact pressure front/rear	N/mm <sup>2</sup>	0.66/0.65

### 3 Technical Data

#### Tank contents

Name	Unit	TB 900	TB 1080	WB 850
Solution tank	Litre	175		
Waste water tank	Litre	175		

#### Brush head

Brush speed	rpm	210	210	850
Min./Max. brush pressure	kg	35/70	38/70	29/38

#### Vacuum system

Air quantity 1/2 suction turbine	m <sup>3</sup> /h	100/200	200	100/200
Vacuum (maximum)	mbar	approx. 50		

### 3 Technical Data

#### Electrical system

Name	Unit	TB 900	TB 1080	WB 850
Nominal voltage	V	36		
Nominal output (max.) (P1)	W	7470		
Power consumption drive motor (P1) S2-120 min	W	2335		
Power consumption of vacuum motor (P1) 1/2 suction turbine	W	641/1282	1282	641/1282
Power consumption brush motor (P1)	W	2x936	2x936	2x918
Power consumption water pump (P1)	W	approx. 67		
Type of protection		IPX 3		
Protection class		III		

### 3 Technical Data

#### On-board charger

Name	Unit	TB 900	TB 1080	WB 850
Rated input/output voltage	V	230/36		
Nominal output	W	1600		
Type of protection		IPX 3/P20		
Protection class		I		

### 3 Technical Data

#### Noise emission value

		B175 R WZB		B175 R TB	
		Standard operation	Silent operation	Standard operation	Silent operation
The sound power level ( $L_{wAd}$ ) measured under the customary conditions of use according to DIN EN 60335-2-72 is:	dB (A)	85	80	85	80
The sound pressure level ( $L_{pA}$ ) (at the ear of the driver) measured under the customary conditions of use according to DIN EN 60335-2-72 is:	dB (A)	68	64	68	64
Measuring uncertainty ( $K_{pA}$ )	dB (A)	1.4	1.5	1.6	1.3

### 3 Technical Data

#### Vibration

Under the customary conditions of use, the weighted effective value of the acceleration to which the upper limbs (hand-arm) are subjected to according to DIN EN ISO 5349 is:	m/s <sup>2</sup>	≤ 2.5
Under the customary conditions of use, the weighted effective value of the acceleration to which the body (feet or seat surface) is subjected to DIN EN ISO 2631-1 is:	m/s <sup>2</sup>	≤ 0,5

## 4. Maintenance

The Hako system maintenance specifies in single modules the special technical work to be done and the periods of time for the maintenance activities. Parts to be replaced for the individual maintenance tasks are determined.

Hako system maintenance:

- Assures the reliable readiness for use of the Hako cleaning machines (preventive maintenance).
- Minimises operating costs, repair costs, costs for maintenance.
- Assures long life and readiness for use of the machine.

## 4.1 Hako-System Maintenance (customer)

### Hako system maintenance customer:

Work to be performed by the customer by reference to the servicing and maintenance instructions specified in the operating manual.

Daily
<ul style="list-style-type: none"><li>• Emptying the waste water tank</li><li>• Clean the waste water tank, drain hose, coarse dirt sieve and suction filter</li></ul>
<ul style="list-style-type: none"><li>• Check the cover seal of the waste water tank, clean if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the battery, charge if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the squeegee, clean if necessary</li></ul>
<ul style="list-style-type: none"><li>• Emptying the dirt hopper in the roller brush unit (optional)</li></ul>

## 4.1 Hako-System Maintenance (customer)

Weekly
• Clean the machine as required
• Clean the solution tank
• Check the sieve insert in the fresh water filter, clean or replace if necessary
• Check the scrubbing performance of the brushes/pads, clean if necessary
• Check the brushes and water retaining ring for proper fit and wear, replace if necessary
• Check the suction performance of the squeegee, clean or replace the sealing strips if necessary
• Check the fresh water supply to the brushes, clean if necessary
• Check the suction hose for tight fit and damage, clean if necessary
• Check the rubber of the lateral wiper, replace if necessary
• Pre-sweep unit (optional), check rotating cylindrical brush, clean if necessary
• Trial run and function test

## 4.2 Hako-System Maintenance I

### Hako system maintenance I:

Performance by an expert of an authorised Hako workshop by reference to the machine-specific system maintenance.

Every 250 hours
<ul style="list-style-type: none"> <li>• Check the battery and the charger</li> <li>• Check the battery acid level and acid density, refill demineralised water if necessary</li> <li>• Check the air inlet grilles, air duct and filter mat of the on-board charger for contamination, clean or replace if necessary</li> </ul>
<ul style="list-style-type: none"> <li>• Check steering for stiffness and play</li> <li>• Check steering pinion and gear rim for damage, grease if necessary.</li> </ul>
<ul style="list-style-type: none"> <li>• Check the brake for proper functioning</li> </ul>
<ul style="list-style-type: none"> <li>• Check the cover seal of the waste water tank, replace if necessary</li> <li>• Check operation of float switch in waste water tank.</li> <li>• Check the waste water and suction system, replace worn parts if necessary</li> </ul>
<ul style="list-style-type: none"> <li>• Check the fresh water supply, replace worn parts if necessary</li> </ul>
<ul style="list-style-type: none"> <li>• Check the sealing strip/slot strip of the squeegee, turn or replace if necessary</li> <li>• Check the deflecting bracket/deflecting rollers at the squeegee, replace if necessary</li> <li>• Check the squeegee setting, reset if necessary</li> </ul>

## 4.2 Hako-System Maintenance I

Every 250 hours
<ul style="list-style-type: none"><li>• Check the sieve insert and cover seal of the fresh water filter for damage, replace if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the seal at the drain hose, replace if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the condition of tyres</li><li>• Check the rear wheel mounting screws, re-tighten if necessary (42 Nm)</li></ul>
<ul style="list-style-type: none"><li>• Check the electrical system (lighting, fuses and relays), replace parts if necessary</li></ul>
<ul style="list-style-type: none"><li>• Remove fluff and dirt from the air inlet grilles of the brush motors</li></ul>
<ul style="list-style-type: none"><li>• Check toothed belt and bearing of the roller brush unit, replace if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check V-belt drive of pre-sweep unit (optional)</li><li>• Check the rotary brush setting, reset if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the side brush setting (optional), reset if necessary</li></ul>
<ul style="list-style-type: none"><li>• Check the front collision protection with deflecting roller for damage</li></ul>

## 4.2 Hako-System Maintenance I

Every 250 hours
Spray the following locations on the machine with penetrating lubricant:
<ul style="list-style-type: none"><li>• Hinges at the squeegee lift system</li><li>• Hinges at the side deflectors</li><li>• Hinge and joint locations of the brush lift system</li></ul>
• Check the optical condition of the machine (corrosion and labels)
• Trial run and function test

## 4.3 Hako-System Maintenance II

### Hako system maintenance II:

Performance by an expert of an authorised Hako workshop by reference to the machine-specific system maintenance.

Every 500 hours
<ul style="list-style-type: none"><li>• All maintenance work according to Hako system maintenance I</li></ul>
<ul style="list-style-type: none"><li>• Read out the error memory and evaluate the service information</li></ul>
Check the following electrical output: <ul style="list-style-type: none"><li>• Drive motor</li><li>• Brush motors</li><li>• Suction turbines</li><li>• Pre-sweep unit (optional)</li><li>• Side brush unit (optional)</li></ul>
<ul style="list-style-type: none"><li>• Trial run and function test</li></ul>

## 4.4 Hako-System Maintenance III/S (Safety Check)

### Hako system maintenance III/S (safety check)

Performance by an expert of an authorised Hako workshop by reference to the machine-specific system maintenance. Performance of all legally stipulated safety-relevant tests according to the BGV specifications.

Every 1000 hours
<ul style="list-style-type: none"><li>• All maintenance work according to Hako system maintenance II</li></ul>
<ul style="list-style-type: none"><li>• Replace the backup battery of the electrical control and set a real-time clock</li></ul>
<ul style="list-style-type: none"><li>• Remove coal dust from the brush motors, the side brush unit motor and the pre-sweep unit motor and check the carbon brushes for ease of movement and wear, replace carbon brushes if necessary</li></ul>
<ul style="list-style-type: none"><li>• Trial run and function test</li></ul>

## 5. Cleaning Programs (FPV)

The cleaning programmes are used to control the behaviour of the water supply to the brushes, the brush motors with regard to the position of the driving direction switch and the speed control potentiometer (forwards, neutral, reverse) as well as the squeegee.

A GND signal is connected to input A04:A3 of the drive control unit via the speed control potentiometer switch in B03. This is the release signal for the drive control unit. When driving direction forwards is selected on the control panel, this signal is connected to input A04:A1 from A02:X109.3. When reversing is selected, the signal is connected to input A04:A2 from A02:X109.4. If these signals are missing at A04:A1 or A04:A2, the machine cannot be driven.

The “forwards” and “reverse” signals are transferred to the machine control unit via CAN-bus and the cleaning units are therefore activated. The behaviour of the cleaning functions is described in Table 5.1.

In order to select a cleaning programme, you must switch to the programming level as described in Chapter 2.4 Configuration (sub-chapters 2.4.3 and 2.4.4). The available cleaning programmes are listed in Table 5.2.

## 5. Cleaning Programs (FPV)

Function \ Content	0	1	2	3	4	5	6	7	8	9
Brush off when drive control is in neutral	SOW	Yes								
Brush off when drive control is in reverse	SOW	No	No	Yes	No	No	Yes	No	Yes	No
Lift brush when drive control is in neutral	SOW	No	No	No	Yes	Yes	Yes	Yes	No	No
Lift brush when drive control is in reverse	SOW	No	No	No	No	No	Yes	No	No	No
Water off when drive control is in neutral	SOW	Yes								
Water off when drive control is in reverse	SOW	No	Yes	Yes	No	Yes	Yes	Yes	Yes	No
Lift squeegee when drive control is in neutral	SOW	No								
Lift squeegee when drive control is in reverse	SOW	No	Yes	No	Yes	No	No	Yes	Yes	Yes

Table 5.1

## 5. Cleaning Programs (FPV)

Chapter	Configuration	Content	Description	B175R
<b>3</b>	<b>0</b>		<b>Adjusted FPV</b>	
3	0	1	Refer to FPV table	x
3	0	2	Refer to FPV table	d
3	0	3	Refer to FPV table	x
3	0	4	Refer to FPV table	x
3	0	5	Refer to FPV table	x
3	0	6	Refer to FPV table	x
3	0	7	Refer to FPV table	x
3	0	8	Refer to FPV table	x
3	0	9	Refer to FPV table	x

Table 5.2

## **6. Machine settings**

### **6.1 Basic settings**

The machine series Scrubmaster B175 R offers different equipment options and working widths. These can be set and adapted in the configuration menu. To check and change the setting, access the configuration menu as described in Chapter 2.4. The possible setting parameters are described in the following chapters.

## **6. Machine settings**

### **6.1 Basic settings**

#### 6.1.1 Cleaning units

3 different brush units are used with the Scrubmaster B175 R.

Two rotating brush units with a working width of 90 cm or 108 cm, and a roller brush unit with a working width of 85 cm.

This setting is necessary for correct functioning of the overrange limits and water quantities.

To check and change the setting of the cleaning units, proceed as described in Chapter 2.4 Configuration. The possible setting parameters for the operative units are specified in Table 6.1.

## 6. Machine settings

### 6.1.1 Cleaning units

Chapter	Configuration	Content	Description	B175R
<b>0</b>	<b>2</b>		<b>Brush decks</b>	<b>1</b>
0	2	4	Plate brush deck 900mm	x
0	2	7	Cylindrical brush deck 850mm	x
0	2	A	Plate brush deck 1080mm	x

Table 6.1

## **6. Machine settings**

### 6.1.2 Battery and charger settings

In order to achieve optimum service life and performance of the batteries available for the machine, it is necessary to set the battery monitor, called LDS, and the charger to the correct battery type and capacity.

These settings are carried out in the menu items 0.3.X; 0.4.X and 0.5.X.

If the setting for a machine without charger (0.4.0), with charger and without communication (0.4.1) or for a charger with communication and free characteristic curve selection (0.4.2) is carried out in 0.4.x, the LDS must also be set correctly in 0.3.X.

With the charger settings 0.4.6 and 0.4.7, the LDS setting takes place automatically via the battery selection in 0.5.X.

Chapter 0.3.X is then not shown in the configuration menu.

## 6. Machine settings

### 6.1.3 Battery settings (LDS)

PzS and PzV are batteries with tubular type plates.



GiV and Pzv are encapsulated, completely maintenance-free gel batteries.

PzS are sealed, low-maintenance batteries containing liquid electrolyte. Regular checking of the electrolyte as well as topping up with distilled water are required here.

AGM batteries have glass mat separators.

The following designations are also used for monobloc batteries:

GiV = GF-Y; GF-V

PzS = FT

Trough batteries are available in the following versions:

EPzS / EPzB and EPzV

## 6. Machine settings

### 6.1.3 Battery settings (LDS)

Chapter	Configuration	Content	Description	B175R
0	3		<b>LDS Adjustment - Battery-Type (only for 0.4.0; 0.4.1 and 0.4.2)</b>	1
0	3	0	Crown w/o Offset	x
0	3	1	Crown	x
0	3	2	GIS, „Foreign“	x
0	3	3	GiS	x
0	3	4	PzS or PzB „Foreign“	x
0	3	5	PzS or PzB	d
0	3	6	GiV	x
0	3	7	PzV	x
0	3	8	AGM - only for Hoppecke batteries	x

Table 6.2

## **6. Machine settings**

### 6.1.4 Battery Charger

In this menu item (0.4.X), it is specified whether the machine features an integrated charger and whether this charger communicates with the machine control unit via CAN bus.

With chargers that communicate with the machine, there are various selection options. If the charger with a free characteristic curve selection is selected, the correct characteristic curve must be determined using the charger documents and then set correctly under 0.5.X. The column under 0.4.2 in Table 6.4 then applies to this setting. When selecting the chargers PzV (0.4.6) PzS (0.4.7), only the characteristic curves that can be operated with these chargers are shown under 0.5.X (see table 6.4 in columns 0.4.6 and 0.4.7)

Check and change the setting as described in Chapter 2.4 Configuration. The possible setting parameters are specified in Table 6.4.

## 6. Machine settings

### 6.1.4 Battery Charger

Chapter	Configuration	Content	Description	B175R
<b>0</b>	<b>4</b>		<b>Battery charger and Battery types</b>	<b>1</b>
0	4	0	w/o battery charger	x
0	4	1	battery charger w/o communication	x
0	4	2	Battery charger with communication (manual charging characteristics selection)	x
0	4	6	Battery charger with communication for PzV-batteries	x
0	4	7	Battery charger with communication for PzS/PzB-batteries	d

Table 6.3

## 6. Machine settings

### 6.1.5 Charging Characteristics

Chapter	Configuration	Content	Description			B175R
<b>0</b>	<b>5</b>		<b>Charging characteristic / Battery size</b>			
			für 0.4.2	für 0.4.6	für 0.4.7	<b>1</b>
0	5	0	LK0	--	--	
0	5	1	LK1	--	--	x
0	5	2	LK2	--	--	x
0	5	3	LK3	--	320Ah PzS	x
0	5	4	LK4	--	--	x
0	5	5	LK5	280Ah PzV	--	x
0	5	6	LK6	--	--	x
0	5	7	LK7	--	--	x
			See Charger manual	Automatic LDS setting		x

Table 6.4

## **6. Machine settings**

### 6.1.6 Charging characteristics for integrated charger

Not currently available.

## 6. Machine settings

### 6.1.7 Variant All wheel drive (A XC)

The all-wheel drive variant must be activated here if it is present in the machine.

Chapter	Configuration	Content	Description	B175R
<b>0</b>	<b>6</b>		<b>All wheel drive installed</b>	
0	6	0	only Front wheel drive	<b>d</b>
0	6	1	Front- and Rear wheel drive	<b>x</b>

Table 6.6

## 6. Machine Adjustments

### 6.1.8 SD-storage medium in dash board

This parameter must not be adjusted. Can currently lead to a complete failure of the machine.

Chapter	Configuration	Content	Description	B175R
<b>0</b>	<b>7</b>		<b>additional memory at the display</b>	
0	7	0	not available	<b>x</b>
0	7	1	available	d

Table 6.7

## **6. Machine settings**

### **6.2 Customer-specific settings (PPV)**

Different settings can be carried out at the machine using the programmable programme variants.

It can, e.g., be set whether the last error that occurred in the machine is shown when turning on the machine or not.

Check and change the setting as described in Chapter 2.4 Configuration. The possible setting parameters are specified in the following table.

## 6. Machine settings

### 6.2 Customer-specific settings (PPV)

Chapter	Configuration	Content	Description	B175R
<b>2</b>	<b>0</b>		<b>Last error indication after switching on machine</b>	
2	0	0	Deactivate	x
2	0	1	Activate	d
<b>2</b>	<b>1</b>		<b>Water level when switching on scrubbing</b>	
2	1	0	Last stage set	d
2	1	1	Preset level (4)	x
<b>2</b>	<b>3</b>		<b>Water level when switching on TOOL (menu option only appears when TOOL option is activated!)</b>	
2	3	0	Last stage set	d
2	3	1	Preset level (4)	x
<b>2</b>	<b>4</b>		<b>Speed-dependent water amount</b>	
2	4	0	Deactivate	x
2	4	1	Activate	d

Table 6.8

## 6. Machine settings

### 6.2 Customer-specific settings (PPV)

Chapter	Configuration	Content	Description	B175R
<b>2</b>	<b>7</b>		<b>Silence Mode Setting (only if the option has been activated)</b>	
2	7	0	not saved	x
2	7	1	saved	d
<b>2</b>	<b>8</b>		<b>Acoustic Alarm Tone Interval (menu option only appears when the Acoustic Alarm option is activated!)</b>	
2	8	0	Standard	d
2	8	1	Alternative	x
<b>2</b>	<b>B</b>		<b>Highest water stage independent of machine speed</b>	
2	B	0	No	d
2	B	1	Yes	x

Table 6.9

## **7. Mechanical components**

### **7.1 Squeegee**

#### **Squeegee connection**

**Installation note:**

1. Hook squeegee connection into chassis.
2. Align parallel to floor and tighten bolts.

**Squeegee connection default setting:**

1. For default setting of adjusting bushing see figure 7.1 (dimensions 9 and 8 mm).
2. Screw on the squeegee which is intended for the machine and align via the adjusting bushing so that the sealing strips are vertical against the floor (lift slightly and allow to fall).
3. Align castors using the method shown and adjust them so that they are 7 mm above the ground.
4. If necessary, adjust the squeegee inclination to the ground conditions.

# 7. Mechanical components

## 7.1 Squeegee

### Squeegee connection

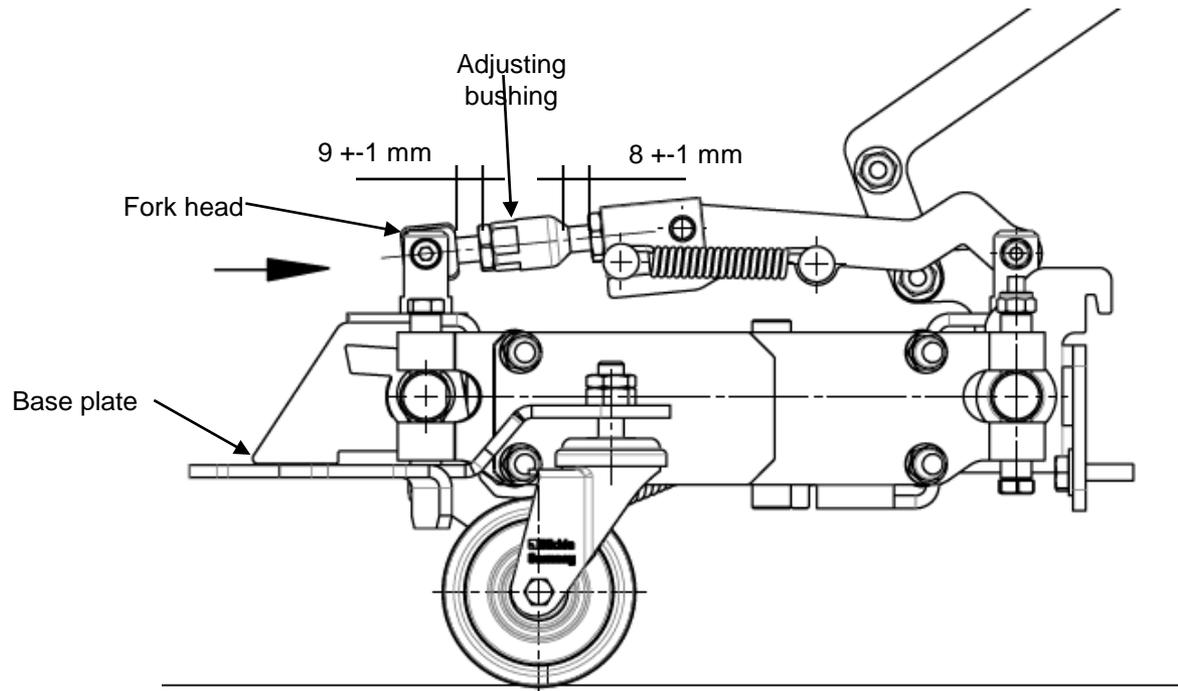


Figure 7.1

# 7. Mechanical components

## 7.1 Squeegee

### Adjusting the sealing strips / inclination

The correct inclination adjustment is decisive for:

- ensuring that the sealing strips of the squeegee are lying evenly on the ground over their contact surface
- ensuring that the squeegee runs quietly and evenly during the suction process.

1. Place the machine on a level surface and lower the squeegee using the squeegee key figure 7.2b -46.

2. Loosen the lock nuts (figure 7.2a-A) and adjust the squeegee by turning the adjusting bushing (figure 7.2a-B) so that the ends of the sealing strips are just about touching the ground.

#### **Turning the adjusting bushing clockwise:**

The distance between the sealing strip and the ground increases at the ends figure 7.2a.

#### **Turning the adjusting bushing counter-clockwise:**

The distance between the sealing strip and the ground decreases at the ends figure 7.2b.

3. Turn on the machine and check the suction pattern. When driving, the sealing strips must be turned over evenly everywhere (centre and outside).

4. Tighten the lock nuts.

# 7. Mechanical components

## 7.1 Squeegee

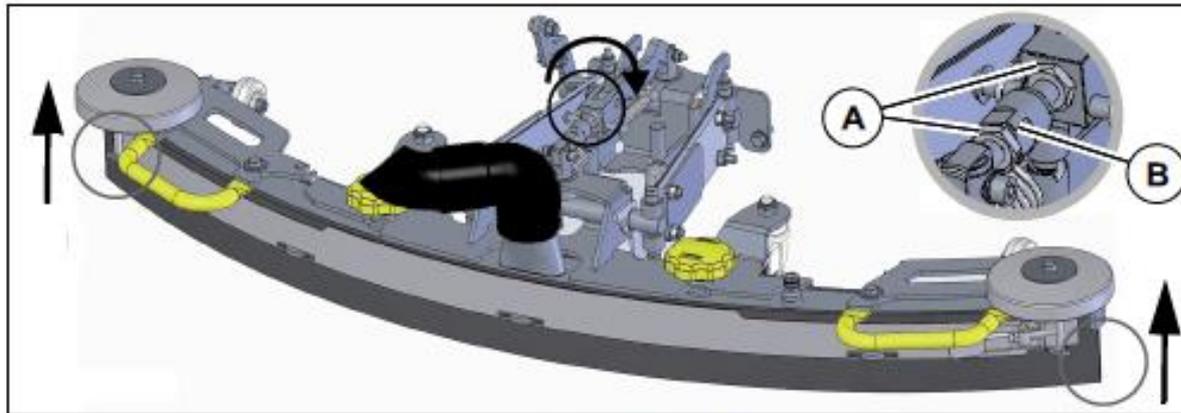


Figure 7.2a

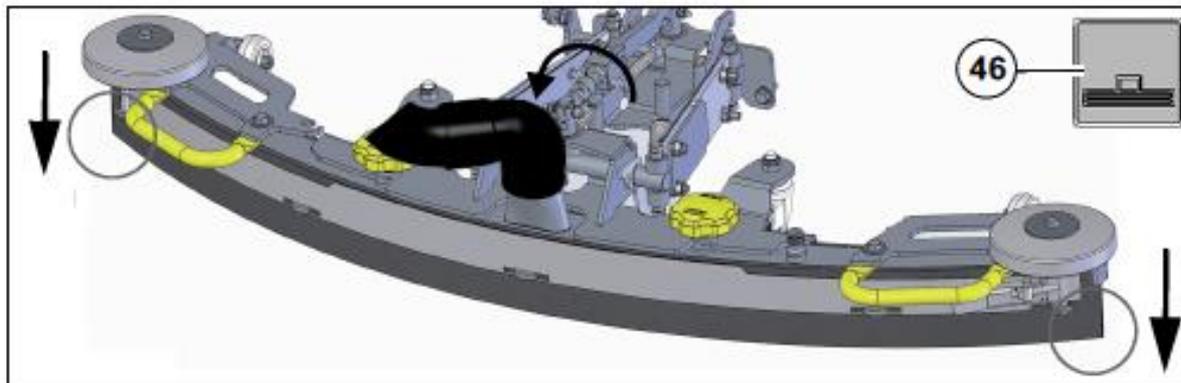


Figure 7.2b

# 7. Mechanical components

## 7.1 Squeegee

### Height adjustment

The height adjustment (X) of the supporting rollers Fig. 7.4 has been set to 7 mm in the factory. If striping still occurs despite optimum inclination adjustment, readjust the distance between the supporting rollers and the lower edge of the sealing strip.

1. Place the machine on a level surface.
2. Lower squeegee. The sealing strips must now be resting vertically onto the floor.
3. Loosen nuts (figure 7.4 B) and adjust distance between supporting roller and ground as per the table.
4. Tighten nuts.

Distance from floor (X)	Use
<7 mm	Very smooth floor surfaces, e.g. coated screed, PVC, linoleum
<b>7 mm</b>	<b>Standard setting</b>
>7 mm	Very uneven floor surfaces, e.g. poorly laid tiles (water does not drain off)

Figure 7.3

## 7. Mechanical components

### 7.1 Squeegee

#### Height adjustment

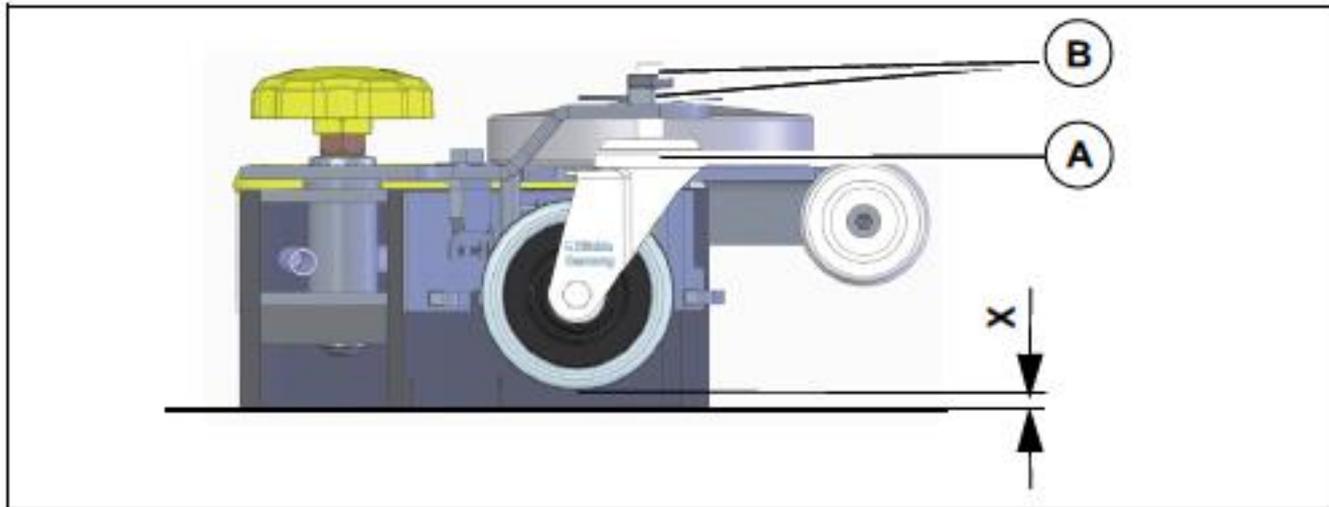


Figure 7.4

## **7. Mechanical components**

### **7.2 Plate brush heads**

Plate brush heads in two working widths (90 cm and 108 cm) are used with the Scrubmaster B175 R.

Both brushes are driven by a separate motor.

The left and right brushes on the plate brush unit both rotate clockwise. This is needed for automatic brush decoupling and automatic threading.

## **7. Mechanical components**

### **7.3 Cylindrical brush heads**

A deck with a working width of 85 cm is used as the cylindrical brush unit for the Scrubmaster B175 R.

The cylindrical brush unit can also be extended with a side brush unit.

Use the guide rail to adjust the dirt hopper ensuring the brush strip is positioned all-round on the housing and the dirt hopper can still be slightly inserted.

## **7. Mechanical components**

### **7.4 Brush head lifting**

#### **7.4.1 Potentiometer in the lifting element for the brush head**

The lifting element for the brush head features integrated position detection. The position detection is supplied with 24V via the machine control unit A01.X13:1 (+) and A01.X13:7 (-). The reference signal for the brush head position can be measured against supply plus or minus at the central control unit at A01.X15:5.

The power output of the lifting element is A01.X11:1 and 4.

## **8. Water pump**

The water pump for supplying the operative units is connected at the central control unit at A01.X12:1 + 11. It is operated via a clocked voltage to deliver different quantities of water for the stages. The voltage values measured here depend on numerous factors; it is therefore not possible to specify exact values. Decisive is that the voltage values differ considerably from the lowest to the highest stage.

Checking of the actual water quantities is preferable.

During the voltage measurement it must be taken into consideration whether the dependence of the water quantity on the travel speed has been activated. This can be activated by the operator in menu item "Maintenance".

## 8. Water pump

### 8.1 Water quantities

The water quantities in the 5 water stages for the three brush units are listed in the following table.

	Water quantities (l per min)		
	Plate brush 900 mm	Plate brush 1080 mm	Roller brush 850 mm
Stage 1	1.6	1.6	1.3
Stage 2	3	3	2.4
Stage 3	4.5	4.5	3.6
Stage 4	5.9	5.9	4.7
Stage 5	7.3	7.3	5.8

## **8. Water pump**

### **8.2 Water pump standstill detection**

**If the pump cannot delivery freely because the water cannot run freely through the hoses to the brush, so-called water pump standstill detection comes into effect.**

#### **Automatic water pump standstill detection:**

The electronics offers the option to protect the water pump if the pump can no longer convey freely.

This means: If the pump sucks water from the tank but cannot further convey the water to the brushes, pressure builds up behind the pump.

Without protection from the electronics, the pump will now continue to pump against this pressure and may be damaged.

The electronics detects that the pump cannot convey freely and automatically switches the pump OFF for 2 seconds.

After these 2 seconds have expired, the pump is briefly switched back on while simultaneously measuring whether the pump can now convey freely again or whether the water supply to the brushes is still blocked.

If the pump can convey freely, it remains switched on in the selected stage.

If there is, however, still counter pressure, the pump is switched off again for 2 seconds. This is repeated until the error has been eliminated.

## 9. Drive

The drive control features its own diagnostics and a self-test.

Therefore, the function of the drive control unit is locked when turning on the machine if the speed control potentiometer is in neutral or is not recognised as being in neutral.

The same behaviour applies after the seat contact switch has opened and is closed again.

The speed control potentiometer must also be in neutral when the seat contact switch is closed, or to be more precise it must be detected as being in neutral by the drive control unit.

If the drive control unit does not recognise that the speed control potentiometer is in neutral, it shows flashing signals (LED) at the drive control unit.

These messages are transferred to the machine control unit via the CAN bus, where they are evaluated.

## 9. Drive

### 9.1 DMC drive control unit (AC motor)

The DMC drive control unit features a diagnostic input. Unless clearly noted in the service documents, changes to the preset values and parameters is generally **not** permitted. Currently, only the diagnostics with flash codes for the LED indicator is used.

#### 9.1.1 Connection description:

M1; M2; M3 – motor connections

B+; B- – battery power supply

A – control connections (16-pole)

B – programming plug CAN bus (8-pole)

C – motor feedback (6-pole)  
(encoder and temperature)

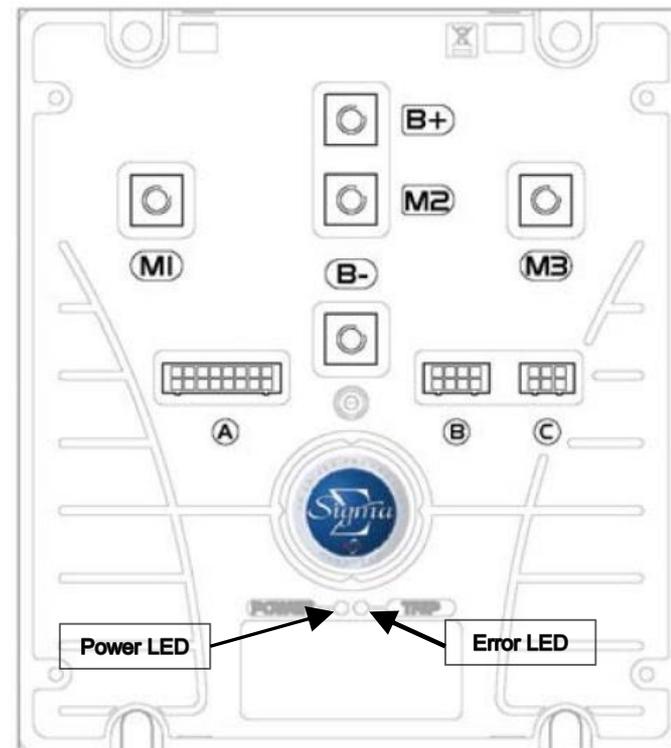


Figure 9.1

## **9. Drive**

### **9.1.1 Connection description**

- A1 – forwards (active when B- is connected) from A02:X109.3
- A2 – reverse (active when B- is connected) from A02:X109.4
- A3 – release for driving from speed control potentiometer switch B03 (active when B- is connected)
- A4 – release from machine control unit (seat contact) (active when B- is present) from A01/X13.11
- A5 – not used
- A6 – with single wheel drive at battery minus via bridge on X11/ not used for 4-wheel drive
- A7 – foot brake input from switch S10; if B- is connected, the machine is slowed down until standstill
- A8 – supply speed control B03 (negative)
- A9 – setpoint from speed control B03
- A10 – control voltage from key switch (36V)
- A11 – control power supply for small consumers (max. 3A) (e.g. K02 and brake)
- A12 – main relay release (B-) –K02 – power supply for drive control unit
- A13 – brake release (B-)
- A14 – not used for single wheel drive / safety control from A05:C3 with 4-wheel drive
- A15 – 12 V supply for encoder
- A16 – 5 V supply for speed control B03

# 9. Drive

## 9.2 Service codes DMC control unit

Code	Error description	Cause	Remedy
<b>Warning - reduces the output, resets itself (if possible).</b>			
1	Not used	--	--
2	Low voltage	Low battery voltage (<18 V)	Charge the battery
3	Not used	--	--
4	High voltage	High battery voltage (usually during braking) (U> 60 V)	Extreme downwards travel (pay attention to machine specifications) defective battery?
5	Hot drive motor	Vehicle used outside the specification? Is the motor OK?	Let the motor cool down
6	Hot control unit	Vehicle used outside the specification? Are the control unit and cooling OK?	Allow drive control unit to cool down
7	Parameters outside the permissible range	One or several parameters are outside the valid range	Replace the control unit
8	Standard parameters loaded	Standard parameters have been loaded	If error persists, replace drive control unit.

## 9. Drive

### 9.2 Service codes DMC control unit

Code	Error description	Cause	Remedy
<b>Control error - standard braking to standstill - requires neutral cycle to reset.</b>			
9	EEPROM cannot be addressed	No access to EEPROM	Internal voltage below 12 V. Replace the control unit
10	Two driving directions selected	Forwards and reverse are active at the same time	Check the driving direction switch and the wiring (- A04.A1/A2)
11	Seat switch not closed or timeout	No signal from machine control unit	Check the wiring from -A04.A4 (connection to battery minus)
12	Incorrect start sequence	Forwards, reverse or FS1 (-A04.A3) active before key switch	Observe the start sequence: Key switch / seat switch, driving direction switch, speed control potentiometer switch (jammed)
13	Accelerator pedal signal active when switching on	Accelerator pedal above 50% when switching on	Check the switch (mechanic and electrical) and wiring
14	CAN bus	Stop via CAN	The stop of the drive control is requested by the machine control unit

## 9. Drive

### 9.2 Service codes DMC control unit

Code	Error description	Cause	Remedy
<b>Soft error - drive control unit stops immediately - requires neutral cycle to reset.</b>			
15	Voltage is too low	Internal 12 V supply is too low	Check the battery / charge condition
16	Not used	--	--
17	Voltage is too low	Battery voltage is too low	Check the battery / charge condition
18	MOSFET short circuited at the high side	MOSFET short circuited on the plus side	Check the motor insulation; if OK, replace the control unit
19	Error in the 4-wheel drive control unit	Check message at control A05	Check message at control A05

## 9. Drive

### 9.2 Service codes DMC control unit

Code	Error description	Cause	Remedy
<b>Hard error - drive control unit stops immediately - requires neutral cycle to reset.</b>			
20	Motor overcurrent limitation active	Motor overcurrent	Check motor and motor wiring
21	Contactors coil drive short circuited	Coil relay or magnetic brake short circuit	Check the contactor (-K02) and the magnetic brake (-M01) and the wiring thereof
22	Surge protection	Battery voltage too high (usually during braking) $U > 67 \text{ V}$	How are the ramps on which the machine is operated? If OK, replace the control unit
23	MOSFET short circuited on the minus side	MOSFET short circuited at minus side (at standstill)	Check the motor insulation; if OK, replace the control unit Defective battery
24	Hardware safety defective	Hardware safety circuit not working	Check wiring, replace control unit
25	Main contactor error	Contactors not closing within the pre-programmed time	Check main contactor and wiring Battery or supply voltage too low Emergency stop key switch circuit active No closed power circuit from B+ to B- (fuse -F04)

# 9. Drive

## 9.2 Service codes DMC control unit

Code	Error description	Cause	Remedy
<b>Hard error - drive control unit stops immediately - requires neutral cycle to reset.</b>			
26	Unused	--	--
27	MOSFET short circuited on the minus side	MOSFET short circuited on the minus side before the main contactor closes	Check the motor insulation; if OK, replace the control unit
28 S01	Wire break error	Motor connection (phase)	Check cabling -A04 <=> -M01
28 S02	Wire break error	Magnetic brake short circuited	Check the cabling
28 S03	Wire break error	Magnetic brake wire break	Check the cabling
28 S04	Wire break error	Motor sensor wire break	Check the cabling
28 S05	Wire break error	Accelerator wire break	Check the cabling of Hall sensor -B03
28 S06	Wire break error	Motor temperature sensor wire break	Check the cabling

## 9. Drive

### 9.3 Brake – manual release of the brake

In order to also move the machine without a power supply (no battery installed or other drive problems), the magnetic brake can be released manually.

In order to push the machine, carry out the following steps:

1. Loosen the bolts of the cover to the drive using the supplied socket wrench and remove the cover.
2. Remove the pin **Fig. 9.2-A** from the holder and screw it into the ring **Fig. 9.2-B**.
3. In order to unlock the parking brake, slightly pull the pin upwards **Fig. 9.2-C** and simultaneously push the machine.
4. Disassembly is in reverse order.

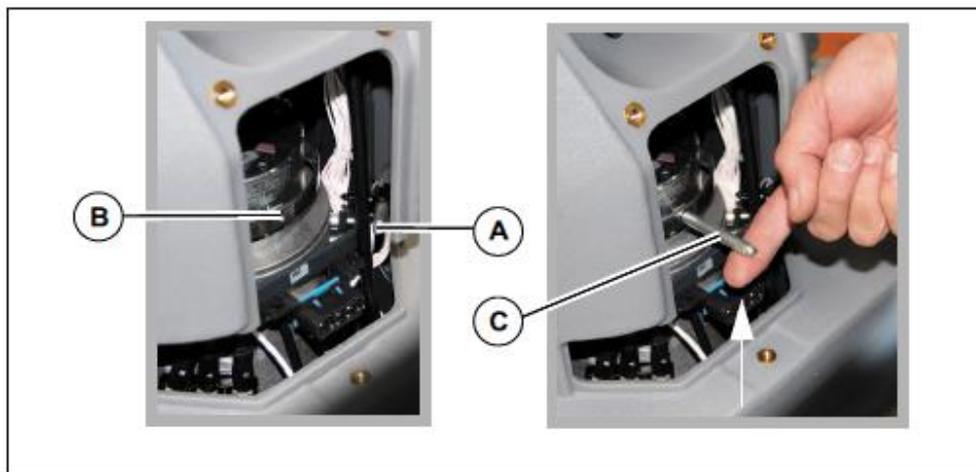


Figure 9.2

## **9. Drive**

### **9.4 Brake – testing the brake function**

The brake must be capable of stopping the machine on a level road within 0.19 m per km/h.

At a maximum speed of 8 km/h, this means that the maximum braking distance must not exceed 1.52 m. Check this after carrying out work at the brake system and as part of regular maintenance.

This value must be achieved when actuating the brake tip switch S10.

## 10. Service messages

Service-Code	Description	Remedy
1.2.5.1.	Thermo switch brush motor 1 (left)	Check current consumption of brush motor (-M03) and wiring of the thermo switch
1.2.5.2.	Thermo switch brush motor 2 (right)	Check current consumption of brush motor (-M04) and wiring of the thermo switch
1.2.6.1.	Brush motor 1 (left) overload	Short circuit in the brushmotor (-M03) or in it's wiring; Brush motor overload
1.2.6.3.	Lifting element brush deck	Overload of the brush deck lifting element or short circuit
1.2.6.8.	Brush motor 2 (right) overload	Short circuit in the brushmotor (-M04) or in it's wiring; Brush motor overload
1.4.6.1.	Lifting element squeegee	Overload of the squeegee lifting element; short circuit
1.4.6.3.	Blocking protection Suction motor 1	Short circuit in the suction motor (-M16) or in it's wiring
1.4.6.4.	Blocking protection Suction motor 2	Short circuit in the suction motor (-M17) or in it's wiring

# 10. Service messages

Service-Code	Description	Remedy
1.5.5.1.	Malfunction Filling sensor solution tank	Sensor value out of it's range; recalibrate the sensor
2.2.5.1.	Thermo switch broom motor	Current consumption broom motor and wiring thermo switch (option pre sweep)
2.3.5.1.	Thermo switch side broom motor and right left	Current consumption side broom motors and wiring thermo switches (option side broom)
2.3.6.1	Blocking protection side broom motor and right left	Short circuit in the side broom motors or in it's wiring (option side broom)
2.3.6.4.	Blocking protection side broom lifting element	Lifting element side broom overloaded (Variant cylindrical brush deck)
3.1.1.2.	Fleetrekorder communication interruption	Check wiring between machine control unit and Fleetrecorder (CAN-Bus)
3.1.5.2.	Additional power supply during charging	During charging process; Invalid power supply in Key switch circuit
3.1.6.E.	Power fuses (group signal)	Check fuses on the -A01 board
3.2.6.5.	Backup battery weak	Replace backup battery; Type CR2032
3.2.6.6.	Backup battery empty	Replace backup battery; Type CR2032

## 10. Service messages

Service-Code	Description	Remedy
3.3.1.1.	Service intervall expired	Reset the service intervall with the Hako diagnosis
3.3.1.5.	SD-Card on the Display	re format the SD-card with the diagnosis system, if error repeats, replace the SD-card with a new one
3.3.6.2.	Group signal low power output overload	Overload os small cosumer outputs (e.g. buzzer, magnetic valve. Etc.)
3.4.1.1.	Malfunction drive control unit; pre selection of driving direction implausibly or interrupted wiring accelerator	Check wiring of the accelerator -B03
3.4.1.2.	Malfunction drive control unit front	see blinking code on drive control unit
3.4.1.4.	Malfunction drive control unit rear	see blinking code on drive control unit
3.4.5.1.	over temperature drive motor front	check the wiring of the drive motor thermo switch. Is the machine used outside it´s specification?
3.4.5.2.	over temperature drive motor rear	check the wiring of the drive motor thermo switch. Is the machine used outside it´s specification?
3.4.5.b.	Drive motor 2 overheated (Option 3-wheel drive)	See blinking code at the drive control unit; check the wiring of the drive motor thermo switch. Is the machine used outside it´s specification?
3.6.6.4.	Seat contact switch manipulation	See chapter 2.2.3.

# 10. Servicemeldungen

Service-Code	Description	Remedy
4.1.3.1.	Communication problem drive control unit front	CAN-Bus-error between machine control unit and drive control unit (-A01 => -A04)
4.1.3.2.	Communication problem drive control unit front	CAN-Bus-error between machine control unit and drive control unit (-A01 => -A04)
4.2.3.1.	Communication problem drive control unit rear	CAN-Bus-error between machine control unit and drive control unit (-A01 => -A05)
4.5.2.1.	Communication problem battery charger	CAN-Bus-error between machine control unit and battery charger (-A01 => -G10)
4.5.2.5.	Display communicatin problems	Communication between display and control unit interrupted (message is generated by the display) during switch on of the machine.
4.5.3.5.	Display communicatin problems	Communication between display and control unit interrupted (message is generated by the display). Appears during operation of the machine.

## 10. Service messages

Service-Code	Description	Remedy
4.6.1.2.	Internal malfunction of machine control unit	Replace the control unit (-A01)
4.6.1.3.	Malfunction of internal software	Replace the control unit (-A01)
5.8.7.1.	Malfunction battey charger- charger related problems.	See battery charger manual - Malfunction
5.8.7.2.	Malfunction battey charger- battery related problems.	See battery charger manual - Malfunction
5.8.7.3.	Battery charger; Wrong charging characteristic adjusted	See blinking code at the drive control unit
5.8.7.4.	Charging configuration of the machine control system doesn't match the charger	Only during the charging. Problems in the Kommunikation with the display. Stop the charging; operate the mache for minimum 10 sec; switch off the machine and restart the charging.
7.1.5.1.	USB-Output low voltage	Short circuit at the output; Overload of the USB Output

## **10.1 Service alarm clock – 3.3.1.1**

The service alarm clock is set via the Hako diagnostic system.

# 11 Battery charger

## 11.1 Operating manual



### Operating Instructions

page: 1  
of: 2

Hako GmbH  
D-23843 Bad Oldesloe  
Hamburger Straße 209-239  
Telephone: (04531) 806-0

Battery Charger  
Type: E230 G 36/35 B45-FPO  
Hako order no.: 97147524

Date	Rev.-No.
19.04.2018	04

Controlled battery charger for lead batteries with liquid and solid electrolyte in SNT technology

**controlled backup charging – reverse battery protection – protection against short circuit – constant conservation of charge – low AC-current**

#### **General information**

The housing of the battery charger is made of enclosed sheet metal steel.

The mains connection is made via a special mains connection cable.

Mains fuse (F1): Micro fuse 5x20 mm. Back-up only through value resembles T 10 AH 250V.

The battery charger is protected against short circuits and equipped with a reverse battery protection.

The operating status is indicated with an external LCD-display.

The battery charger should only be opened by qualified personnel.

The charger is especially designed for cleaning machines of the type Scrubmaster B175R and has to be used only in combination with these machines.

**Attention: Non-rechargeable batteries can not be charged with this battery charger.**

# 11 Battery charger

## 11.1 Operating manual

### Initial operation

The battery type used in the machine must be set before commissioning (customer service).

The mains connection (230V AC, 50-60Hz) has to be implemented with a delay-action fuse.

The charger is connected to the mains with the mains plug.

To charge the battery, follow the instructions of the battery manufacturer!

### Important note

Before using a new battery for the first time, initial operation charge is always required (please see also battery manual). This is accomplished by doing a regular charging process. Only after the charge cycle is fully completed with the "End of Charge" indication, the machine can be used.

For maintenances-free PzV-batteries an additional 15h compensation charge is recommended.

### Sequence of connection

The charger has to be disconnected from the mains supply before connecting/disconnecting the charge plug/cables to the battery.

The battery charger complies with the protection regulations of the low voltage guideline 2014/35/EU and the guideline for electromagnetic compatibility 2014/30/EU.



EN 60 335-1  
EN 60 335-2-29  
EN 60 335-2-72

# 11 Battery charger

## 11.1 Operating manual



### Operating Instructions

page: 2  
of: 2

Hako GmbH  
D-23843 Bad Oldesloe  
Hamburger Straße 209-239  
Telephone: (04531) 806-0

#### **Functional description and monitoring of charging process**

The battery charger begins to charge automatically as soon as the battery is connected, the mains plug is plugged in and the machine has enabled the charging process. The driving-off protection is a potential-free contact preventing the use of the machine during the charging process.

At first the battery connections are checked at the start of battery charging. During charging, the charging states are sequentially run through and shown on the display. After completing the backup charge, the battery is completely charged. Afterwards the device automatically switches to end of charge with a constant conservation of charge.

An uninterrupted charging process is a prerequisite for a properly fully charged battery. Interrupting the charge in the meantime can cause loss of capacity and premature battery failure.

**“Battery not connected” is detected immediately when switching on the battery charger during operation and also at the latest 60 seconds after disconnecting the battery.**

**Please make sure that there is no reverse connection of the battery during this time!**

**When the battery is connected again, the charger switches on again.**

# 11 Battery charger

## 11.1 Operating manual

### Indication of operating status by the external display

operating status during charging	LCD-display				
					
Main charge $V_{Bat} < 2VpC$	X				
Main charge		X			
Backup charge			X		
End of charge/Conservation of charge				X	
operating status during malfunction*					details
Battery malfunction (battery missing, reverse polarity or defective)				X	$V_{Bat} < 0,2 VpC$
Battery voltage (during start-up too high)				X	$V_{Bat} > 2.4 VpC$ automatic switch on, as soon as $V_{Bat} < 2.4 VpC$
Time malfunction (battery capacity too high, battery deeply discharged or defective)		X			$V_{Bat} < 1.5 VpC$ for longer than 40 minutes; constant current phase ( $I_1$ ) too long
Temperature malfunction (temperature in the charger too high)			X		charger overheated, charger polluted, ambient temperature too high
System malfunction (other defect)				X	internal device error (case of service)

\* If there is a malfunction, the battery frame is flashing once a second.

# **11 Battery charger**

## **11.1 Programming the charger**

The integrated charger is adjusted and parametrised exclusively via the machine control unit. (See Chapter 6.1.4 and 6.1.5)

## 12. Options

Both factory and field options are available for the Scrubmaster B175 R series. The factory options are only available for new machines ex factory. The field options can be retrofitted in the machines.

The parameters for the options that require a release via the machine's control system are specified in Table 12.1.

These options include:

- Silence Kit (suction turbine rotating speed reduction - activated by default)
- Chemical dosing
- Scrubbing-suction tool
- Front-mounted sweeper attachment
- Working light
- Fleet-Recorder
- Side brush unit (only for the roller brush unit)
- Second suction turbine (default with 108 cm rotating brush unit)
- Flashlight on a pole / on the roof
- Spray tool / spray nozzle

## 12. Options

To adjust and check these values, access the programming level as described in Chapter 2.4 and enable the options.

The “silence kit” is the default setting in all machines, but can be deactivated.

The mechanical installation of the field options, if necessary, is described in the supplied instructions for these field options.

# 12. Options

Chapter	Configuration	Content	Description	B175R
<b>1</b>	<b>0</b>		<b>Silence Kit</b>	
1	0	0	Not present	x
1	0	1	Present	d
<b>1</b>	<b>1</b>		<b>Warning signal (visual and acoustic)</b>	
1	1	0	Not present	d
1	1	1	Present	x
<b>1</b>	<b>2</b>		<b>Chemical dosing</b>	
1	2	0	Not present	d
1	2	1	Present	x
<b>1</b>	<b>3</b>		<b>TOOL</b>	
1	3	0	Not present	d
1	3	1	Present	x

## 12. Options

Chapter	Configuration	Content	Description	B175R
1	4		<b>Front-mounted sweeper attachment</b>	
1	4	0	Not present	d
1	4	1	Present	x
1	6		<b>Working light</b>	
1	6	0	Not present	d
1	6	1	Present	x
1	7		<b>Fleet-Recorder</b>	
1	7	0	Not present	d
1	7	1	Present	x
1	8		<b>Side brush unit</b>	
1	8	0	Not present	d
1	8	1	Present	x

## 12. Options

Chapter	Configuration	Content	Description	B175R
<b>1</b>	<b>9</b>		<b>Second suction turbine</b>	
1	9	0	Not present	d
1	9	1	Present	x
<b>1</b>	<b>A</b>		<b>Rotating beacon</b>	
1	A	0	Not present	d
1	A	1	Present	x
1	B		<b>TOOL - Spray</b> (for cleaning of waste water tank)	1
1	B	0	Not present	d
1	B	1	Present	x

## 13. Notes

## **13. Notes**