


Jacking Points

Jacking point front

The front jacking points are located under the left and right steps of the machine.

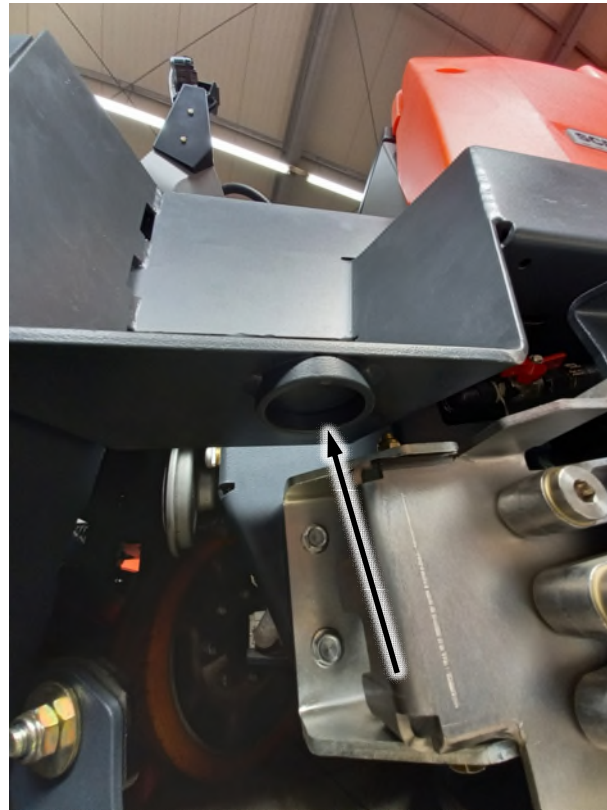

Jacking point rear

The rear jacking points are located on the left and right side of the chassis, behind the rear wheels.



B400 R: Jacking point

Jacking point rear

To reach the left jacking point, the bracket for the draining hose from solution tank has to be disassambled.

