

Assembly manual

view.X.live (5302.14)



Attention

The optional view.X.live may only be changed or installed and removed by Hako service personnel!




Note

Configure the data logger at the following web address: <https://hfmservice.hako.com>
Send an e-mail to activate your account to the following address: hfm@hako.com.
You will receive precise instructions on how to proceed.

1 Affixing the labels

Write the serial number of the machine on the label using a waterproof pen.
Affix the "Serial number" label (A) shortened to 40 mm.

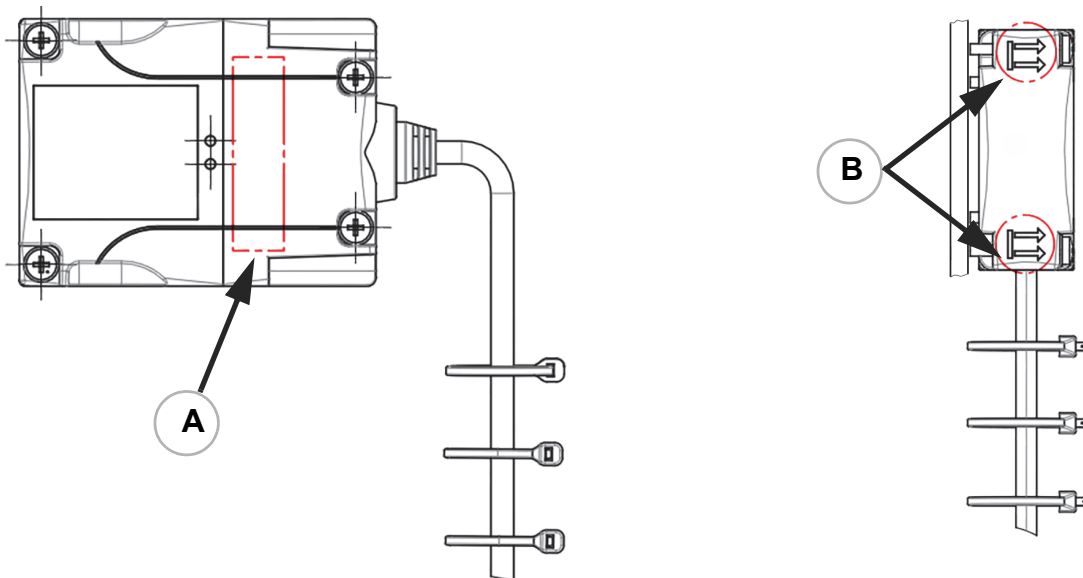


2 Observing the fitting position

Observe the fitting position (B) to ensure correct functioning of the GPS signal!

3 Observing the tie-down position

For the tie-down position (C), see electrical documentation "Cable routing" of the respective machine.

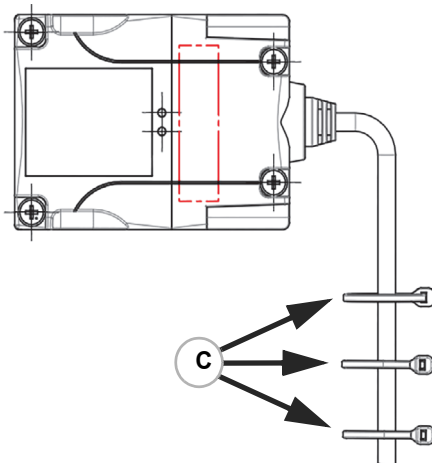


4 LED display

The LED display indicates the following:

- LED flashes: No mains available
- LED lights up: Mains available (configuration possible)

5 Settings in the configuration menu

The optional view.X.live must be activated via the configuration menu, in the machines from B120 R onwards.

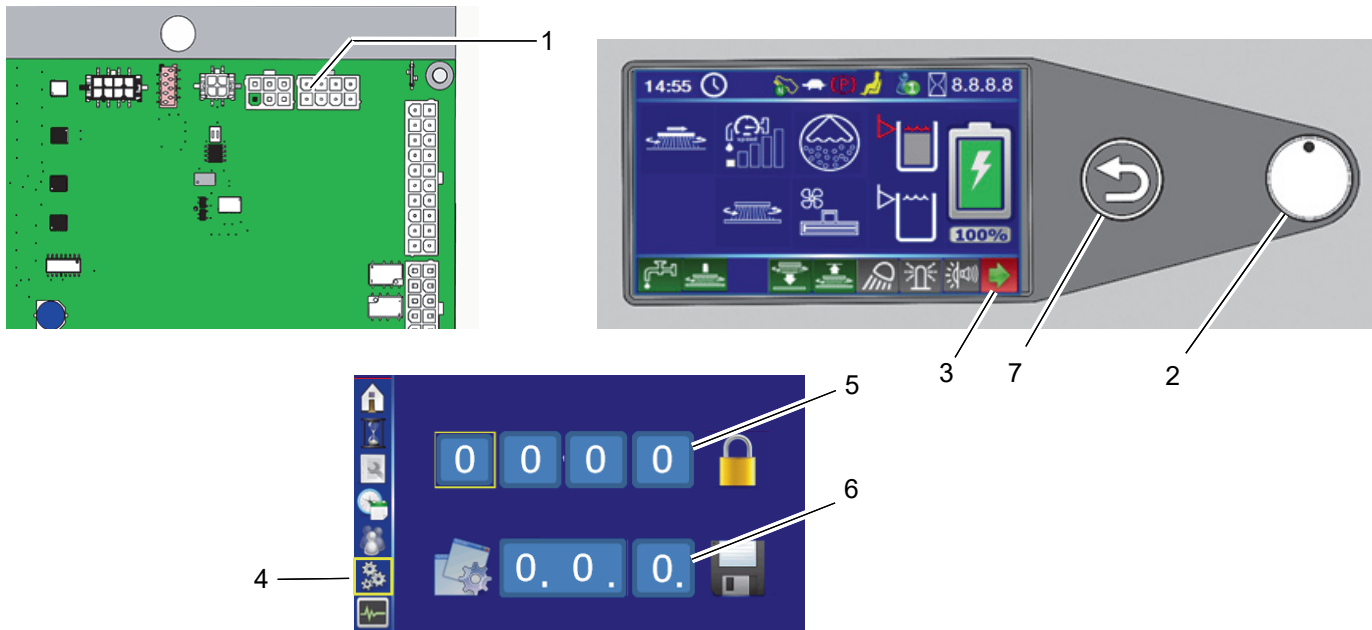

Optional	Value
view.X.live	1. 7. 1.

Requirements:

- Battery has been inserted.
- 4-digit code or diagnostic connector 97097737 present.

If the diagnostic connector is used, plug the diagnostic connector into the X20 slot of the A1 controller (1).

Setting:

1. Turn on the machine.
2. Select the arrow soft key (3) on the control panel using the turn-push knob (2) and press to access the sub-menu.
3. Select the configuration menu in the sub-menu (4).
4. Enter the 4-digit code in the configuration menu at the top (5):
 - Rotate the turn-push knob until the required field is reached.
 - Press the turn-push knob, then rotate to set the value.
 - Press again to save the value.

Alternatively, use the diagnostic connector!

5. In the configuration menu at the bottom (6), set the value of the option and save by pressing the turn-push knob. After confirming the last digit, "OK?" appears. Press the turn-push knob again to save the value. Saved value is displayed in green. If the value is not to be saved, exit the menu using the return key (7).

Assembly manual

view.X.live (5302.14)

6 Configuring the data logger

1. Call up the account at <https://hfm.service.hako.com>.
2. After connecting the data logger in the vehicle, wait until the green LED lights up continuously.
3. Log in and click the "Konfiguration" button.
4. Enter the IMEI number, machine SN and, if available, the customer order number.
Click "OK".

7 Live test

1. Turn off the machine and wait until the data logger is completely off. The LED is black.
2. Turn the machine back on and wait until the green LED lights up continuously.
3. Log in at <https://hfm.service.hako.com> and click the "livetest" button.
4. Enter the IMEI number and click "Start".

8 Installation situation

The illustration shows the view.X.live (D) of the Scrubmaster B260 R. The installation situation is similar for other machines.

The plug is located on the left under the footplate when standing in front of the machine.

