



**KS 45 "BRIGGS & STRATTON INTEK PRO 206"**

From serial n° 3295

<b>WIRING DIAGRAM</b>	
<b>1</b>	<b>Controls board</b>
<b>2</b>	<b>Chassis</b>
<b>A</b>	<b>Horn push button</b>
<b>B</b>	<b>Switch</b>
<b>C</b>	<b>Filter-shaker push button</b>
<b>D</b>	<b>Negative pole</b>
<b>E</b>	<b>Electromagnetic switch</b>
<b>F</b>	<b>Negative pole</b>
<b>G</b>	<b>Battery 12V-45A</b>
<b>H</b>	<b>Engine Briggs &amp; S.</b>
<b>L</b>	<b>Microswitch</b>
<b>M</b>	<b>Safety switch</b>
<b>N</b>	<b>Electric filter shaker</b>
<b>P</b>	<b>Horn</b>
<b>Q</b>	<b>Clamp</b>
<b>R</b>	<b>Diode original</b>
<b>S</b>	<b>Fuse 16A</b>
<b>T</b>	<b>Multi voltage flashing light</b>
<b>U</b>	<b>Microswitch</b>
<b>V</b>	<b>Governor</b>
<b>Z</b>	<b>Turning off</b>
<b>AA</b>	<b>Starting motor</b>
<b>AB</b>	<b>Alternator's outlet</b>