

B120R NOT TURNING ON (off board charger)

MACHINE FUSES

CHECK CONTINUITY ON THE FOLLOWING FUSES:

FO2/FO3/FO4/FO5/FO20

BOARD FUSES

CHECK CONTINUITY ON THE FOLLOWING FUSES:

F300/F500/F501

KEYSWITCH (SO1)

POWER AT TERMINAL UBATT

(WITH KEY ON) POWER AT TERMINALS 1 & 2

DRIVE CONTROLLER (AO4)

(WITH KEY ON) POWER AT A/10

MAIN CONTROLLER (AO1)

(WITH KEY ON) POWER AT X8/2

CONTROL PANEL (AO2)

(WITH KEY ON) POWER AT X3/1