

B120R NOT TURNING ON (on- board charger)

MACHINE FUSES

CHECK CONTINUITY ON THE FOLLOWING FUSES:

FO2/FO3/FO4/FO5/FO20

BOARD FUSES

CHECK CONTINUITY ON THE FOLLOWING FUSES:

F300/F500/F501

ON-BOARD CHARGER (WITH KEY ON)

CHECK FOR 24VDC AT X9.1

CHECK FOR 24VDC AT X9.4

CHECK FOR 24VDC AT X9.3

KEYSWITCH (SO1)

POWER AT TERMINAL UBATT

(WITH KEY ON) POWER AT TERMINALS 1 & 2

DRIVE CONTROLLER (AO4)

(WITH KEY ON) POWER AT A/10

MAIN CONTROLLER (AO1)

(WITH KEY ON) POWER AT X8/2

CONTROL PANEL (AO2)

(WITH KEY ON) POWER AT X3/1