

## Chapter 0: Basic Adjustments

Chapter	Configuration	Content	Description	B400R
0	0		<b>Hardware Identification</b>	
0	0	4	Modul Control 36V	d
0	1		<b>Machine-Type</b>	
0	1	A	B400R	d
0	2		<b>Brush decks</b>	1
0	2	9	Plate brush deck 1230mm	x
0	2	C	Plate brush deck 1550mm	d
0	3		<b>LDS Adjustment - Battery-Type</b>	1
0	3	0	Crown w/o Offset	x
0	3	1	Crown	x
0	3	2	GIS, „Foreign“	x
0	3	3	GiS	x
0	3	4	PzS or PzB „Foreign“	x
0	3	5	PzS or PzB	d
0	3	6	GiV	x
0	3	7	PzV	x
0	3	8	AGM - only for Hoppecke batteries	x
0	4		<b>Battery charger and Battery types</b>	1

0	4	0
0	6	
0	6	0
0	6	1
0	7	
0	7	0
0	7	1
0	8	
0	8	0
0	8	1
0	8	F

w/o battery charger	d
<b>All wheel drive installed</b>	
only Front wheel drive	d
Front- and Rear wheel drive	x
<b>additional memory at the display (micro SD-card)</b>	
not available	x
available	d
<b>Brand</b>	
Hako	d
Power Boss	x
Specific Brand (SOW)	x