

## Chapter 0: Basic Adjustments

Chapter	Configuration	Content	Description	B400R
<b>0</b>	<b>0</b>		<b>Hardware Identification</b>	
0	0	4	Modul Control 36V	d
<b>0</b>	<b>1</b>		<b>Machine-Type</b>	
0	1	A	B400R	d
<b>0</b>	<b>2</b>		<b>Brush decks</b>	<b>1</b>
0	2	9	Plate brush deck 1230mm	x
0	2	C	Plate brush deck 1550mm	d
<b>0</b>	<b>3</b>		<b>LDS Adjustment - Battery-Type</b>	<b>1</b>
0	3	0	Crown w/o Offset	x
0	3	1	Crown	x
0	3	2	GIS, „Foreign“	x
0	3	3	GiS	x
0	3	4	PzS or PzB „Foreign“	x
0	3	5	PzS or PzB	d
0	3	6	GiV	x
0	3	7	PzV	x
0	3	8	AGM - only for Hoppecke batteries	x

0	3	9	Li-Battery (from SW 1.005.000)	
<b>0</b>	<b>4</b>		<b>Battery charger and Battery types</b>	<b>1</b>
0	4	0	w/o battery charger	d
<b>0</b>	<b>6</b>		<b>All wheel drive installed</b>	
0	6	0	only Front wheel drive	<b>d</b>
0	6	1	Front- and Rear wheel drive	x
<b>0</b>	<b>7</b>		<b>additional memory at the display (micro SD-card)</b>	
0	7	0	not available	<b>x</b>
0	7	1	available	d
<b>0</b>	<b>8</b>		<b>Brand</b>	
0	8	0	Hako	d
0	8	1	Power Boss	x
0	8	F	Specific Brand (SOW)	x