



Illustrated Parts List

Model Series

083100

TYPE NUMBERS
0035 through 2112.

TABLE OF CONTENTS

Air Cleaner	5
Armature	9
Blower Housing	8
Camshaft	2
Carburetor	6
Controls	9
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	9
Exhaust System	5
Flywheel	8
Fuel Supply	7
Gasket Sets	3
Gear Reduction	4
Governor Spring	9
Ignition	9
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	8
Spark Plug	9
Warning Label	2


Not for reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

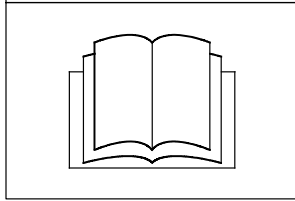

1036 EMISSIONS LABEL

1319 WARNING LABEL





WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.



1319A WARNING LABEL



    
REQUIRED when replacing parts with warning labels affixed.

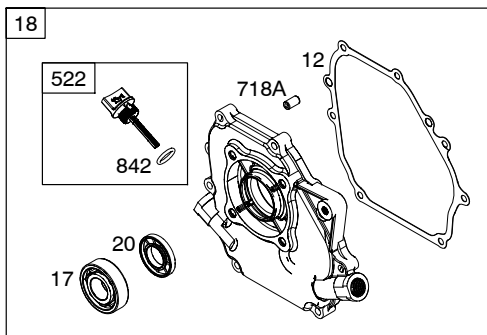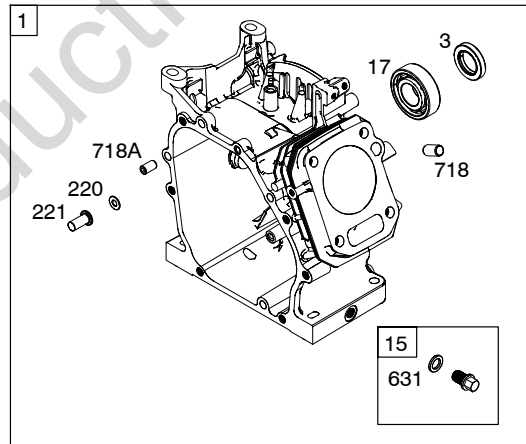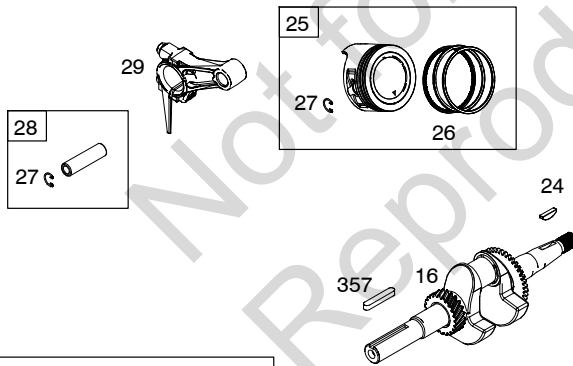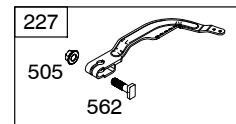












Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

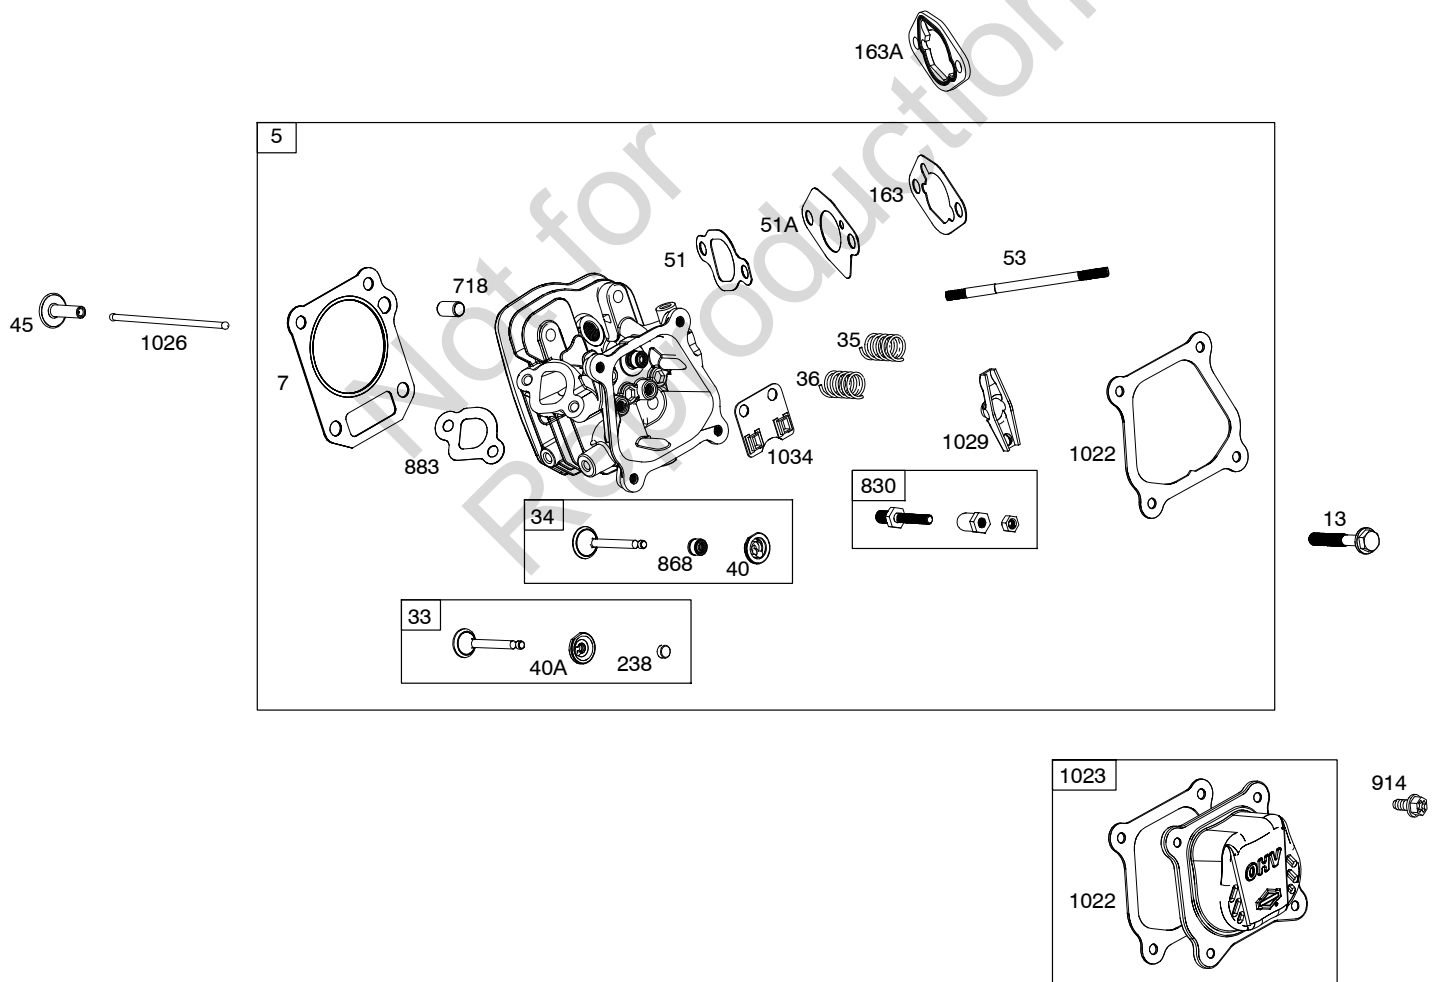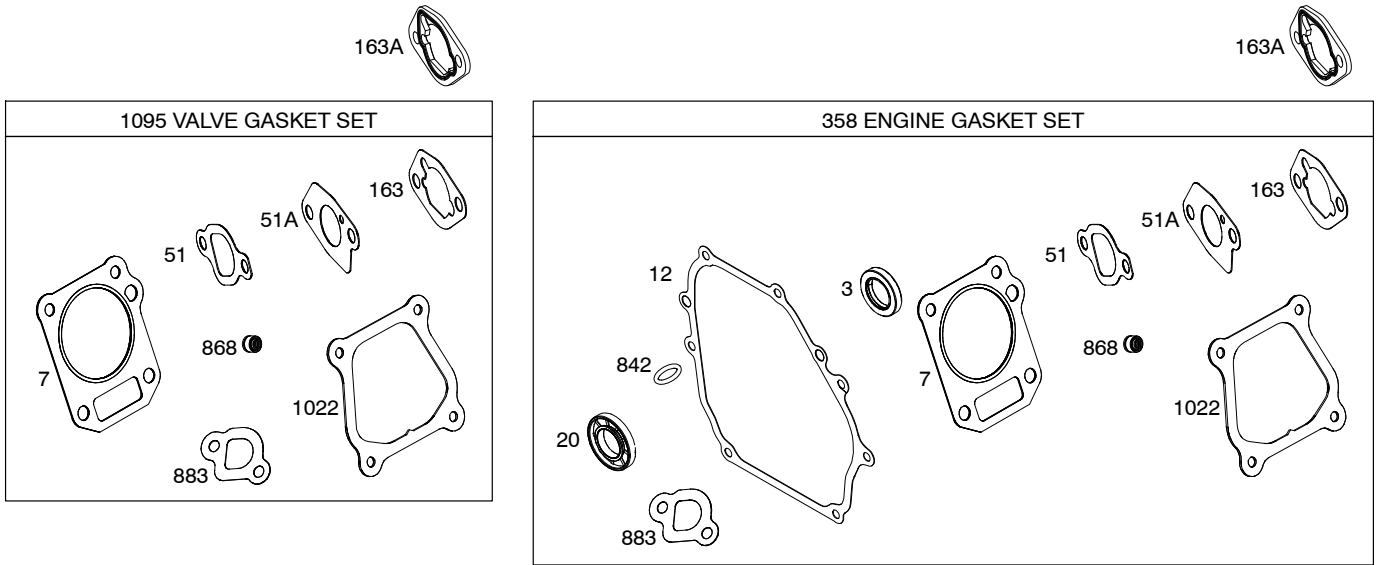  


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

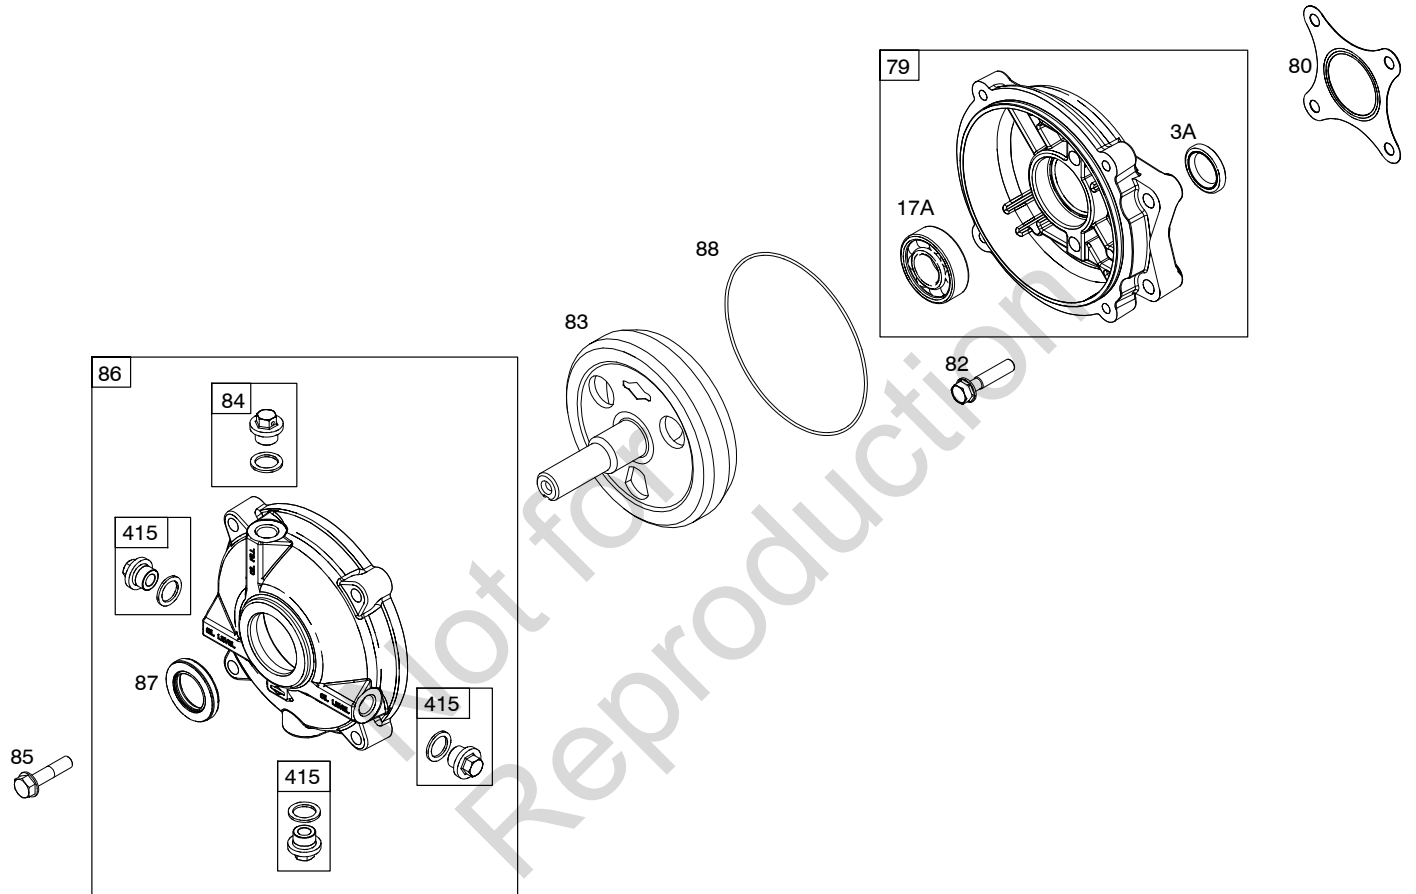 





Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

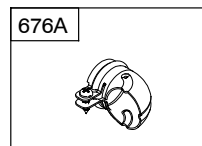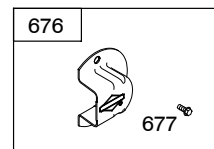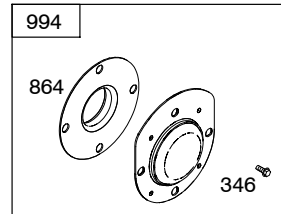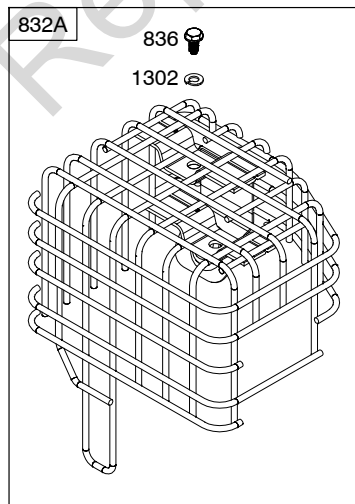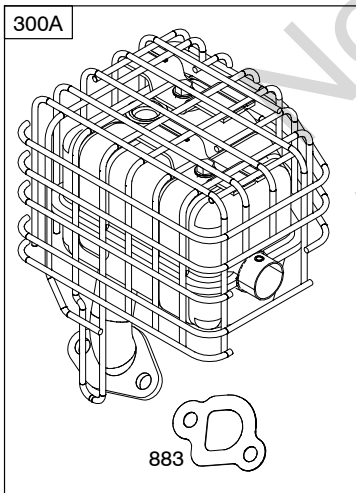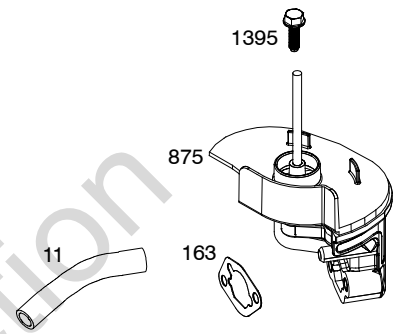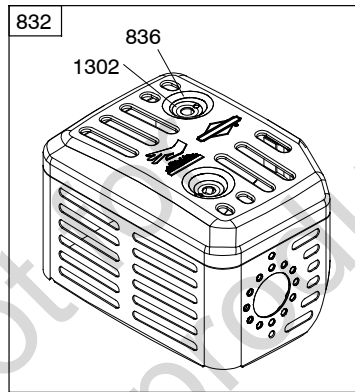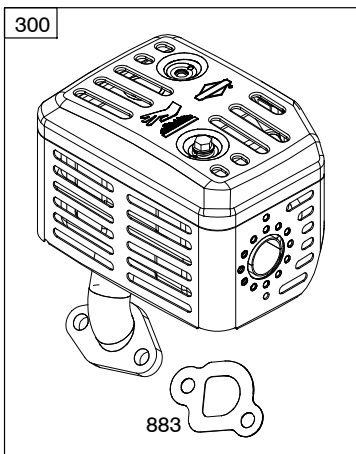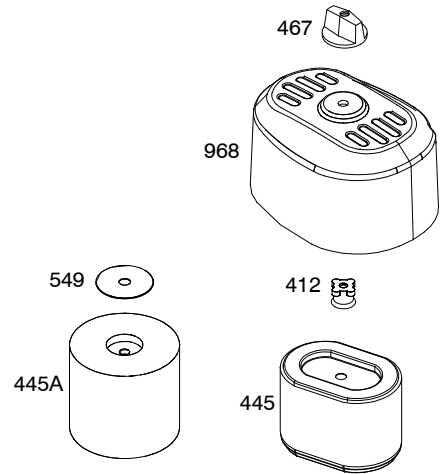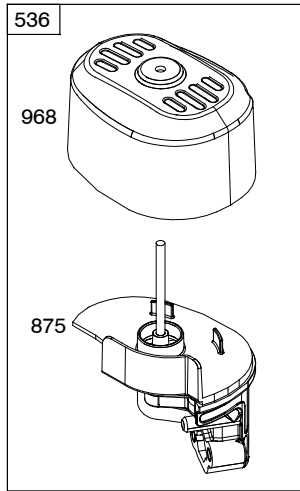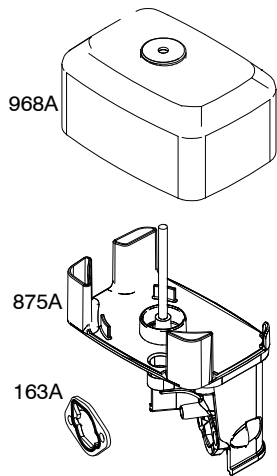           

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.


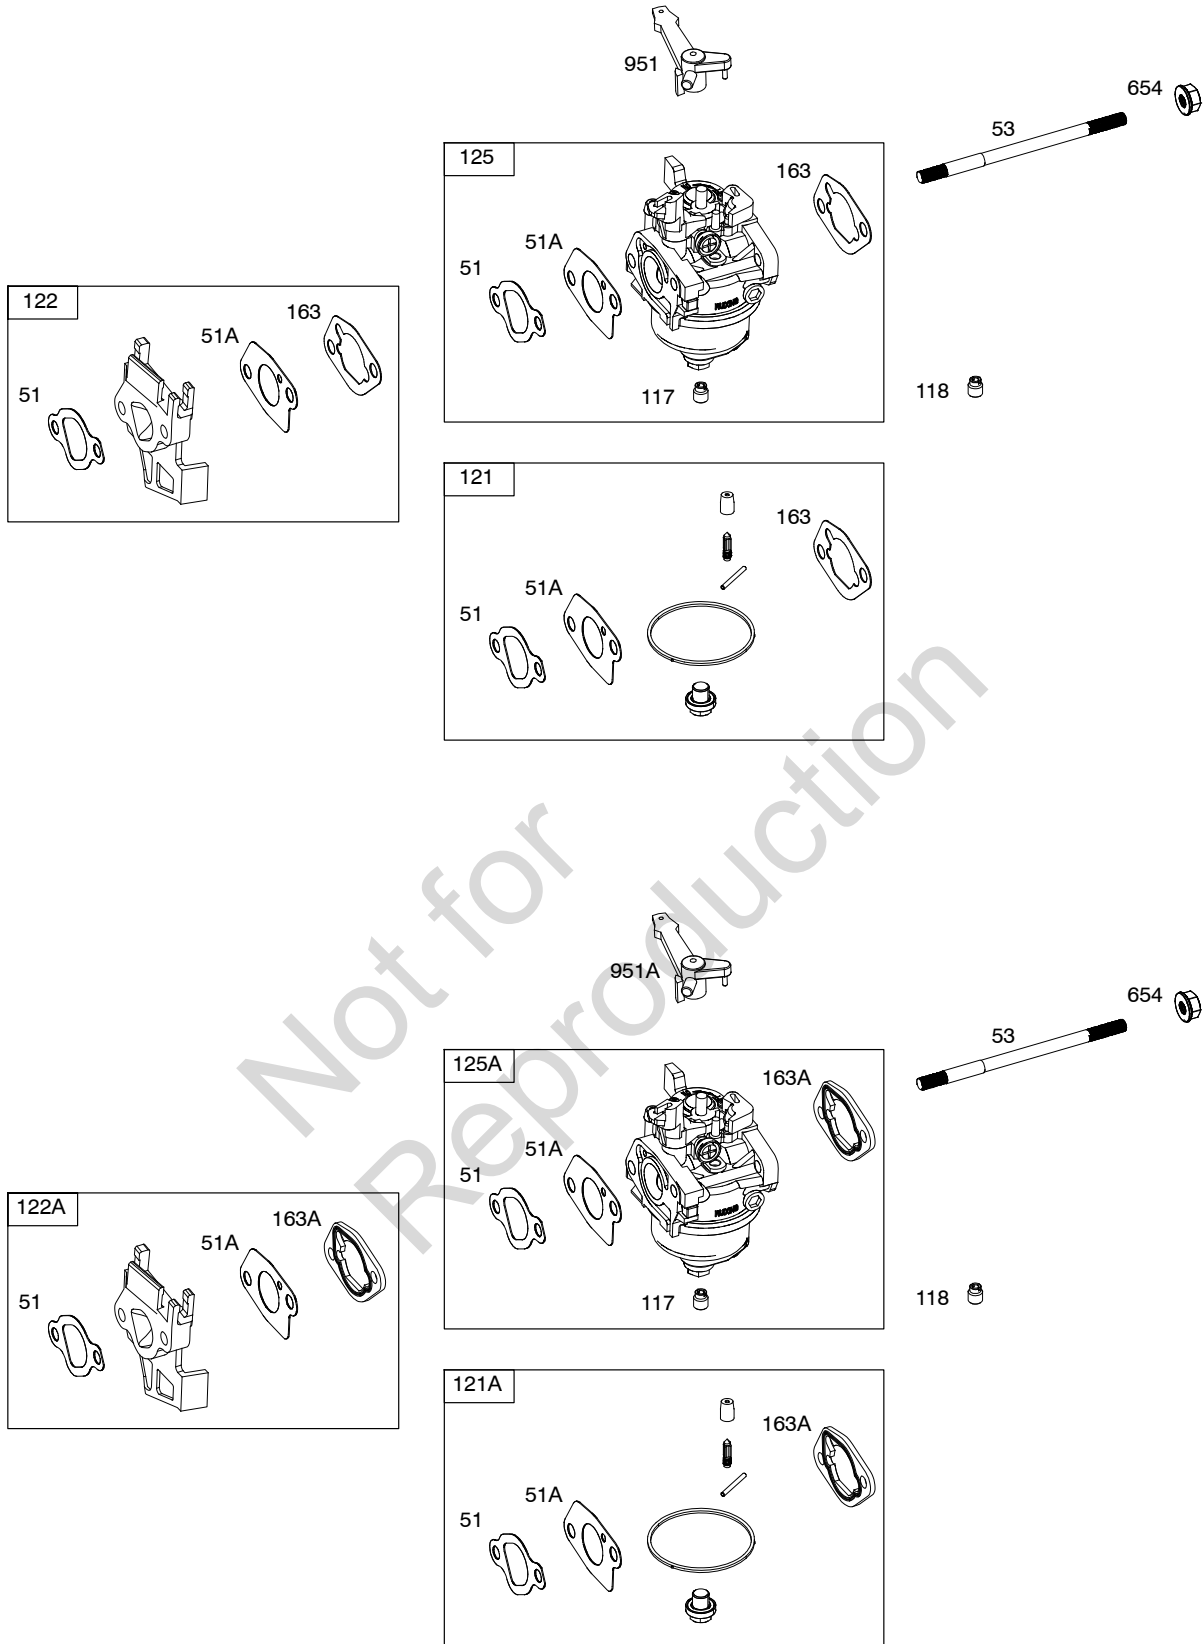 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

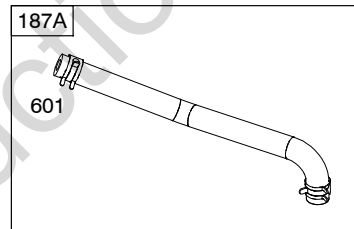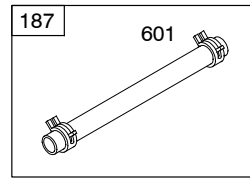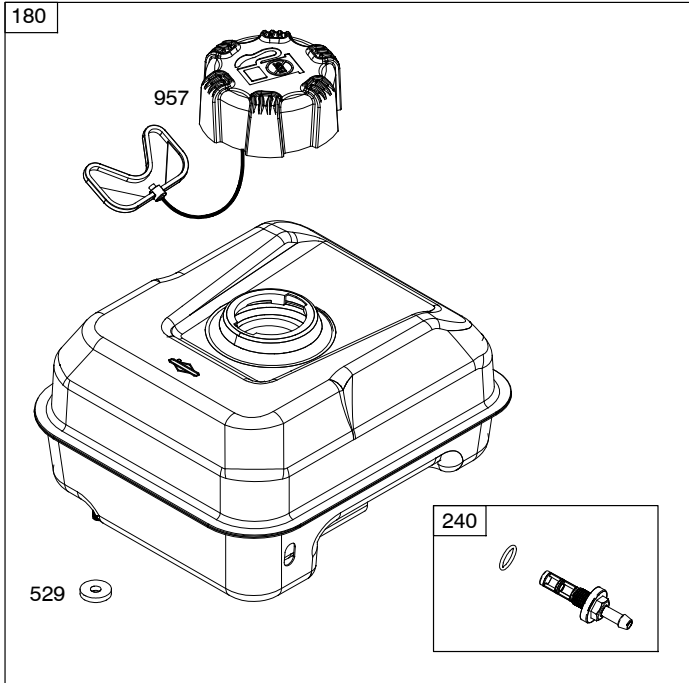    


Not for
Reproduction

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

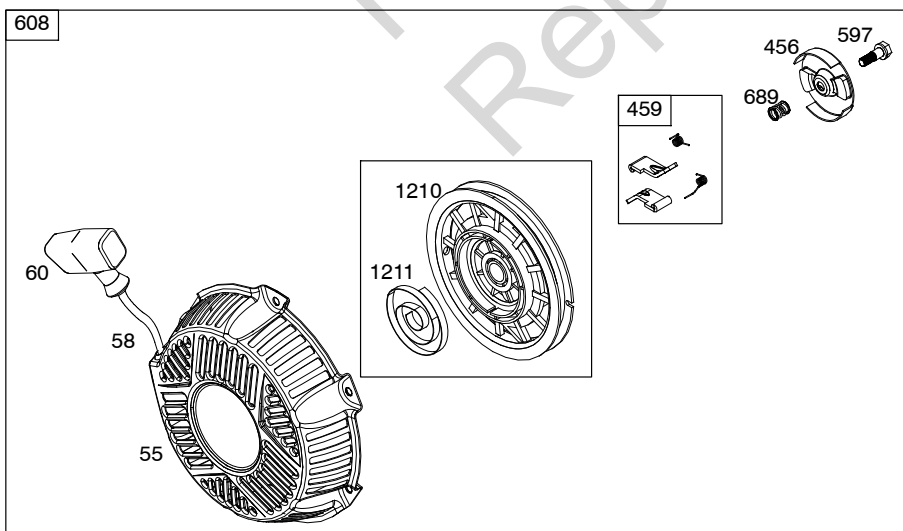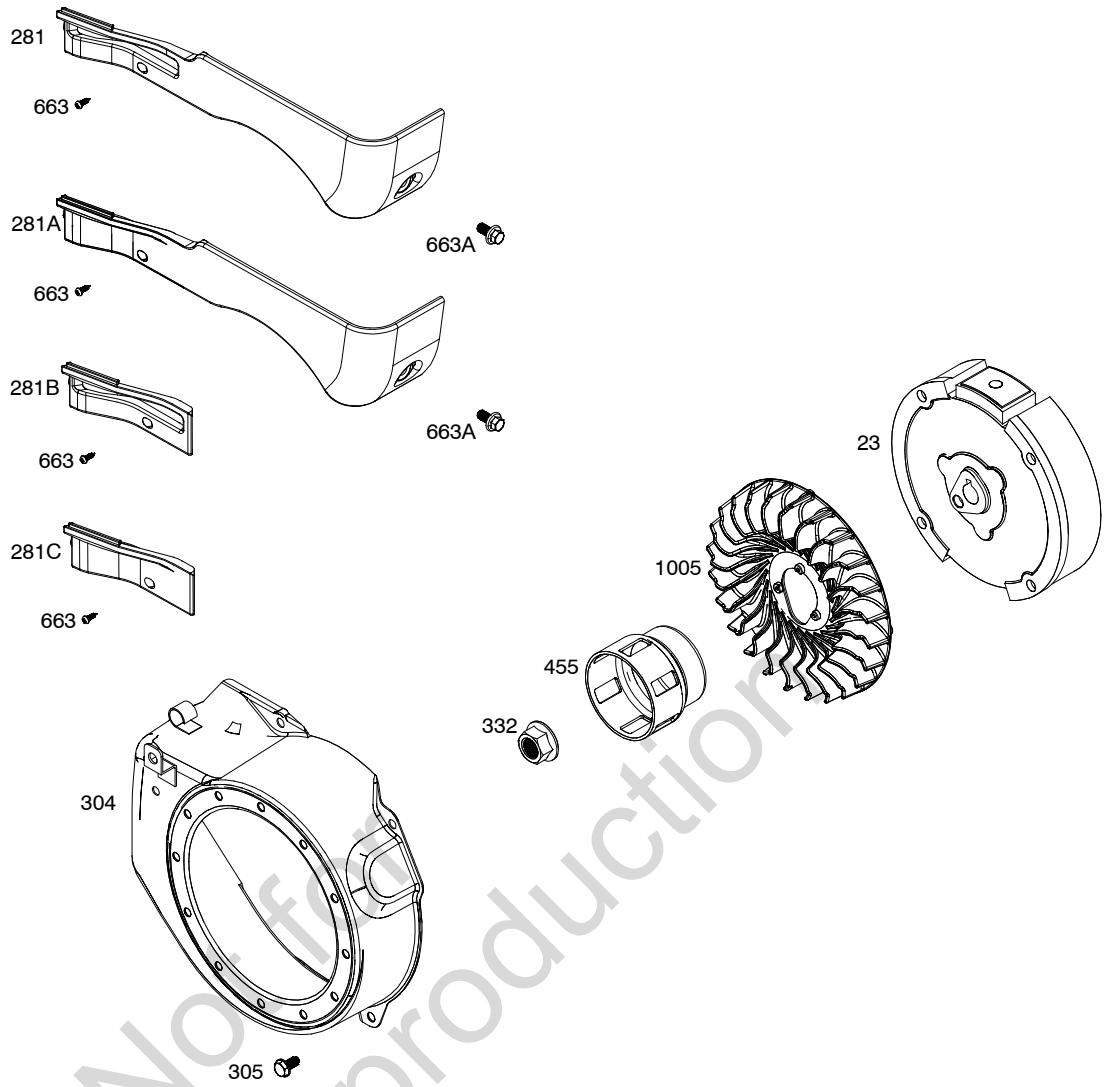  

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

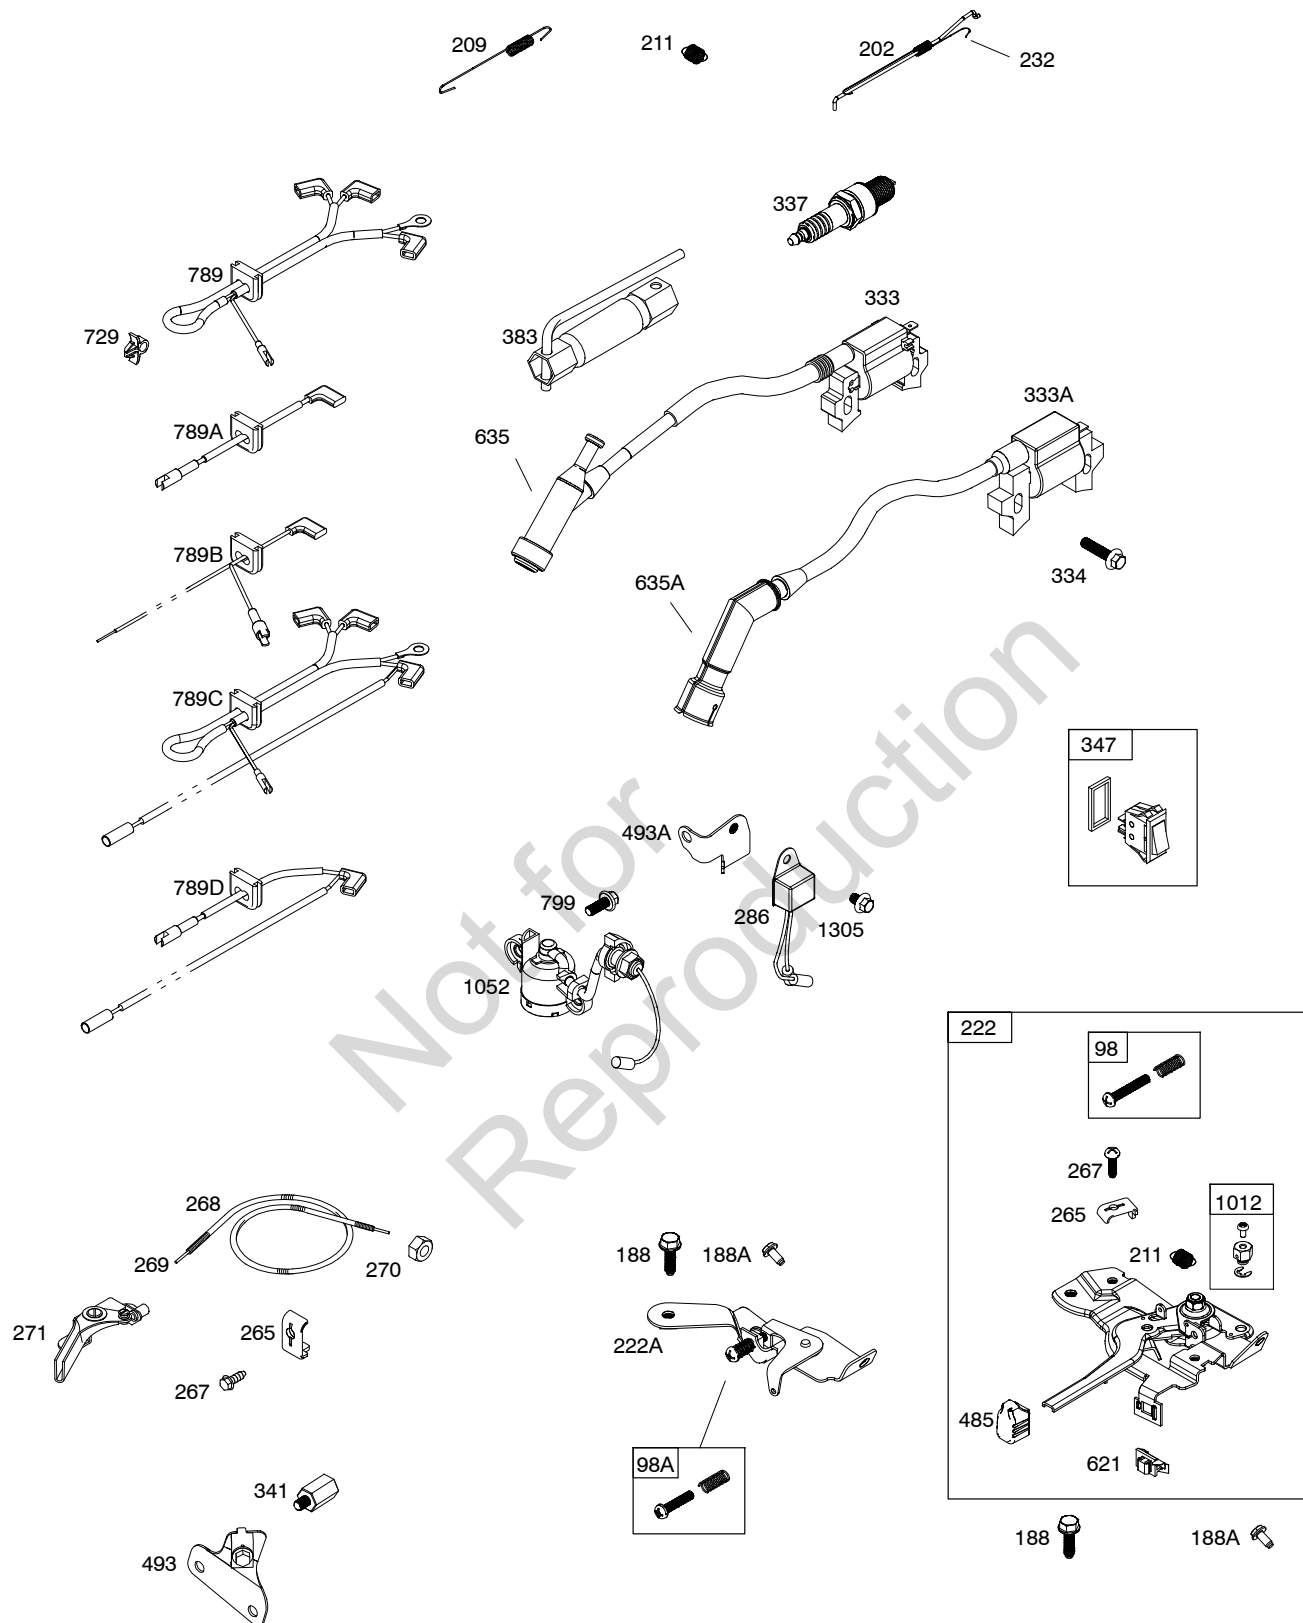 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION						
1	797217	Cylinder Assembly ----- Note ----- 798630 Cylinder Assembly Used on Type No(s). 0170, 0176, 0177, 0202, 0203, 0204, 0211, 0229, 0244, 0245, 1170, 1202, 1204, 1211, 2034.	16	797529	Crankshaft ----- Note ----- 797689 Crankshaft Used on Type No(s). 0049, 0127, 0141, 0142, 0151, 0157, 0174, 0204, 0213, 0225, 1049, 1127, 1141, 1142, 1157, 1174, 1204, 1213. 797690 Crankshaft Used on Type No(s). 0038, 0136, 0149, 0156, 0167, 0170, 1038, 1136, 1149, 1156, 1170. 797695 Crankshaft Used on Type No(s). 0036, 0128, 0132, 0155, 0165, 0178, 0205, 0211, 0226, 0243, 1036, 1128, 1132, 1155, 1165, 1205, 1211. 797709 Crankshaft Used on Type No(s). 0040, 0140, 0164, 0172, 0179, 0181, 1040, 1140, 1164, 1172, 1179, 1181. 797905 Crankshaft Used on Type No(s). 0123, 0144, 0224, 1123, 1144. 797906 Crankshaft Used on Type No(s). 0160, 0209, 0210, 0212, 0236, 0237, 0246, 1160, 1209, 1212. 798311 Crankshaft Used on Type No(s). 0166, 0169, 0206, 0227, 0239, 1166, 1169, 1206. 799225 Crankshaft Used on Type No(s). 0176, 0177, 0202, 0203, 0229, 1202. 590458 Crankshaft Used on Type No(s). 0241, 0918, 1918.	17	797328	Bearing-Ball	17A	99158	Bearing-Ball (Gear Reduction Case)	18	797350	Cover-Crankcase ----- Note ----- 797324 Cover-Crankcase Used on Type No(s). 0118, 0160, 0166, 0169, 0176, 0177, 0206, 0209, 0210, 0212, 0227, 0236, 0237, 0239, 0246, 1118, 1160, 1166, 1169, 1199, 1206, 1209, 1212.
3	797329	Seal-Oil (Magneto Side)						20	797330	Seal-Oil (PTO Side)				
3A	299819s	Seal-Oil (Magneto Side) (Gear Reduction Case)						22	797656	Screw (Crankcase Cover/Sump)				
5	591478	Head-Cylinder						23	797287	Flywheel				
7	797212	Gasket-Cylinder Head						24	797286	Key-Flywheel				
11	797262	Tube-Breather						25	797218	Piston Assembly (Standard) ----- Note ----- 797270 Piston Assembly (.010" Oversize) 797271 Piston Assembly (.020" Oversize)				
12	797211	Gasket-Crankcase						26	797220	Ring Set (Standard) ----- Note ----- 797272 Ring Set (.010" Oversize) 797273 Ring Set (.020" Oversize)				
13	797213	Screw (Standard)						27	797234	Lock-Piston Pin				
15	797215	Plug-Oil Drain (Cylinder Head)						28	797219	Pin-Piston				
								29	797221	Rod-Connecting				
								33	797199	Valve-Exhaust				
								34	797198	Valve-Intake				
								35	797203	Spring-Valve (Intake)				
								36	797203	Spring-Valve (Exhaust)				

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	591023	Guard-Flywheel ----- Note ----- 797323 Guard-Flywheel Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0918.	78	798975	Screw (Flywheel Guard)	121A	799661	Kit-Carburetor Overhaul Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.
40	797204	Retainer-Valve (Intake)	79	792746	Case-Gear Reduction			
40A	797205	Retainer-Valve (Exhaust)	80	792755	Gasket-Gear Case			
45	797208	Tappet-Valve	82	792753	Screw (Gear Reduction Case)			
46	797197	Camshaft	83	792756	Shaft-Auxiliary Drive			
51	797192	Gasket-Intake	84	792759	Plug-Breather			
51A	797280	Gasket-Intake	85	690711	Screw (Gear Cover to Gear Reduction Case)			
53	797278	Stud (Carburetor)	86	792748	Cover-Gear			
55	799667	Housing-Rewind Starter	87	792752	Seal-Gear Reduction			
58	691921	Rope-Starter ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0118, 0158, 0214, 0222, 1118, 1158, 1214.	88	792760	Gasket-Gear Reduction Cover			
60	691915	Grip-Starter Rope	98	797333	Kit-Idle Speed (High Speed Adjustment)			
65	797654	Screw (Rewind Starter)	98A	797697	Kit-Idle Speed (High Speed Adjustment)			
			117	592234	Jet-Main (Standard) (Used After Code Date 12050600) ----- Note ----- 590449 Jet-Main (Standard) (Used Before Code Date 12050700)			
			118		Jet-Main (High Altitude) (Used After Code Date 12050600) (Not Yet Available) ----- Note ----- 799173 Jet-Main (High Altitude) (Used Before Code Date 12050700)			
			121	592424	Kit-Carburetor Overhaul (Used After Code Date 12050600) ----- Note ----- 591017 Kit-Carburetor (Used Before Code Date 12050700)			

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
122	591014	Spacer-Carburetor	125A	797283	Carburetor	163	591013	Gasket-Air Cleaner
122A	797279	Spacer-Carburetor Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.			Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0918.	163A	797282	Gasket-Air Cleaner Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.
125	592236	Carburetor (Used After Code Date 12050600) ----- Note ----- 591007 Carburetor (Used Before Code Date 12050700) 591469 Carburetor Used on Type No(s). 1214.			----- Note ----- 591468 Carburetor Used on Type No(s). 0214.	180	591025	Tank-Fuel (Metal)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10116-12 Assemblies include all parts shown in frames. 01/02/2013

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	791766	Line-Fuel (Cut To Required Length)	209	797236	Spring-Governor ----- Note -----	221	797224	Cup-Governor
187A	797274	Line-Fuel (Formed Hose) ----- Note ----- 797694 Line-Fuel (Formed Hose) Used on Type No(s). 0118, 0136, 0170, 0241, 1118, 1136, 1170.			797691 Spring-Governor Used on Type No(s). 0036, 0126, 0128, 0132, 0133, 0139, 0146, 0155, 0156, 0160, 0165, 0178, 0189, 0207, 0209, 0210, 0212, 0226, 0236, 0237, 0242, 0243, 0246, 1036, 1126, 1128, 1132, 1133, 1139, 1146, 1155, 1156, 1160, 1165, 1189, 1207, 1209, 1212.	222	591024	Bracket-Control ----- Note ----- 797331 Bracket-Control Used on Type No(s). 0035, 0036, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0171, 0172, 0173, 0174, 0175, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.
188	797686	Screw (Control Bracket)			798626 Spring-Governor Used on Type No(s). 0114, 0121, 0123, 0129, 0138, 0148, 0152, 0162, 0179, 0216, 0217, 0221, 1114, 1121, 1123, 1129, 1138, 1148, 1152, 1162, 1179, 1217.	222A	797692	Bracket-Control Used on Type No(s). 0038, 0136, 0149, 0168, 0169, 0170, 0176, 0177, 0199, 0202, 0203, 0229, 0241, 0245, 1038, 1136, 1149, 1168, 1169, 1170, 1199, 1202.
188A	798618	Screw (Control Bracket)			798627 Spring-Governor Used on Type No(s). 0136, 0149, 0170, 0177, 0203, 0229, 1136, 1149, 1170.	227	797231	Lever-Governor Control
190	797657	Screw (Fuel Tank)			798628 Spring-Governor Used on Type No(s). 0168, 0245, 1168.	232	797232	Spring-Governor Link
202	797233	Link-Mechanical Governor			798629 Spring-Governor Used on Type No(s). 0038, 0176, 0202, 0241, 1038, 1202.	238	797206	Cap-Valve
					798977 Spring-Governor Used on Type No(s). 0169, 0199, 1169, 1199.	240	797346	Filter-Fuel
			211	797337	Spring-Governed Idle	240A	394358s	Filter-Fuel
			220	797223	Washer (Governor Gear)	265	691024	Clamp-Casing
						267	699492	Screw (Casing Clamp)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10116-13 Assemblies include all parts shown in frames. 01/02/2013

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
268	691025	Casing-Control Wire (Cut To Required Length)	304	591030	Housing-Blower ----- Note ----- 591031 Housing-Blower	305	798618	Screw (Blower Housing)
269	691026	Wire-Control (Cut To Required Length)			Used on Type No(s). 0214, 0216, 0217, 0218, 0221, 0222, 0224, 0241, 0245, 1118, 1119, 1121, 1129, 1131, 1138, 1142, 1143, 1148, 1152, 1153, 1158, 1159, 1161, 1162, 1168, 1214, 1217, 1918.	306	797322	Shield-Cylinder
270	691027	Nut (Control Wire Casing)				307	798618	Screw (Cylinder Shield)
271	691028	Lever-Control				332	797285	Nut (Flywheel)
281	591048	Panel-Control				333	797343	Armature-Magneto
281A	591474	Panel-Control Used on Type No(s). 0229, 0245, 1038, 1149, 1168, 1169, 1199, 1202.				333A	797684	Armature-Magneto Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0111, 0112, 0114, 0115, 0119, 0121, 0122, 0128, 0129, 0131, 0135, 0138, 0141, 0143, 0148, 0149, 0152, 0153, 0158, 0159, 0161, 0164, 0165, 0167, 0168, 0169, 0171, 0172, 0173, 0174, 0176, 0177, 0182, 0186, 0187, 0199, 0202, 0203, 0205, 0216, 0217, 0218, 0221, 0222, 0223, 0224, 0229, 0231, 0233, 0240, 0241, 0242, 0243, 0244, 0245, 1035, 1036, 1038, 1040, 1049, 1111, 1112, 1114, 1115, 1119, 1121, 1128, 1129, 1131, 1135, 1138, 1141, 1143, 1148, 1149, 1152, 1153, 1158, 1159, 1161, 1164, 1165, 1168, 1169, 1171, 1172, 1173, 1174, 1182, 1186, 1187, 1199, 1202, 1205, 1217, 2111, 2112.
281B	591456	Panel-Control Used on Type No(s). 1118, 1214.			797349 Housing-Blower Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0120, 0123, 0126, 0127, 0128, 0130, 0132, 0133, 0134, 0135, 0136, 0139, 0140, 0141, 0144, 0146, 0149, 0151, 0154, 0155, 0156, 0157, 0160, 0164, 0165, 0166, 0167, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213.			
281C	591475	Panel-Control Used on Type No(s). 0241, 1136, 1170.						
286	797772	Module-Oil Sensor						
300	591028	Muffler ----- Note ----- 797268 Muffler Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0110, 0117, 0120, 0123, 0126, 0127, 0130, 0132, 0133, 0134, 0136, 0139, 0140, 0142, 0144, 0146, 0151, 0154, 0155, 0156, 0157, 0160, 0162, 0166, 0169, 0170, 0171, 0172, 0174, 0175, 0178, 0179, 0181, 0186, 0187, 0189, 0199, 0204, 0206, 0207, 0209, 0210, 0212, 0213, 0229, 0233, 0918.						
300A	797687	Muffler			797698 Housing-Blower Used on Type No(s). 0118, 0119, 0121, 0122, 0129, 0131, 0138, 0142, 0143, 0148, 0152, 0153, 0158, 0159, 0161, 0162, 0168, 0176, 0177, 0918.	334	797655	Screw (Magneto Armature)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10116-14 Assemblies include all parts shown in frames. 01/02/2013

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION								
337	797235	Plug-Spark ----- Note ----- 798615 Plug-Spark Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0111, 0112, 0114, 0115, 0119, 0121, 0122, 0123, 0128, 0129, 0131, 0135, 0138, 0141, 0143, 0148, 0149, 0151, 0152, 0153, 0158, 0159, 0161, 0164, 0165, 0167, 0168, 0169, 0171, 0172, 0173, 0174, 0176, 0177, 0182, 0186, 0187, 0189, 0199, 0202, 0203, 0205, 0216, 0217, 0218, 0221, 0222, 0223, 0224, 0229, 0231, 0233, 0240, 0241, 0242, 0243, 0244, 0245, 1035, 1036, 1038, 1040, 1049, 1111, 1112, 1114, 1115, 1119, 1121, 1128, 1129, 1131, 1135, 1138, 1141, 1143, 1148, 1149, 1152, 1153, 1158, 1159, 1161, 1164, 1165, 1168, 1169, 1171, 1172, 1173, 1174, 1182, 1186, 1187, 1199, 1202, 1205, 1217, 2111, 2112.	358	591460	Gasket Set-Engine	635	797658	Boot-Spark Plug								
			383	19605s	Wrench-Spark Plug	635A	797685	Boot-Spark Plug Used on Type No(s). 0035, 0036, 0038, 0040, 0049, 0111, 0112, 0114, 0115, 0119, 0121, 0122, 0128, 0129, 0131, 0135, 0138, 0141, 0143, 0148, 0149, 0152, 0153, 0158, 0159, 0161, 0164, 0165, 0167, 0168, 0169, 0171, 0172, 0173, 0174, 0176, 0177, 0182, 0186, 0187, 0199, 0202, 0203, 0205, 0216, 0217, 0218, 0221, 0222, 0223, 0224, 0229, 0231, 0233, 0240, 0241, 0242, 1035, 1036, 1038, 1040, 1049, 1111, 1112, 1114, 1115, 1119, 1121, 1128, 1129, 1131, 1135, 1138, 1141, 1143, 1148, 1149, 1152, 1153, 1158, 1159, 1161, 1164, 1165, 1168, 1169, 1171, 1172, 1173, 1174, 1182, 1186, 1187, 1199, 1202, 1205, 1217, 2111, 2112.								
			412	797261	Nut (Air Cleaner Cover)											
			415	792749	Plug (Gear Cover)											
			445	796970	Filter-Air Cleaner Cartridge											
			445A	797258	Filter-Air Cleaner Cartridge											
			455	797277	Cup-Flywheel											
			456	799666	Plate-Pawl Friction											
			459	799668	Pawl-Ratchet											
			467	691985	Knob-Air Cleaner											
			485	797339	Knob-Control											
			493	797700	Bracket-Mounting (Remote Choke)											
			493A	798632	Bracket-Mounting (Oil Sensor Module)											
			505	690939	Nut (Governor Control Lever)											
			522	797325	Plug-Dipstick/Fill											
			529	797345	Grommet (Fuel Tank)											
			536	591034	Cleaner-Air											
			549	797264	Washer (Air Cleaner)											
			562	797230	Bolt (Governor-Control Lever)											
			597	799665	Screw (Pawl Friction Plate)											
			601	791850	Clamp-Hose											
			608	797276	Starter-Rewind ----- Note ----- 797354 Starter- Rewind Used on Type No(s). 0118, 0158, 0214, 0222, 1118, 1158, 1214.	654	690939	Nut (Carburetor)								
341	797699	Stud (Mounting Bracket) (Remote Choke)	614	797229	Pin-Cotter	663	799846	Screw (Control Panel)								
346	690203	Screw (Spark Arrester)	616	797228	Crank-Governor	663A	591049	Screw (Control Panel)								
347	797340	Switch-Rocker	621	692310	Switch-Stop	676	797352	Deflector-Muffler								
357	798305	Key-Drive Pulley ----- Note ----- 590719 Key-Drive Pulley Used on Type No(s). 0166, 1166.	631	797216	Washer (Oil Drain Plug)	676A	797702	Deflector-Muffler								
						677	699203	Screw (Muffler Deflector)								

083100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
689	799669	Spring-Friction	830	797200	Stud-Rocker Arm	951	591016	Lever-Choke
703	798614	Clip (Fuel Hose)	832	591029	Guard-Muffler	951A	797281	Lever-Choke Used on Type No(s).
705	690939	Nut (Fuel Tank)	----- Note -----					0035, 0036, 0038,
718	797214	Pin-Locating (Cylinder Head)			797269			0040, 0049, 0110,
718A	797326	Pin-Locating (Crankcase Cover)			Used on Type No(s).			0111, 0112, 0114,
729	797341	Clip-Wire			0035, 0036, 0038,			0115, 0117, 0118,
789	797344	Harness-Wiring			0040, 0049, 0110,			0119, 0120, 0121,
789A	797701	Harness-Wiring Used on Type No(s).			0126, 0127, 0130,			0122, 0123, 0126,
		0118, 0142, 0168,			0132, 0133, 0134,			0127, 0128, 0129,
		0214, 0241, 1118,			0136, 0139, 0140,			0130, 0131, 0132,
		1142, 1168, 1214.			0142, 0144, 0146,			0133, 0134, 0135,
789B	797706	Harness-Wiring Used on Type No(s).			0151, 0154, 0155,			0136, 0138, 0139,
		0119, 0121, 0122,			0156, 0157, 0160,			0140, 0141, 0142,
		0129, 0131, 0138,			0162, 0166, 0169,			0143, 0144, 0146,
		0143, 0148, 0152,			0170, 0171, 0172,			0148, 0149, 0151,
		0153, 0158, 0159,			0174, 0175, 0178,			0152, 0153, 0154,
		0161, 0162, 0216,			0179, 0181, 0186,			0155, 0156, 0157,
		0217, 0218, 0221,			0187, 0189, 0199,			0158, 0159, 0160,
		0222, 0224, 0918,			0204, 0206, 0207,			0161, 0162, 0164,
		1119, 1121, 1129,			0209, 0210, 0212,			0165, 0166, 0167,
		1131, 1138, 1143,	832A	797688	Guard-Muffler			0168, 0169, 0170,
		1148, 1152, 1153,	836	798976	Screw (Muffler Guard)			0171, 0172, 0173,
		1158, 1159, 1161,	842	797327	Seal-O Ring (Dipstick Tube)			0174, 0175, 0176,
		1162, 1217, 1918.	864	799555	Adapter-Muffler			0177, 0178, 0179,
789C	798633	Harness-Wiring Used on Type No(s).	868	797572	Seal-Valve (Intake)			0181, 0182, 0183,
		0170, 0204, 0211,	875	591027	Base-Air Cleaner			0186, 0187, 0189,
		0229, 0244, 1170,	875A	797265	Base-Air Cleaner			0199, 0202, 0203,
		1202, 1204, 1211,	883	797267	Gasket-Exhaust			0204, 0205, 0206,
		2034.	914	798618	Screw (Rocker Cover)			0207, 0209, 0210,
789D	799224	Harness-Wiring Used on Type No(s).	----- Note -----					0211, 0212, 0213,
		0176, 0177, 0245.			799846			0214, 0918.
799	797774	Screw (Oil Sensor)			Screw (Rocker Cover)	957	799324	Cap-Fuel Tank (Plastic)
					Used on Type No(s).	957A	794641	Cap-Fuel Tank (Plastic)
					0246, 1118, 1174,	968	591026	Cover-Air Cleaner
					1187, 1209, 1214.	968A	797263	Cover-Air Cleaner
						994	799557	Arrester-Spark

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10116-16 Assemblies include all parts shown in frames. 01/02/2013

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1005	797321	Fan-Flywheel	1095	591461	Gasket Set-Valve	1177	590965	Nut (Muffler)
1012	590378	Retainer-Link			----- Note -----	1210	799678	Pulley/Spring Assembly (Pulley)
1022	797194	Gasket-Rocker Cover			797531 Gasket	1211	799678	Pulley/Spring Assembly (Spring)
1023	797196	Cover-Rocker Arm			Set-Valve	1302	590457	Washer (Muffler Guard)
		----- Note -----			Used on Type No(s).	1305	798618	Screw (Oil Sensor Module)
		591052 Cover-Rocker Arm			0035, 0036, 0038, 0040, 0049, 0110, 0111, 0112, 0114, 0115, 0117, 0118, 0119, 0120, 0121, 0122, 0123, 0126, 0127, 0128, 0129, 0130, 0131, 0132, 0133, 0134, 0135, 0136, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0148, 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157, 0158, 0159, 0160, 0161, 0162, 0164, 0165, 0166, 0167, 0168, 0169, 0170, 0171, 0172, 0173, 0174, 0175, 0176, 0177, 0178, 0179, 0181, 0182, 0183, 0186, 0187, 0189, 0199, 0202, 0203, 0204, 0205, 0206, 0207, 0209, 0210, 0211, 0212, 0213, 0214, 0918.	1319	794467	Label-Warning
1026	797207	Rod-Push				1319A	797669	Label-Warning
1029	797202	Arm-Rocker				1395	797686	Screw (Air Cleaner Base to Carburetor)
1034	797209	Guide-Push Rod						
1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)						
1052	798631	Sensor-Oil						
1058	278916	Manual-Operator's						

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction

