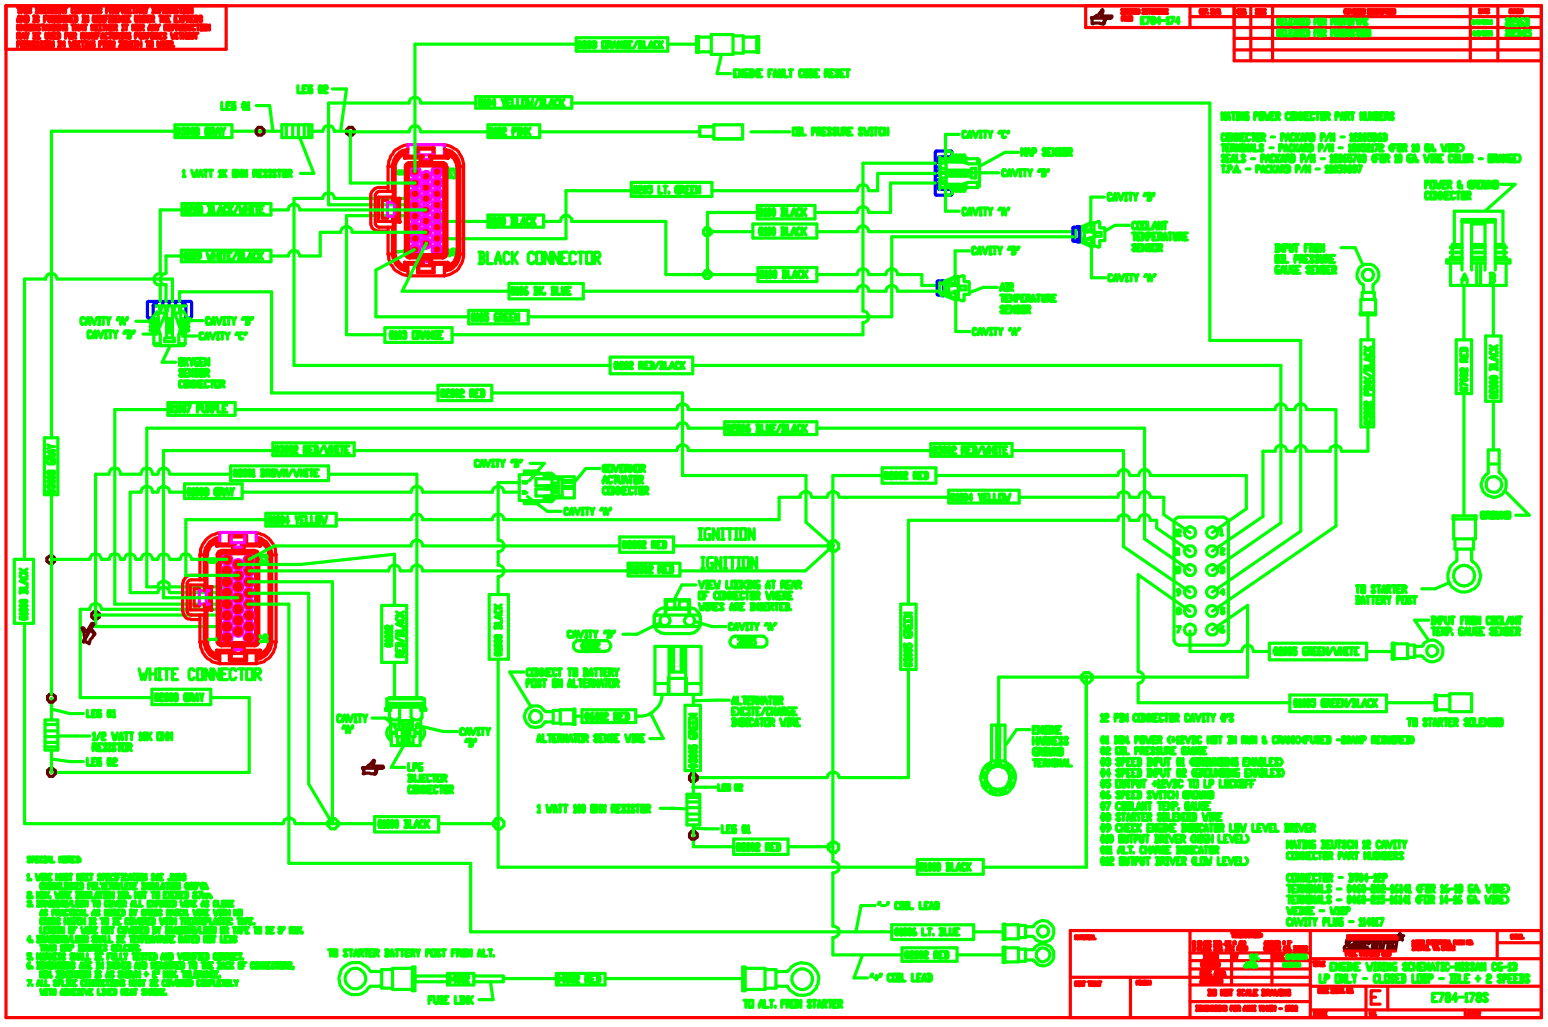

BLACK CONNECTOR
WHITE CONNECTOR
IGNITION
IGNITION
ENGINE FAULT CODE RESET
OIL PRESSURE SWITCH
MAP SENSOR
COOLANT TEMPERATURE SENSOR
AIR TEMPERATURE SENSOR
GOVERNOR ACTUATOR CONNECTOR
1 WATT 1K OHM RESISTOR
1/2 WATT 10K OHM RESISTOR
LPG INJECTOR CONNECTOR
CONNECT TO BATTERY POST ON ALTERNATOR
ALTERNATOR SENSE WIRE
ALTERNATOR EXCITE/CHARGE INDICATOR WIRE
1 WATT 100 OHM RESISTOR
TO STARTER BATTERY POST FROM ALT.
FUSE LINK
TO ALT. FROM STARTER
COIL LEAD
COIL LEAD
TO STARTER BATTERY POST
INPUT FROM COOLANT TEMP. GAUGE SENSOR
TO STARTER SOLENOID
ENGINE HARNESS GROUND TERMINAL
12 PIN CONNECTOR CAVITY #'S
MATING POWER CONNECTOR PART NUMBERS
POWER & GROUND CONNECTOR
INPUT FROM OIL PRESSURE GAUGE SENSOR
E784-174
E784-178S