




- 1 Remove the caps from the batteries and install the 4 probes. Take note of which battery get the probe with the wire. Once they are installed, connect them to the watering tube. Feed the wires into the area of the electrical compartment.

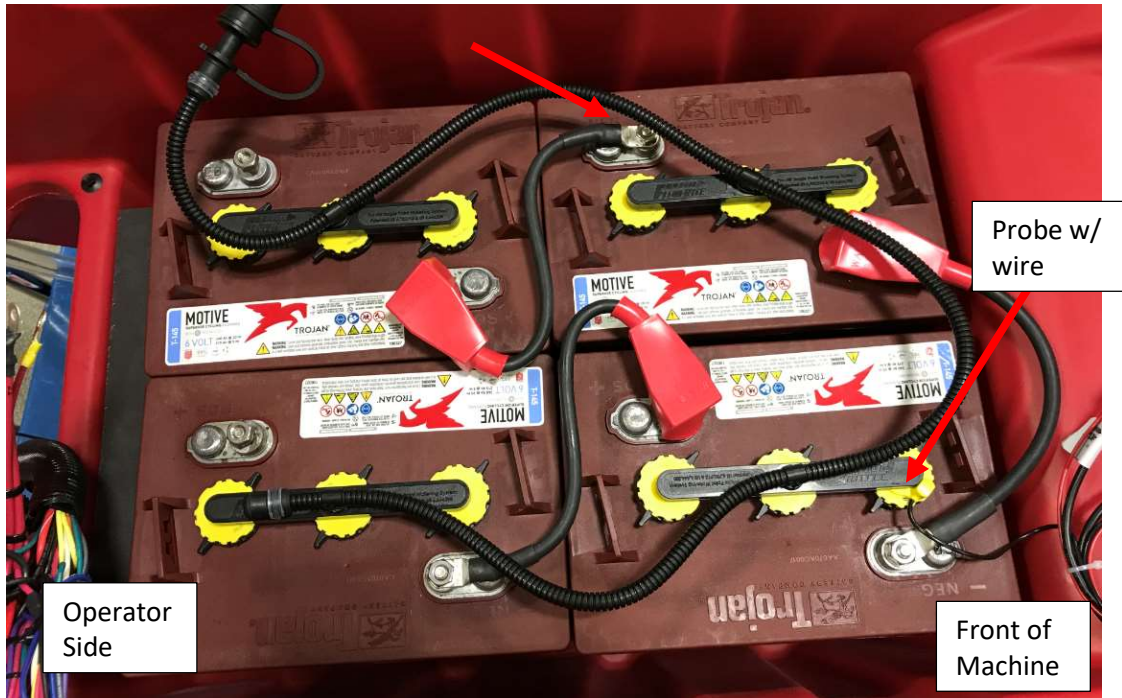

- 2 Remove the 4 screws that hold the outer electrical panel into place.
- 3 On the main harness, locate the two larger grey connectors that are currently not being used. Connect these to the two grey connectors on the watering kit. They are error proofed so they will only connect one way.

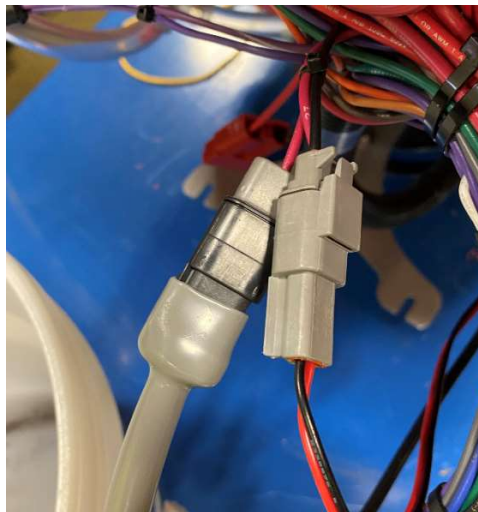


- 4 Locate the control board on the inside of the electrical panel and remove the jumper.

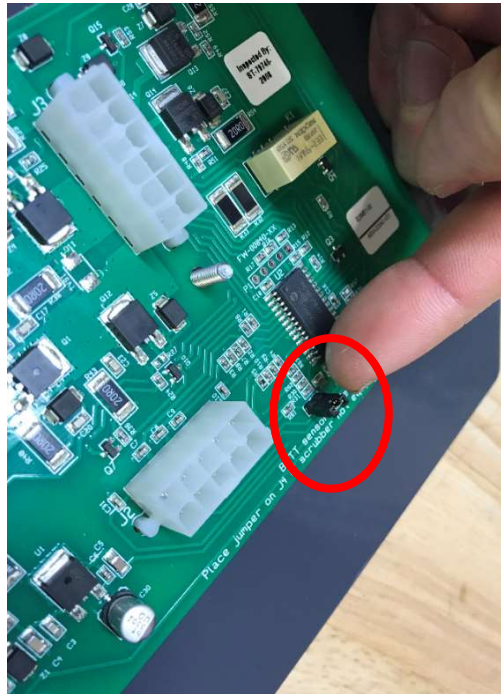

- 5 On the back panel, above the “Fortify” emblem, there is a hole under the decal. Cut the hole out and install the LED.



- 6 Locate the two wires on the main harness that attach to the LED. The wire numbers are listed below. Connect them to the LED.

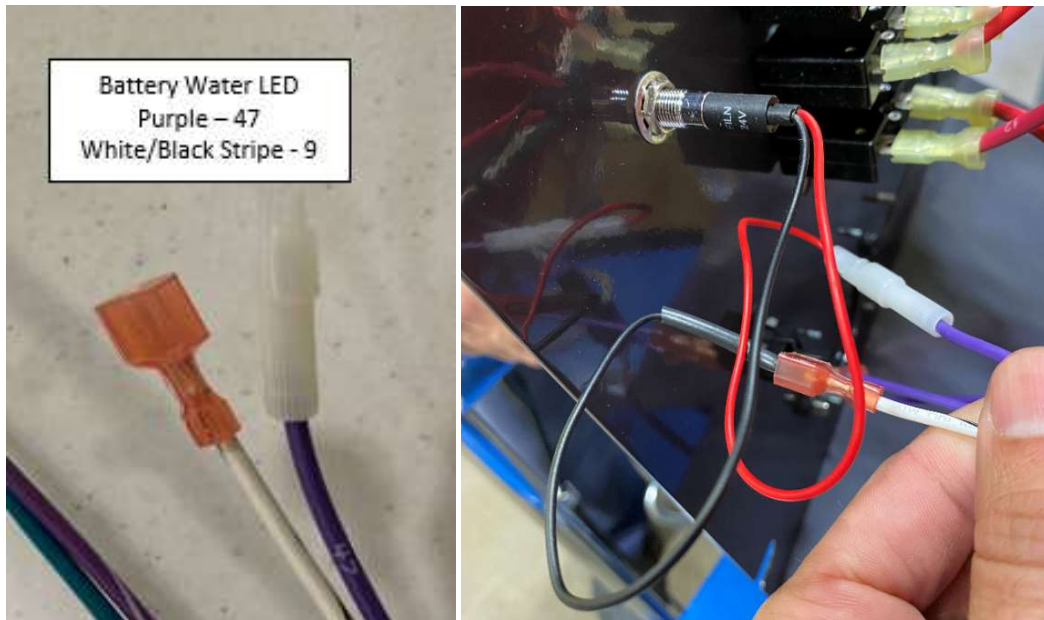

- 7 Re-install the back panel.