



Tech Bulletin: Genesys Scrubber SoliChem Probe Install

5/21/2020


This guide will walk you through replacing the old (white) SoliChem probes with the new upgraded (black) SoliChem probes.

Step 1 – Remove Old Probes

1. Cut the two hose clamps that are securing the high pressure probe
2. Pull the hoses off of the old probes and discard the probes

Step 2 – Install New Probes

1. Put the supplied hose clamps on each side of the high pressure line coming from underneath the machine (image 1)

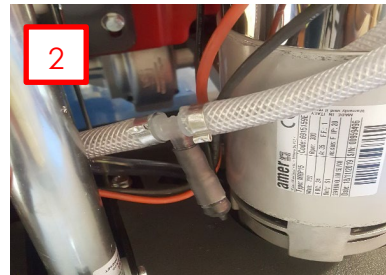

2. Install the probe so that it is vertical and crimp the hose clamps (image 2)
3. Install the post canister probe so that it is vertical as shown (image 3)

