



E82016-00 Front Mount Squeegee Assembly Instructions

For use on model #E85027-00 Workman 10 Wet/Dry Vac




Remove the (2) long screws from the assembly, these will be used later to secure the assembly.




Locate (1) $\frac{3}{4}$ " screw with washer and nut and (1) $1\text{-}9/16$ " screw with washer and nut; these will be used to mount the assembly bracket to the frame.




Remove the rubber cover located on the top front of the frame to access the front hole mount.

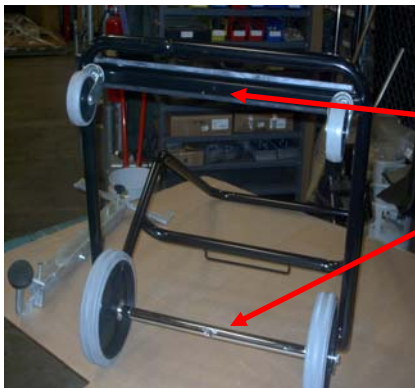


Note locations of front and rear hole mounts.

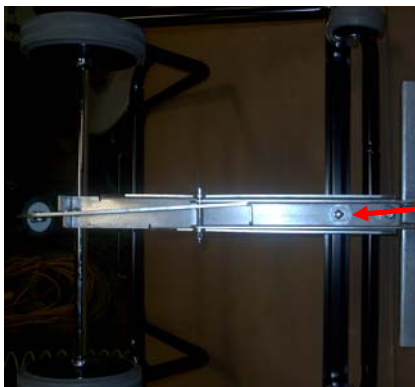

Place assembly on frame and secure the front using the $\frac{3}{4}$ " screw washer and nut as shown.

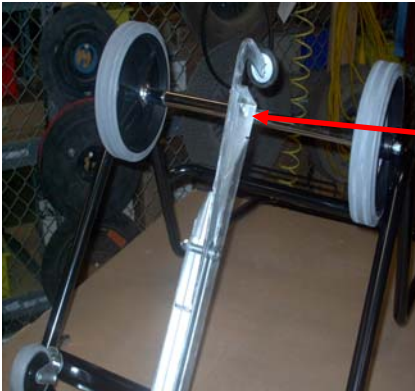

Secure the rear of the assembly using the 1-9/16" screw washer and nut as shown.

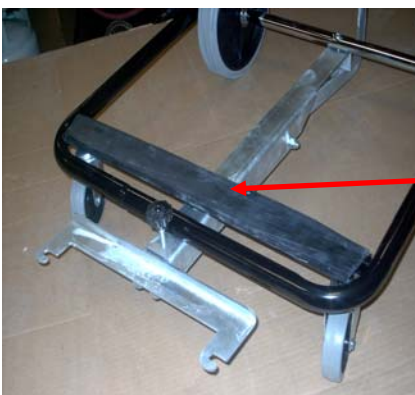

After securing the assembly tightly to the frame re-install the rubber cover as shown.