
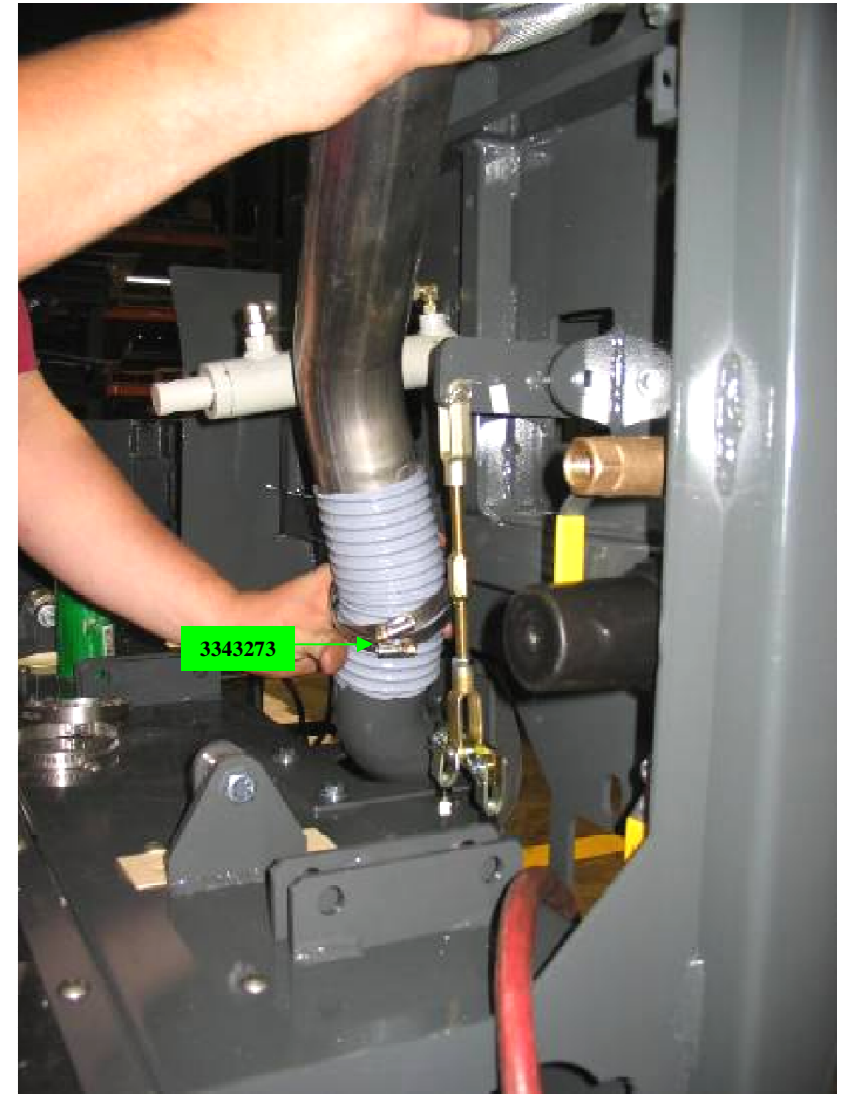


MODEL: WC-02 5550 SWEEPER SCRUBBER
DOCUMENTED BY: John Myers
PAGE NUMBER: 31
DATE: 12/5/06

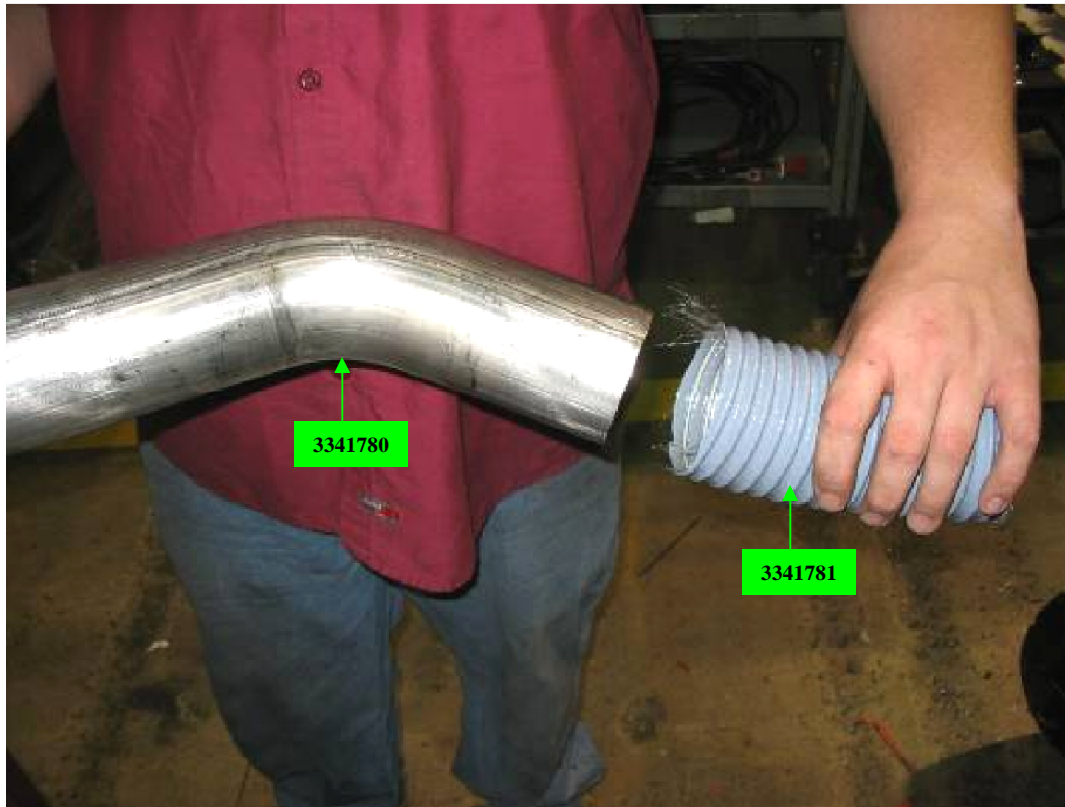

Begin installation of (1) TUBE-SQG SUCTION INTERMEDIATE (**3341780**) by lubricating outside on short end of the tube and inside of both ends of (1) HOSE-SQUEEGEE TUBE TO GASKET M (**3341781**). Slide (2) CLAMPS-HOSE 3.5 (**3343273**) onto flex hose. Slide one end of hose onto short end of tube. Then slide other end of flex hose onto WELD-SQG VAC GASKET MNT 5550.

Parts: 3341780 / 3341781 / 3343273

Tools: Spray Oil