

MODEL: 3350255 ASSY-PWRTRAIN SUB KBA DSL 10X

DOCUMENTED BY: Jim Babb

PAGE NUMBER: 78


DATE: 1/31/06



Get (1) PUMP-MAIN VD FS (**3303581**) and insert shaft into splines of flywheel at center of bell housing, as shown. Get (1) MNT-FWD/REV DSL SW/62 PLTD (**3312231**), (2) SCRS-HEX,3/8-16X1.50 ZP (**3400028**) and (2) WASHERS-CONICAL SPRING 3/8 (**3400385**).

Parts: 3303581 / 3312231 / 3400028 / 3400385

Tools: 9/16" Wrench

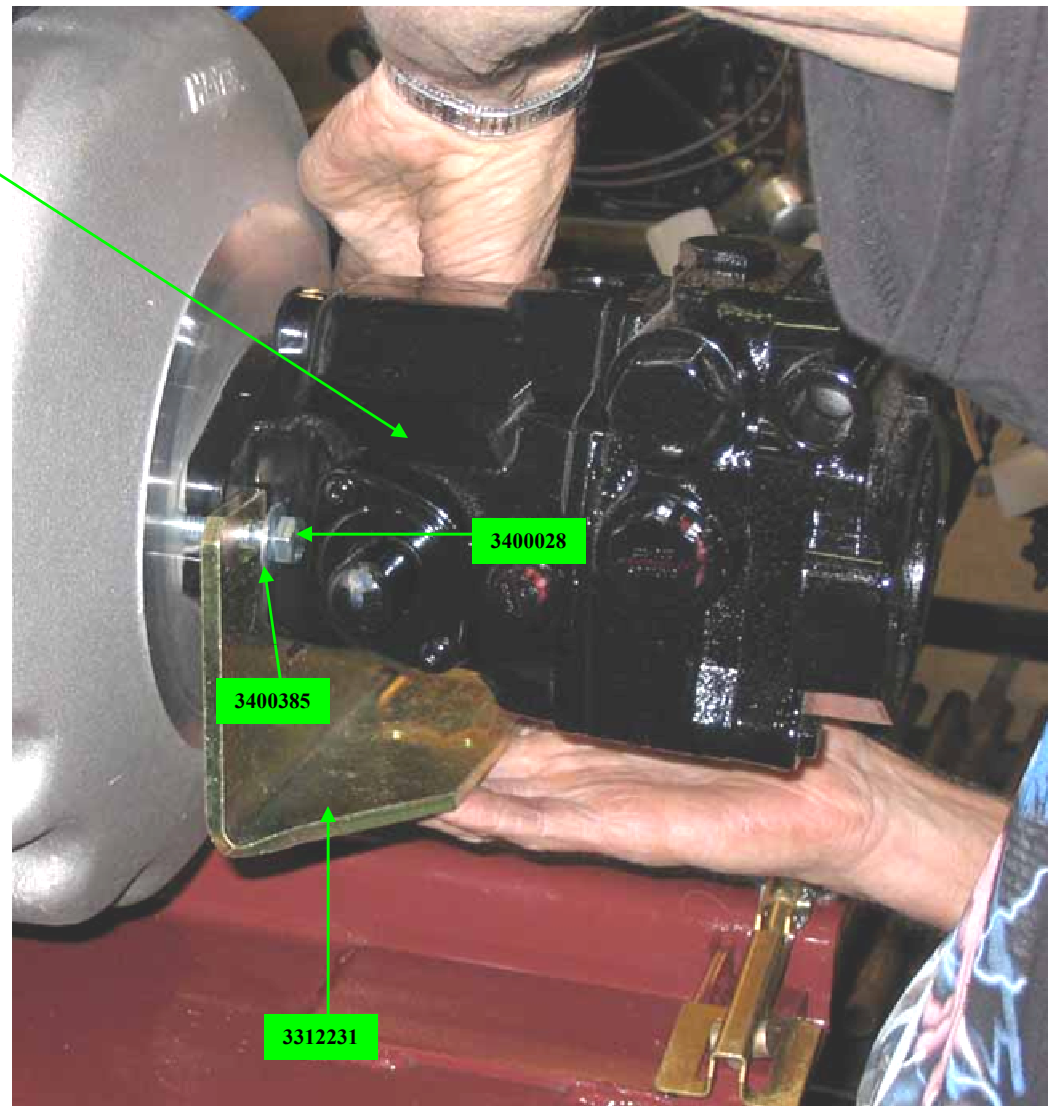

Place MNT-FWD/REV DSL SW/62 PLTD under PUMP-MAIN VD FS, as shown above. Insert screws with washers through mount into holes in bell housing. Tighten.