


# ***Minuteman***<sup>®</sup>

## **HOSPITAL FILTER INSTALLATION**

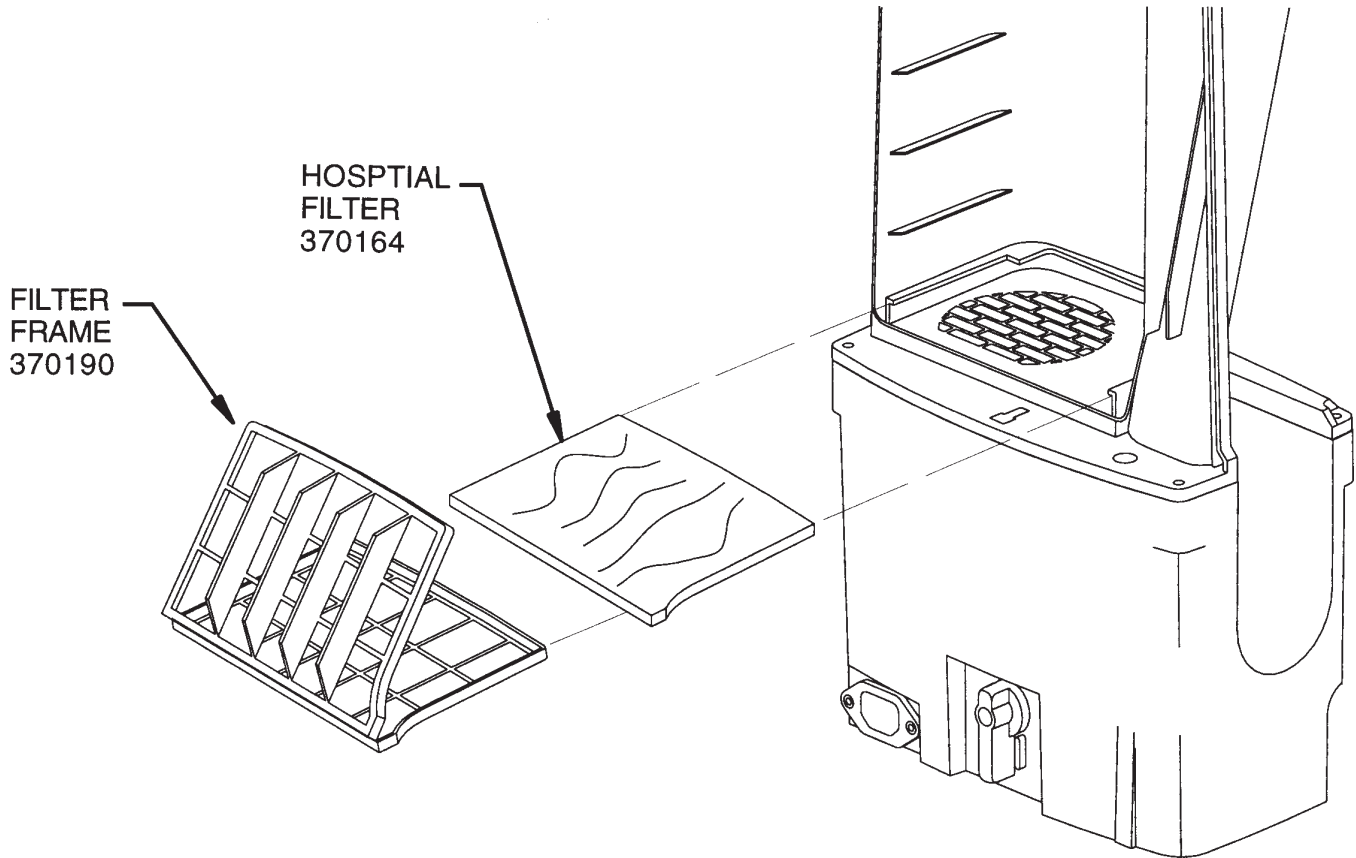

1. Remove black filter media from the standard filter frame assembly.
2. Place hospital grade filter into plastic filter frame and fold closed.
3. Slide filter frame into pocket as far as it will freely travel.
4. With slight pressure deflect the center of filter frame upward approximately 1/8" and continue to slide filter frame into pocket until locking tab snaps.
5. Repeat the steps outlined above each time a new collection bag is installed into the machine.

# ***Minuteman***<sup>®</sup>

**World Headquarters**  
Minuteman International, Inc.  
111 South Rohlwing Road  
Addison, Illinois 60101

(630) 627-6900  
FAX (630) 627-1130

Minuteman Canada, Inc.  
2210 Drew Road  
Mississauga, Ontario  
L5S 1B1

(905) 673-3222  
FAX (905) 673-5161

999007  
Printed in U.S.A.