


K260-9 SQUEEGEE CONVERSION

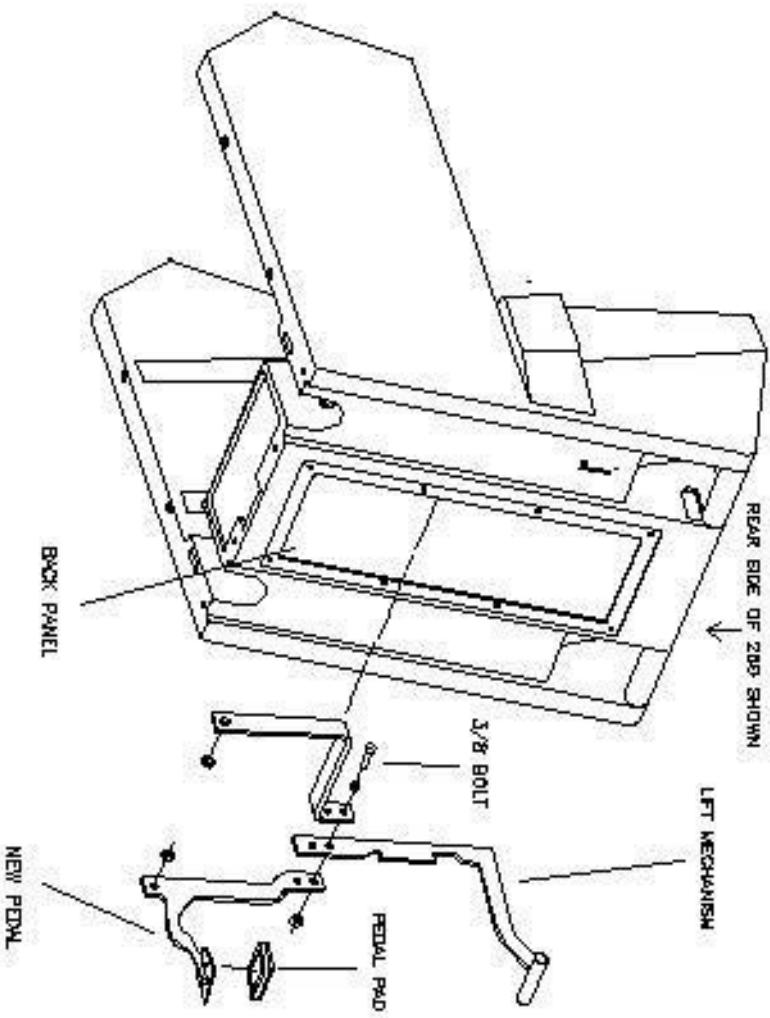

STEPS FOR CONVERSION

1. LOWER THE SQUEEGEE TO THE FLOOR
2. OPEN THE BACK PANEL BY REMOVING THE SCREWS
3. REMOVE THE 3/8 HARDWARE USED TO HOLD THE PEDAL ON THE LEFT MECHANISM. REMOVE THE PEDAL.
4. ATTACH THE PEDAL SUPPLIED IN THE KIT IN THE ORIENTATION SHOWN ABOVE USING THE SAME HARDWARE FROM THE ONE THAT WAS REMOVED.
5. ATTACH THE RUBBER PEDAL PAD TO THE PEDAL IF YOUR MACHINE ALREADY HAS A RUBBER PEDAL, THEN DISREGARD
6. REATTACH THE BACK PANEL.
7. ATTACH THE NEW SQUEEGEE TO THE SQUEEGEE MECHANISM AND YOUR MACHINE SHOULD BE READY TO SCRIBE