**DOCUMENTED BY: John Myers** 

PAGE NUMBER: 25

DATE: 12/5/06



Thread (1) BALL JOINT 1/4-28 LONG LG **3342584** onto end of rod on end of directional cable, as shown above. Tighten.

Get (1) WELD-LEVER FWD/AFT CABLE (3342568).






Parts: 3342568

**DOCUMENTED BY: John Myers** 

PAGE NUMBER: 26

DATE: 12/5/06



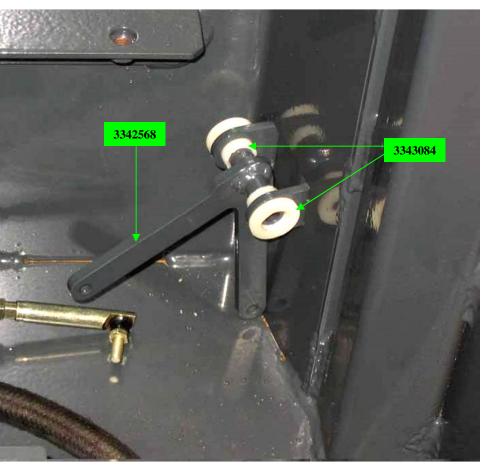


Align WELD-LEVER FWD/AFT CABLE **3342568** with welded bracket in right-front corner of floor of driver's compartment and insert (2) BUSHING-FLING 17/32, NYLON **3343084** through holes to mount WELD-LEVER FWD/AFT CABLE, as shown at right.

**DOCUMENTED BY: John Myers** 

PAGE NUMBER: 27

DATE: 12/5/06

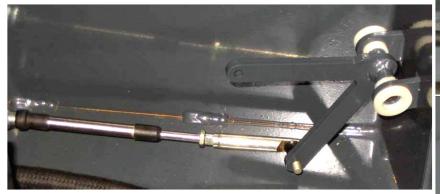



Get (1) SCR-HEX,5/16-18X3.00 GR 5 (**3400467**), (1) NUT-HEX NYLOC 5/16-18 SS (**712683**) and (2) WASHER-FLAT 5/16 ID X .688 OD (**3400088**). Put flat-washer on SCR-HEX,5/16-18X3.00 GR 5 and insert through bushings and WELD-LEVER FWD/AFT CABLE. Secure on back with NUT-HEX NYLOC 5/16-18. Tighten.

Insert end of BALL JOINT 1/4-28 LONG LG into bottom of WELD-LEVER FWD/AFT CABLE and secure with (1) WASHER-LOCK 1/4 SPLIT ZP **3400103** and (1) NUT-HEX 1/4-28 ZP **3400180**. Tighten.

Parts: 3400467 / 712683 / 3400088

Tools: (2) ½" Wrenches / 7/16" Wrench

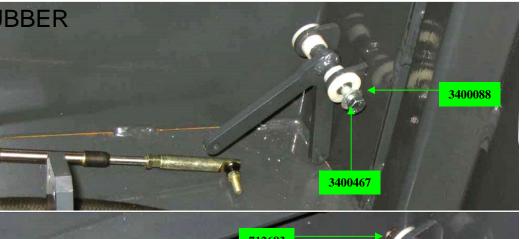

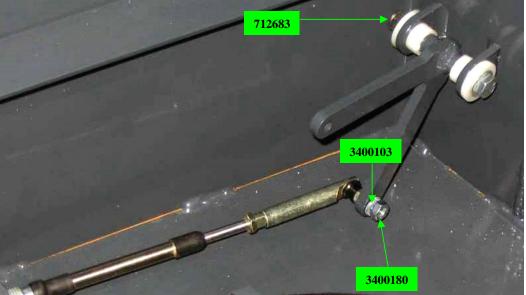




**DOCUMENTED BY: John Myers** 


PAGE NUMBER: 28

DATE: 12/5/06

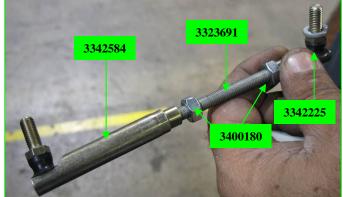


Thread (2) NUT-HEX 1/4-28 ZP **3400180** onto (1) ROD-THREADED 1/4-28 X 2.5 LG **3323691**.

Thread (1) BALL JOINT 1/4-28 STD LG **3342225** onto one end of ROD-THREADED and (1) BALL JOINT 1/4-28 LONG LG **3342584** onto other end, as shown above.

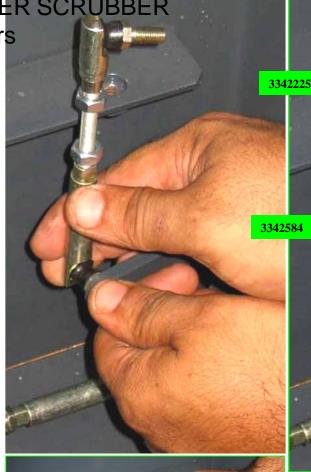



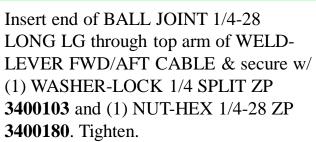

3400180

3400103

Place (1) WASHER-LOCK 1/4 SPLIT ZP **3400103** onto BALL JOINT 1/4-28 STD LG **3342225** for later.

Tools:

8mm / 7/16" Gear Wrench