


MODEL: WC-02 5550 SWEEPER SCRUBBER

DOCUMENTED BY: John Myers

PAGE NUMBER: 16

DATE: 12/5/06

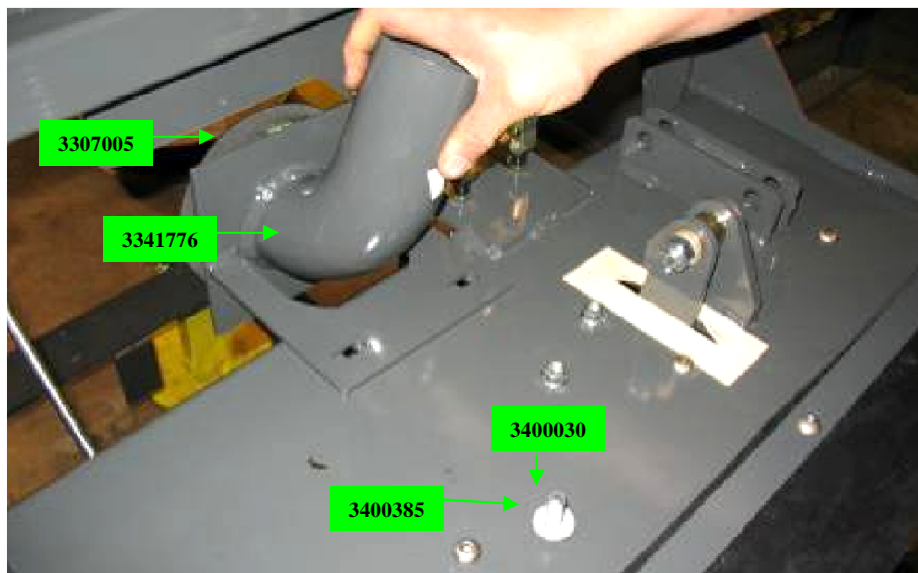

Put (2) WASHER-CONICAL SPRING 3/8 (**3400385**) onto (2) SCR-HEX,3/8-16X1.00 ZP (**3400030**). Place bracket over holes in broom well. Insert bolts in holes through bracket and broom well and center on slotted holes. Put (2) NUT-FLANGE LOCK 3/8-16 (**3400392**) on bolts and tighten.

Parts: 3307005 / 3341776 / 3400385 / 3400030  
3400392

Tools: 9/16" Socket / Air Ratchet

