

Ride On Scrubbers

Parts Schematic



AS30RIDER
AS36RIDER

Item #86004
Item #86005




CODE:				PF03027BC-2 ac SN from 00E200			
DESCRIPTION:							
REF.	CODE	DESCRIPTION	QT				
1	PL1045	WHEEL					
2	PL1050	CHASSIS					
3	PL1052	PEDAL BRAKE					
4	PL1051	DRIVE					
5	PL1044	STEERING COLUMN					
6	PL1040	TANK SUCTION					
7	PL1041	TANK-ACCESSORIES					
8	PL1039	HYDRAULIC UNIT					
9	PL1334	HYDRAULIC UNIT					
10	PL1070	SQUEEGEE 95					
11	PL1069	SQUEEGEE LIFT					
12	PL1058	BATTERY CASE					
13	PL1071	HEAD 78: FLAP AND BOX					
14	PL1072	HEAD 78:PULLEY AXLE					
15	PL1073	HEAD 78: MOTOR					
16	PL1059	HEAD EXIT					
17	PL1047	REAR HEAD LIFTING					
18	PL1048	FRONT HEAD LIFTING					
19	PL1060BC	ELECTRIC UNIT 1					
20	PL1061	ELECTRIC UNIT 2					
21	PL1062	ELECTRIC UNIT 3					
22	PL1063	ELECTRIC UNIT 4					
23	PL1053	HAND BRAKE					
24	PL1066	SQUEEGEE PEDAL					
	PL1235	BRUSH					
	PL1276	EXTERNAL PARTS					
	WD27126-2	WIRING DIAGRAM					

CODE:

pl1017 ac SN from 99E000


DESCRIPTION:	PUMP	PUMPE	POMPE	BOMBA	POMPA
--------------	------	-------	-------	-------	-------

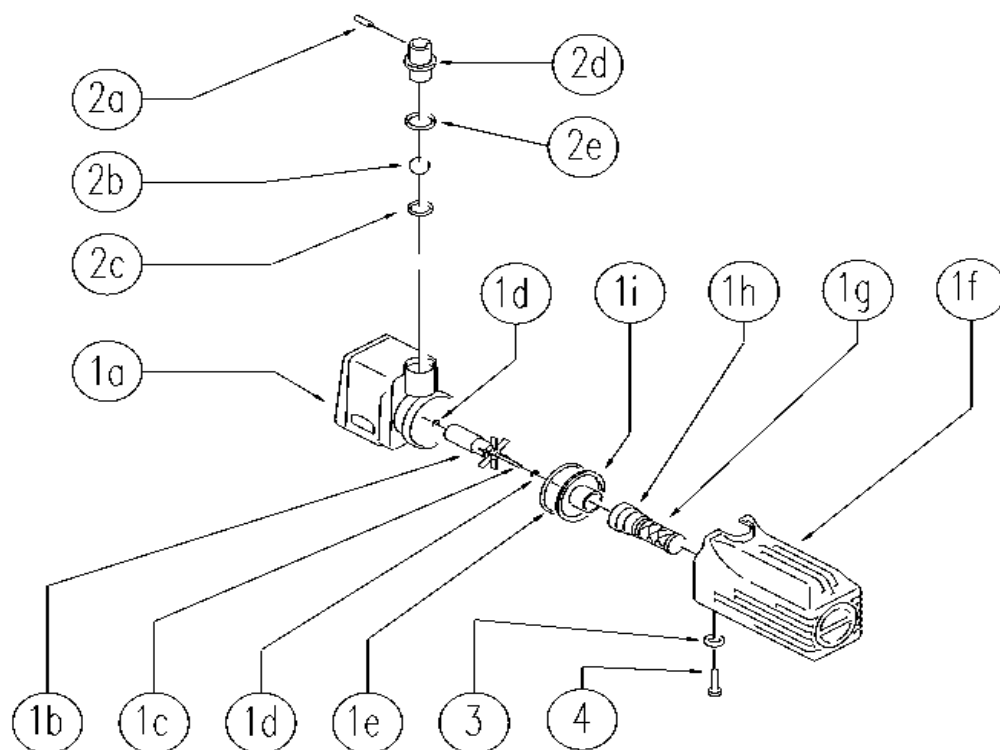

REF.	CODICE	DESCRIPTION	QT
1	E86611	Pump	1
1a	SL02125-1	BODY	1
1b	SL02125-2	ROTOR	1
1c	SL02125-5	PIN	1
1d	SL02125-4	SUPPORT	2
1e	SL03402	GASKET	1
1f	SL02125-9	HOLDER	1
1g	E89420	Pump Filter	1
1h	SL18333	UNION / CONNECTOR	1
1i	SL02125-7	CATCH / LOCK	1
2a	E86913	AS30/36 Pin/Plug	1
2b	E86914	AS30/36 Ball	1
2c	E86915	AS30/36 Gasket	1
2d	E86916	AS30/36 Nozzle	1
2e	SL03343	GASKET	1
3	E86768	Washer	1
4	E86306	Screw	1

				CODE:		p1040 ab SN from 98I000
DESCRIPTION:	TANK	TANK	RESERVOIR	TANQUE		
REF.	CODE	DESCRIPTION	QT			
1	E86692	AS28 Coupling Clutch	1			
2	SL19219	HOSE	1			
4	SL09680	FRAME	1			
5	E89233	Gasket	1			
6	E89271	Coupling / clutch	1			
7	E86853	Nyloc Hex Nut, M8 Zinc	1			
8	E86879	Washer	2			
9	E86922	Plate for Drain Pipe	1			
10	SL07112	SPACER	1			
11	E89464	Screw	1			
12	SL07319	HOSE	1			
13	E89470	Sleeve	1			
14	E89074	Gasket for WS36	1			
20	SL09684	SUPPORT	1			
21	E86707	Cham Washer D10	4			
22	SL04223	SCREW	4			
23	E86700	Cham Washer D6	7			
24	SL04247	SCREW	3			
25	E86707	Cham Washer D10	4			
26	E86706	Screw TE M 6-16	4			
27	E89298	Solution hose	1			
28	E89299	Solution hose	1			
29	E86805	Vacuum Motor AS30/36	1			
30	E86612	Gasket for vacuum motor	2			
31	SL07398	CONNECTOR	1			
32	SL09685	FLANGE	1			
33	E86557	clamp AS30/36	2			
34	E86948	Hose	1			
35	E86848	Vacuum Hose	1			
36	E86460	Cable tie 12"	2			
37	E86751	Clamp 10-16	2			
38	E86638	Union Elbow	2			
40	E86866	Recovery Hose, Rhino	1			
41	E86849	Sleeve	1			
42	E86965	Connector	1			
43	SL14079	CLAMP	2			
44	E86962	Sheath, Drain Hose	1			
45	E86961	Adapter, Drain Hose	1			
46	E86966	Hose Holder	1			
47	E86968	Gasket	1			
48	E86967	Cap	1			
50	MP19140	SHEATH	1			
51	E89272	Fairlead cable guide	2			
52	E89273	Fairlead	1			


		CODE:		p11041 aa SN from 96D673	
DESCRIPTION:	TANK-ACCESSORIES	TANK	RESERVOIR	TANQUE	SERB.: ACCESSORI
REF.	CODE	DESCRIPTION			QT
2	E86844	Gasket, Lid - Red			1
3	SL17363	LID			1
4	E89276	Screw			11
5	SL03275	SCREW			1
6	E86974	Sifter Room Cover			1
7	E89118	Washer			6
8	E89469	M4 - 15 Phil Pan Head Screw			6
9	E86806	Vacuum Filter			1
10	SL23464	FLASH-LIGHT (n.)			1
11	E86919	AS30/36 Bulb			1
12	E86750	Washer D5 UNI 6591 NOXA			3
13	E86902	AS30/36 Seat Anchorage Pla			1
14	E86901	AS30/36 Seat Back Screw			1
15	SL14191	SEAT BACK			1
20	SL14190	SEAT			1
21	SL03103	PLUG / STOPPER			4
22	E86707	Cham Washer D10			4
23	E86708	Screw TE M 6-35			6
24	SL05012	NUT			4
25a	SL23894	FUSE-HOLDERS			1
25b	SL23893	LID			1
26	SL09901	LID			1
27	SL20045	CATCH / LOCK			1
28	E86836	Fuse 100 amp			1
29	E86643	Fuse 75 amp			1
30a	E86825	Fuse 5 amp			4
30b	E86827	Fuse 25 amp			1
30c	E86826	Fuse 15 amp			1
31	SL07293	SPACER			2
32	E86704	Washer D 6-18			2
33	SL09540	PLATE			1
34	E86700	Cham Washer D6			1
35	SL04180	SCREW			2
40	E86704	Washer D 6-18			1
41	SL04196	SCREW			1
42	SL04252	SCREW			1
43	E86853	Nyloc Hex Nut, M8 Zinc			1
44	SL04223	SCREW			5
45	SL09694	PLATE			1
46	SL07337	SPACER			1
47	E86552	nut			1
48	SL14199	TERMINAL			2
49	E86835	Floating Switch			1
50	SL17395	REINFORCEMENT			1
51	SL17499	PANEL			1
52	SL11108	RING			2
53	SL06080	WASHER			2
54	SL07301	PIN			2
55	E86453	AS20 Bushing			2
60	SL07308	SUPPORT			1
61	E86726	Washer			1
62	SL04083	SCREW			1

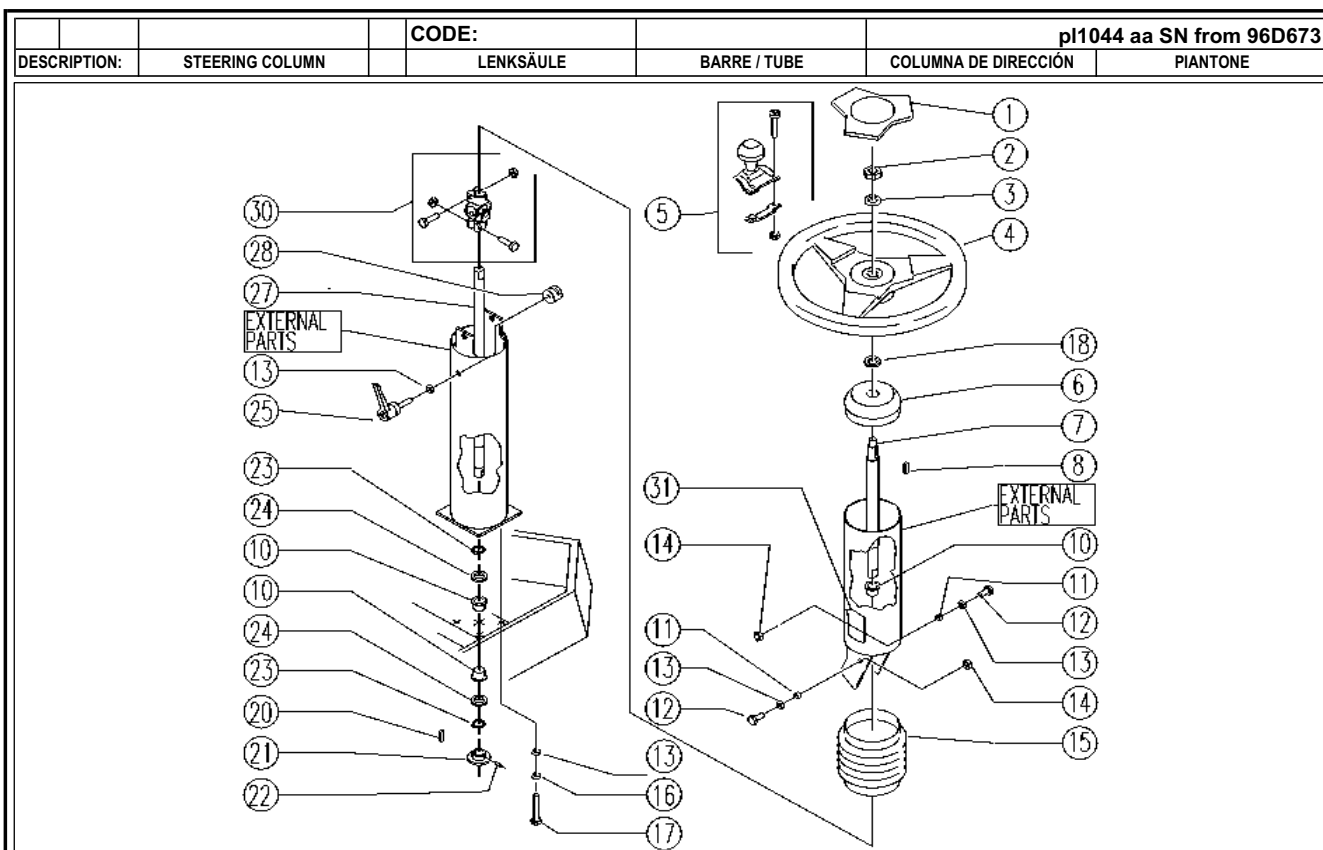


REF.	CODE	DESCRIPTION	QT
1	SL14194	CAP	1
2	SL05037	NUT	1
3	SL06029	WASHER	1
4	SL14195	STEERING WHEEL	1
5	E86953	Knob, Steering Wheel	1
6	SL07268	CAP	1
7	SL07260	SHAFT	1
8	E86536	Key	1
10	E89268	Bushing	3
11	SL07062	SPACER	2
12	SL04023	SCREW	2
13	E86726	Washer	7
14	E86853	Nyloc Hex Nut, M8 Zinc	2
15	E89109	Protective boot cover	1
16	E86702	Cham Washer D8	4
17	E86870	Screw	4
18	SL06096	WASHER	1
20	E89199	Key 5-5-15	1
21	SL10056	PINION	1
22	SL11048	GRAIN	1
23	SL11094	RING	2
24	SL06074	WASHER	2
25	E86920	AS30/36 Lever	1
27	SL07259	SHAFT	1
28	E89444	Lock	1
30	SL12023	JOINT	1
31	SL25559	LABEL	1

		CODE:		pl1045 aa SN from 98D84	
DESCRIPTION:	WHEEL	RÄDCHEN	ROUE	RUEDA	RUOTA


REF.	CODE	DESCRIPTION	QT
1	E86726	Washer	14
2	E86356	Spacer AS36	1
3	E86357	Chain Tightner AS36	1
4	E86486	Screw TE M8-45	1
5	SL02112	GEARMOTOR	1
6	SL04192	SCREW	2
7	E86702	Cham Washer D8	12
8	SL23468	ELECT. HOUSING	1
9	E86797	Washer	2
10	E86336	M4 - 10 Screw	2
11	SL06066	WASHER	1
12	E86536	Key	1
13	E86972	AS36 Pinion	1
14	SL09706	PLATE	1
15	E86707	Cham Washer D10	4
16	E86700	Cham Washer D6	1
17	E86366	screw WS20	3
18	E86979	Washer D 8-24	5
19	SL04023	SCREW	10
20	E86703	Nut M8	1
21	E86870	Screw	1
22	E86986	Traction Chain	1
23	E86987	Chain Link	2
24	E86854	Nut	2
25	E86855	Washer	4
26	E86856	Spacer	1
27	E86984	Drive Wheel AS30/36	1
28	E86857	Pin	1
29	E86858	Spacer	1
30	E86817	Bearing	1
31	E86859	Spacer	1
32	E86991	Crown	1
35	SL09687	FORK	1
37	SL05079	NUT	1
38	E87809	Steering Chain AS30/36	1
39	SL10034	CROWN	1
40	SL07096	SPACER	1
41	SL12014	BEARING	1
42	SL03461	GUARD	1
43	E86814	bearing	1
44	SL12021	RING	1
45	SL07450	SCREW	1
46	E86853	Nyloc Hex Nut, M8 Zinc	1
47	SL11121	SPLIT PIN	1
48	SL11048	SPLIT PIN	1
-	SL07258	MOTOR DRUM	1

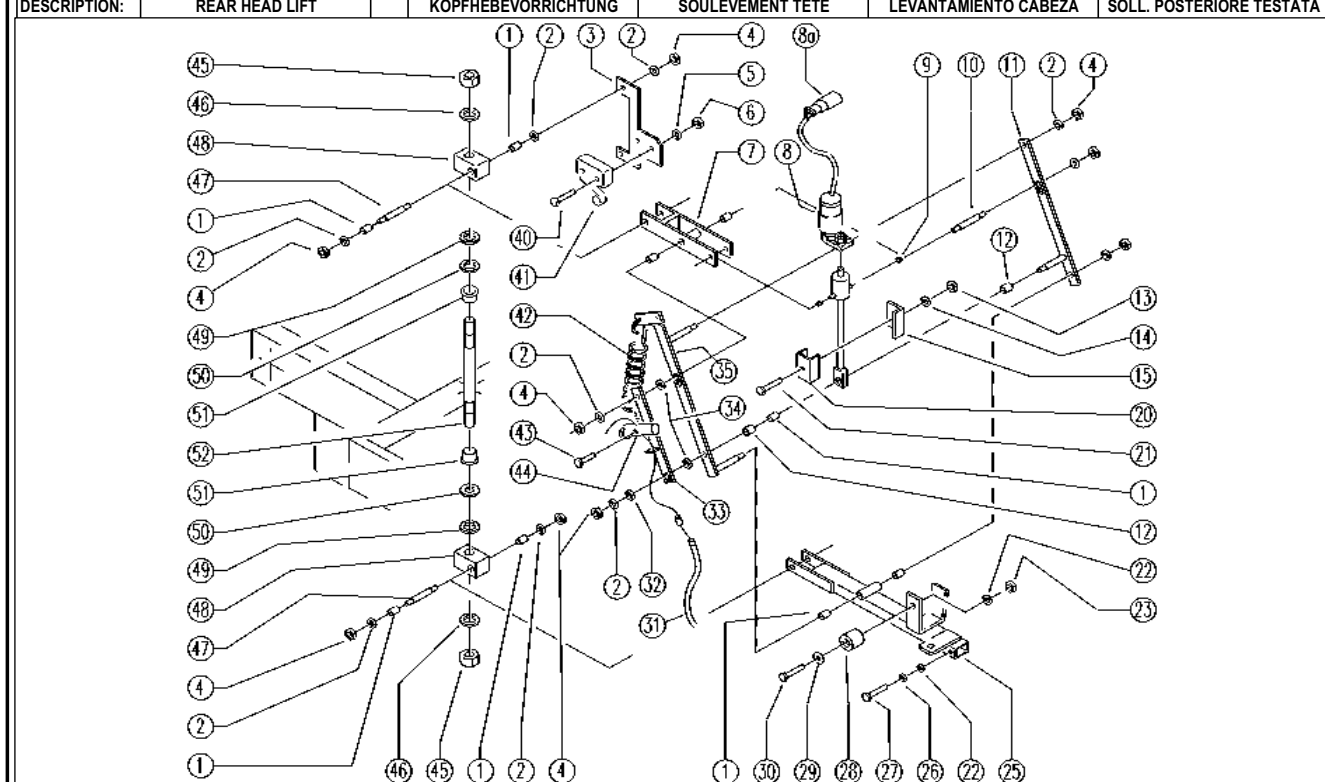		CODE:		pl1047 ab SN from 97F757	
DESCRIPTION:	REAR HEAD LIFT	KOPFHEBEVORRICHTUNG	SOULEVEMENT TETE	LEVANTAMIENTO CABEZA	SOLL. POSTERIORE TESTATA
					
REF.	CODE	DESCRIPTION	QT		
1	E89442	Bearing	9		
2	E86726	Washer	10		
3	SL09852	SUPPORT	1		
4	E86853	Nyloc Hex Nut, M8 Zinc	10		
5	E86797	Washer	2		
6	E86739	AS28 Nut	2		
7	SL09520	LEVER	1		
8	E86801	Actuator	1		
8a	E89106	Wire harness WS36	1		
9	E89441	Bearing	2		
10	E89450	Pin	1		
11	SL09736	LEVER	1		
12	E89443	Spacer	2		
13	SL05007	NUT	1		
14	SL06016	WASHER	1		
15	SL09734	SUPPORT	1		
20	SL09743	SPACER	1		
21	SL04013	SCREW	1		
22	E86707	Cham Washer D10	3		
23	E87868	Self Locking Nut	1		
25	SL09519	LEVER	1		
26	E86700	Cham Washer D6	2		
27	E89486	Screw	2		
28	SL03103	CAP	1		
29	E86758	Washer	1		
30	E86705	Screw TE M 6-30	1		
31	SL14225	CABLE	1		
32	E86881	Washer	1		
33	SL09749	PLATE	1		
34	E86980	Washer D13-24-2.5	2		
35	SL09735	PLATE	1		
40	SL04107	SCREW	2		
41	E86828	Microswitch	1		
42	E86937	AS36 Spring	2		
43	SL04180	SCREW	1		
44	SL07314	PIN	1		
45	SL05037	NUT	2		
46	SL06029	WASHER	2		
47	SL07272	PIN	2		
48	SL07274	BLOCK / LOCK	2		
49	E86855	Washer	2		
50	SL06074	WASHER	2		
51	E89268	Bushing	2		
52	SL07273	PIN	1		

		CODE:		pl1048 aa SN from 96D673	
DESCRIPTION:	FRONT HEAD LIFT	KOPFHEBEVORRICHTUNG	SOULEVEMENT TETE	LEVANTAMIENTO CABEZA	SOLL.ANTERIORE TESTATA

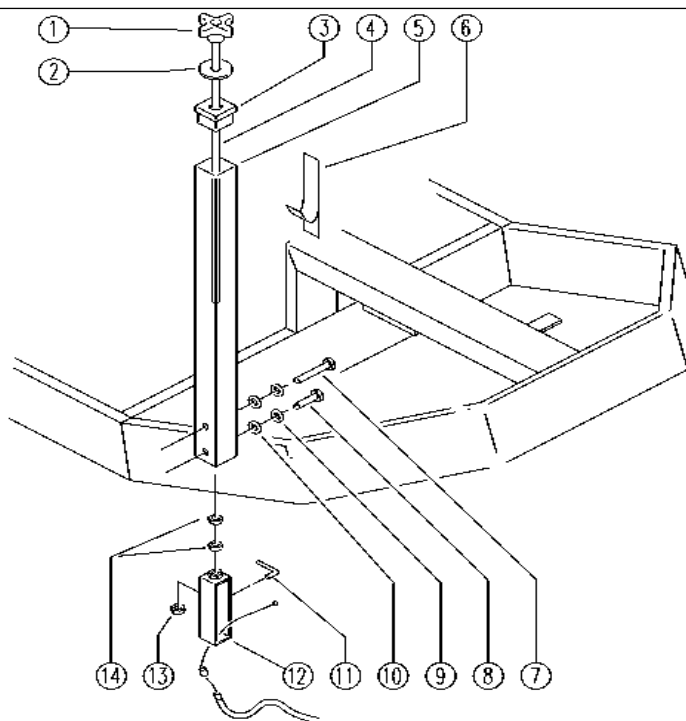


REF.	CODE	DESCRIPTION	QT
1	E86852	Squeegee Knob AS30/36	1
2	E86588	washer FS28/32	1
3	SL14308	CAP	1
4	SL04287	BAR	1
5	SL09746	STRUCTURAL	1
6	SL25903	ADESIVE LABEL	1
7	SL04019	SCREW	1
8	SL04023	SCREW	1
9	E86702	Cham Washer D8	2
10	E86726	Washer	2
11	SL07316	INDICATOR	1
12	SL09747	PLATE	1
13	E86853	Nyloc Hex Nut, M8 Zinc	1
14	E86703	Nut M8	2

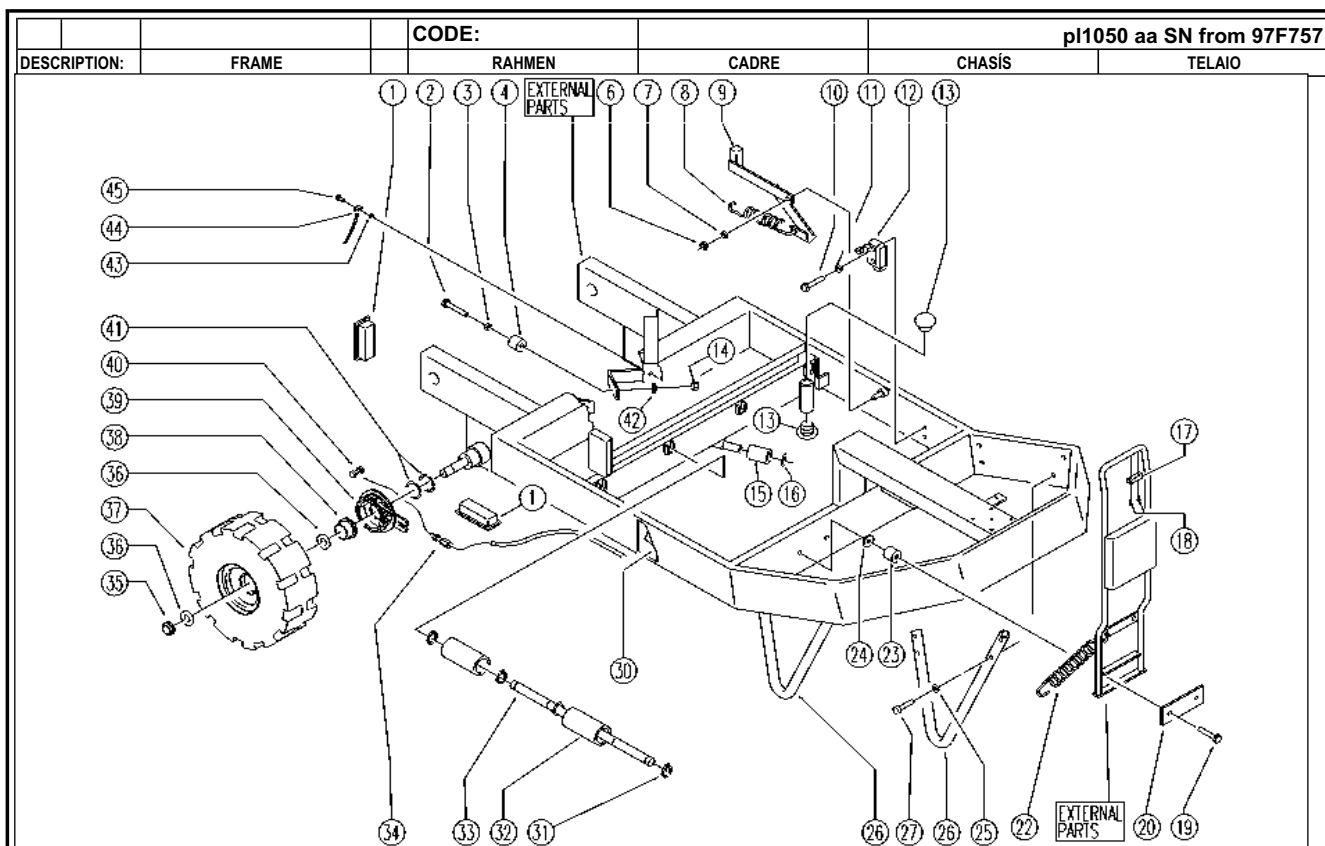


REF.	CODE	DESCRIPTION	QT
1	SL14198	TERMINAL	4
2	E86705	Screw TE M 6-30	2
3	E86758	Washer	2
4	SL03103	PLUG / STOPPER	2
6	E86853	Nyloc Hex Nut, M8 Zinc	1
7	E86726	Washer	1
8	E88578	Spring	1
9	SL09698	LEVER	1
10	SL04107	SCREW	2
11	E86797	Washer	2
12	E86828	Microswitch	1
13	SL14217	PLUG	6
14	E86552	nut	2
15	SL07325	ROLLER	1
16	SL11021	SEEGER	1
17	SL07336	CONNECTION	1
18	SL04231	SCREW	2
19	SL04198	SCREW	2
20	SL09529	PLATE	1
22	SL13013	SPRING	2
23	SL07067	SPACER	2
24	E86719	AS20 Washer	2
25	E86702	Cham Washer D8	8
26	SL09769	HOSE	2
27	E87863	Screw WS20/24	8
30	SL25602	LABEL	1
31	E86537	Ring	16
32	SL07351	ROLLER	8
33	SL07300	PIN	4
34	SL14222	REGISTER	2
35	E86854	Nut	2
36	E86855	Washer	4
37	SL08030	WHEEL	2
38	E87941	Bushing, flange	2
39	SL14192	BLOCK	2
40	SL14031	CLAMP	2
41	SL06075	WASHER	4
42	E86707	Cham Washer D10	2
43	E89119	Washer	1
44	SL23593	CABLE	1
45	E86706	Screw TE M 6-16	1


			CODE: pl1051aa SN from 96D673			
DESCRIPTION:	DRIVE	ANTRIEB	TRACTION	TRACCION	TRAZIONE	

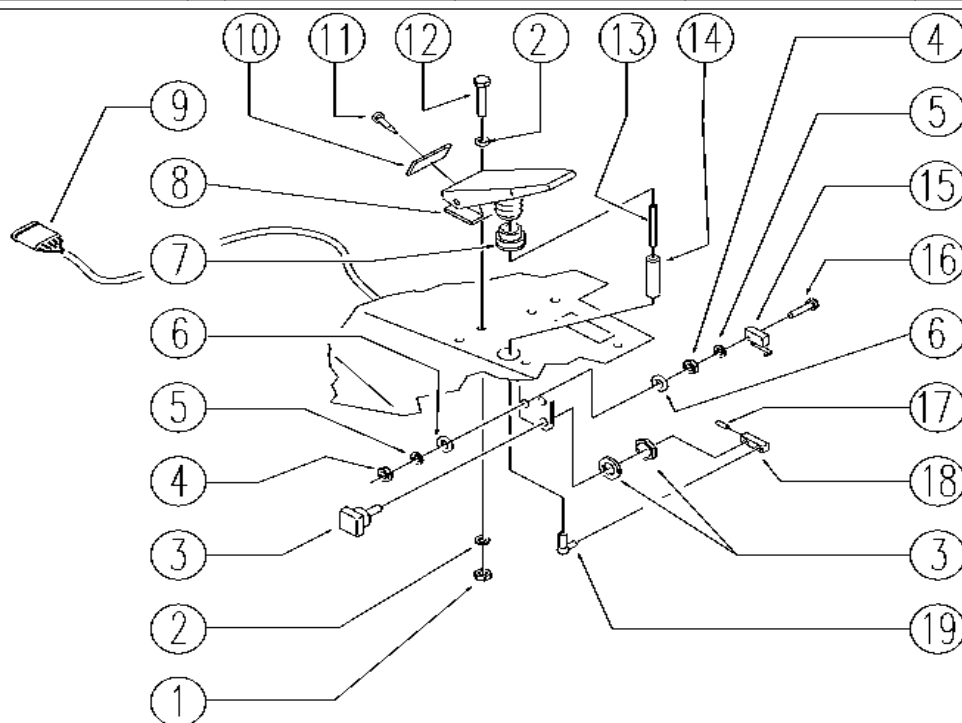

REF.	CODE	DESCRIPTION	QT
1	E86552	nut	2
2	E86707	Cham Washer D10	4
3	E86824	Potentiometer	1
4	E89274	Nut	4
5	E89275	Washer	4
6	E86797	Washer	4
7	E86364	bushing AS36/WS36	1
8	E89269	Actuator pedal	1
9	SL23928	WIRING	1
10	E89270	Spacer	1
11	E89276	Screw	1
12	E89486	Screw	2
13	E89277	Threaded bar	1
14	E89209	Spacer	1
15	E86823	Micro Switch	1
16	E86597	screw	2
17	E87839	Split Pin WS36T	1
18	E86760	Potentiometer	1
19	E87840	Articulation WS36T	1

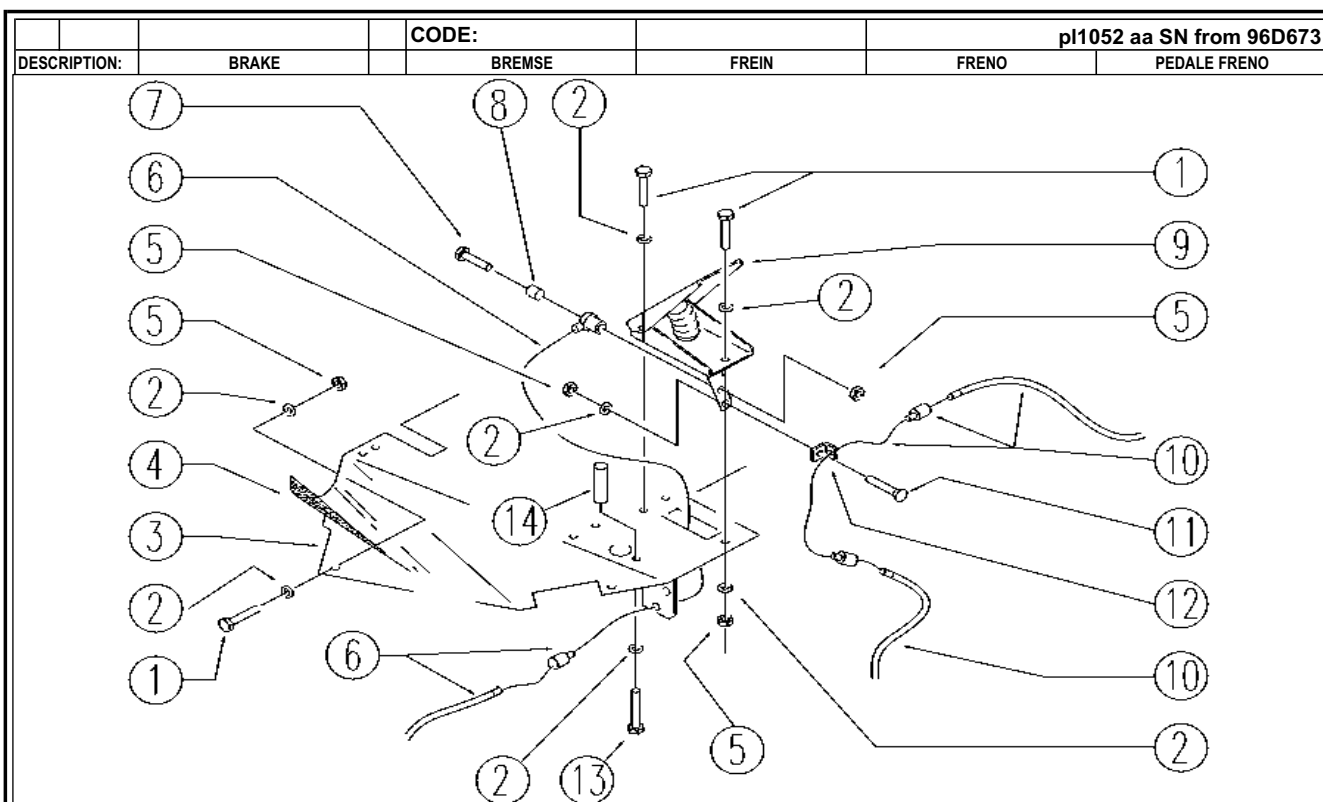


REF.	CODE	DESCRIPTION	QT
1	E89486	Screw	10
2	E86707	Cham Washer D10	22
3	SL09688	FOOTBOARD	1
4	SL03242	COVERING / COATING	1
5	E86552	nut	12
6	SL14210	CABLE	1
7	E86366	screw WS20	1
8	E87909	Spacer	1
9	SL22011	TREADLE	1
10	SL14216	CABLE	1
11	E86901	AS30/36 Seat Back Screw	1
12	SL09723	BLOCK / LOCK	1
13	E86366	screw WS20	1
14	SL07333	SPACER	1

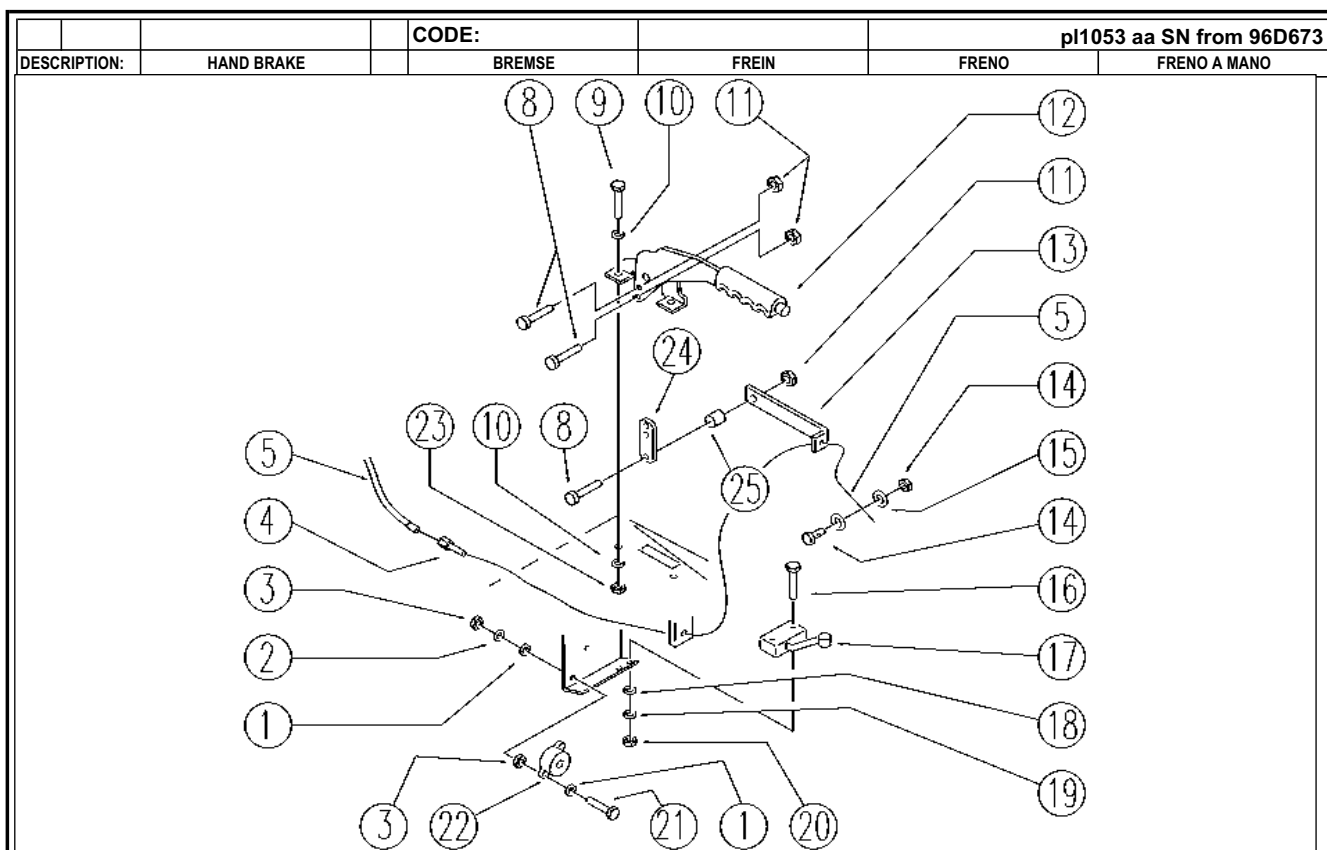

REF.	CODE	DESCRIPTION	QT
1	SL06009	WASHER	4
2	E89275	Washer	2
3	E89274	Nut	4
4	SL14222	REGISTER	1
5	SL14210	CABLE	1
8	SL04023	SCREW	3
9	E89486	Screw	2
10	E86707	Cham Washer D10	4
11	E86853	Nyloc Hex Nut, M8 Zinc	3
12	SL20042	LEVER	1
13	SL09731	SMALL BRACKET	1
14	SL14212	CLAMP	1
15	E88091	Washer Watchman 24	2
16	SL04197	SCREW	2
17	E86828	Microswitch	1
18	E86797	Washer	2
19	E86769	Washer	2
20	SL05012	NUT	2
21	E86597	screw	2
22	SL23354	INDICATOR	1
23	E86552	nut	2
24	SL09722	BLOCK / LOCK	1
25	SL07062	SCREW	1


			CODE:		pl1058 aa SN from 96D673	
DESCRIPTION:	BOX		BEHÄLTER	CAISSON	CAJA	CASSONE BATTERIE

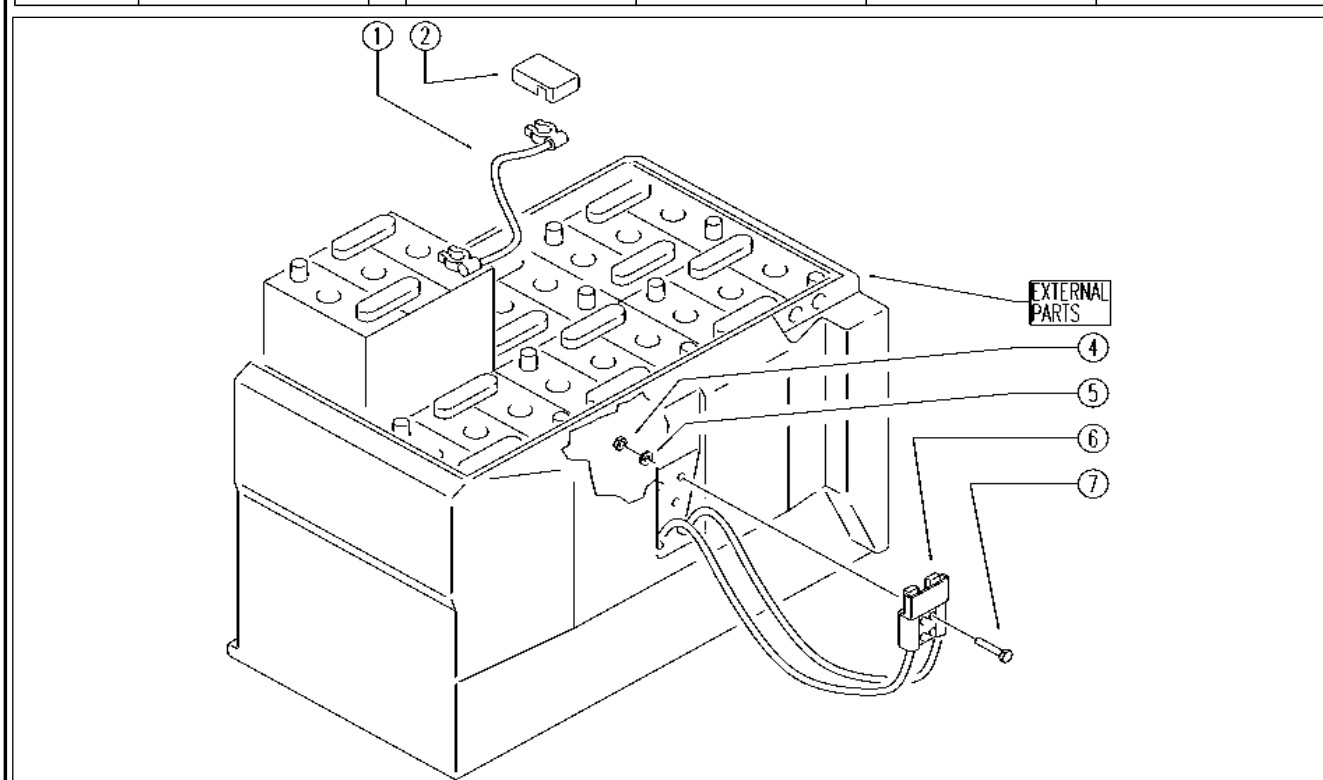


REF.	CODE	DESCRIPTION	QT
1	SL23940	BRIDGE / JUMPER	5
2	E86443	Cable Covers	12
4	E86552	nut	4
5	E86707	Cham Washer D10	4
6	E89221	Wiring	1
7	E86708	Screw TE M 6-35	4

		CODE:		pl1059 aa SN from 96D673	
DESCRIPTION:	HEAD EXIT	AUSGANG KOPF	SORTE TETE	SALIDA CABEZA	USCITA TESTATA

REF.	CODE	DESCRIPTION	QT
1	SL05037	NUT	1
2	SL06029	WASHER	1
3	E89268	Bushing	2
4	SL13028	SPRING	1
5	SL09692	BUMPER	1
6	E86975	Rubber Gasket D11.25 L=10	5
7	E86979	Washer D 8-24 Lge Band Zinc P	4
8	E86869	Screw	1
9	SL04231	SCREW	6
10	E86707	Cham Washer D10	7
11	E86700	Cham Washer D6	1
12	E86706	Screw TE M 6-16	1
13	E86911	AS30/36 Spring	1
14	SL25604	LABEL	1
15	E86552	nut	8
20	SL13068	SPRING	1
21	SL17378	STRIP / BAND	1
22	E86901	AS30/36 Seat Back Screw	4
23	E87928	Plate	2
24	SL07295	ROLLER	1
25	E86450	Tank Support Handle	1
26	SL09525	LEVER	1
27	SL09524	LEVER	1
28	E88091	Washer Watchman 24	3
29	E86980	Washer PPL66 D13-24-2.5 Uni	4
30	E86853	Nyloc Hex Nut, M8 Zinc	3
31	E89169	Screw	8
32	SL17394	STRIP / BAND	1
33	E89496	Flap	1
34	SL09709	SUPPORT	1
35	E89118	Washer	8
40	E86739	AS28 Nut	8
41	SL09710	PLATE	1
42	E86705	Screw TE M 6-30	2
43	E86981	Spacer D 8-12 L=17,5	1
44	SL09517	LEVER	1
45	E89441	Bearing	2
46	E89464	Screw	1
47	E86452	AS20 Spacer	1
48	E86801	Actuator	1
49	SL09518	CRANK	1
50	E86726	Washer	1
51	E86933	Pivot Pin	1
52	E86976	Screw TSPE M6-12 Uni 5933	1

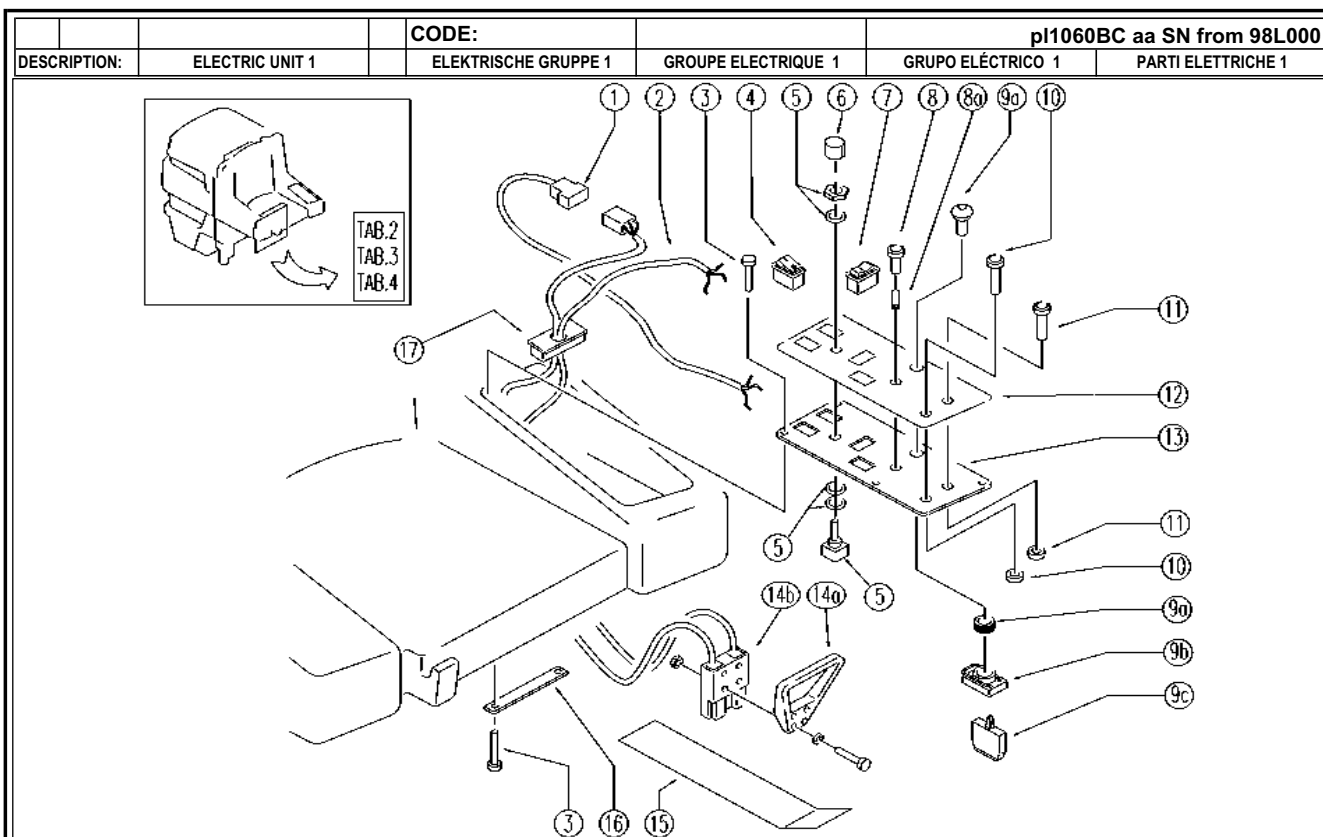


REF.	CODE	DESCRIPTION	QT
1	GR23478	CONTROL PANEL UNIT	1
2	GR23479	WIRING UNIT	1
3	SL04223	SCREW	10
4	E86423	Bipolar Switch	2
5	E86837	Potentiometer	1
6	E86644	Knob for Potentiometer	1
7	E86832	Switch for Move - Head	2
8	E86421	Reflector	1
8a	E86640	Control Battery Light	1
9a	E86840	Keyless Switch	1
9b	E86988	Operator	1
9c	E86988	Operator	2
	E86830	Horn Switch	1
	SL23461	PUSH-BUTTON	1
10	E88116	Push Button Horn	1
	E86909	AS30/36 Reverse Switch	1
	E86909	AS30/36 Reverse Switch	1
	E88116	Push Button Horn	1
11	E88116	Push Button Horn	1
	E88116	Push Button Horn	1
	E86909	AS30/36 Reverse Switch	1
12	E86935	Decal, Control Panel	1
13	SL09750	PLATE	1
14a	E86947	Handle Plug, Anderson	1
14b	E86946	Anderson Plug, 160 AC	1
15	SL09917	PLATE	1
16	SL09526	SUPPORT	3
17	SL14230	TERMINAL	1

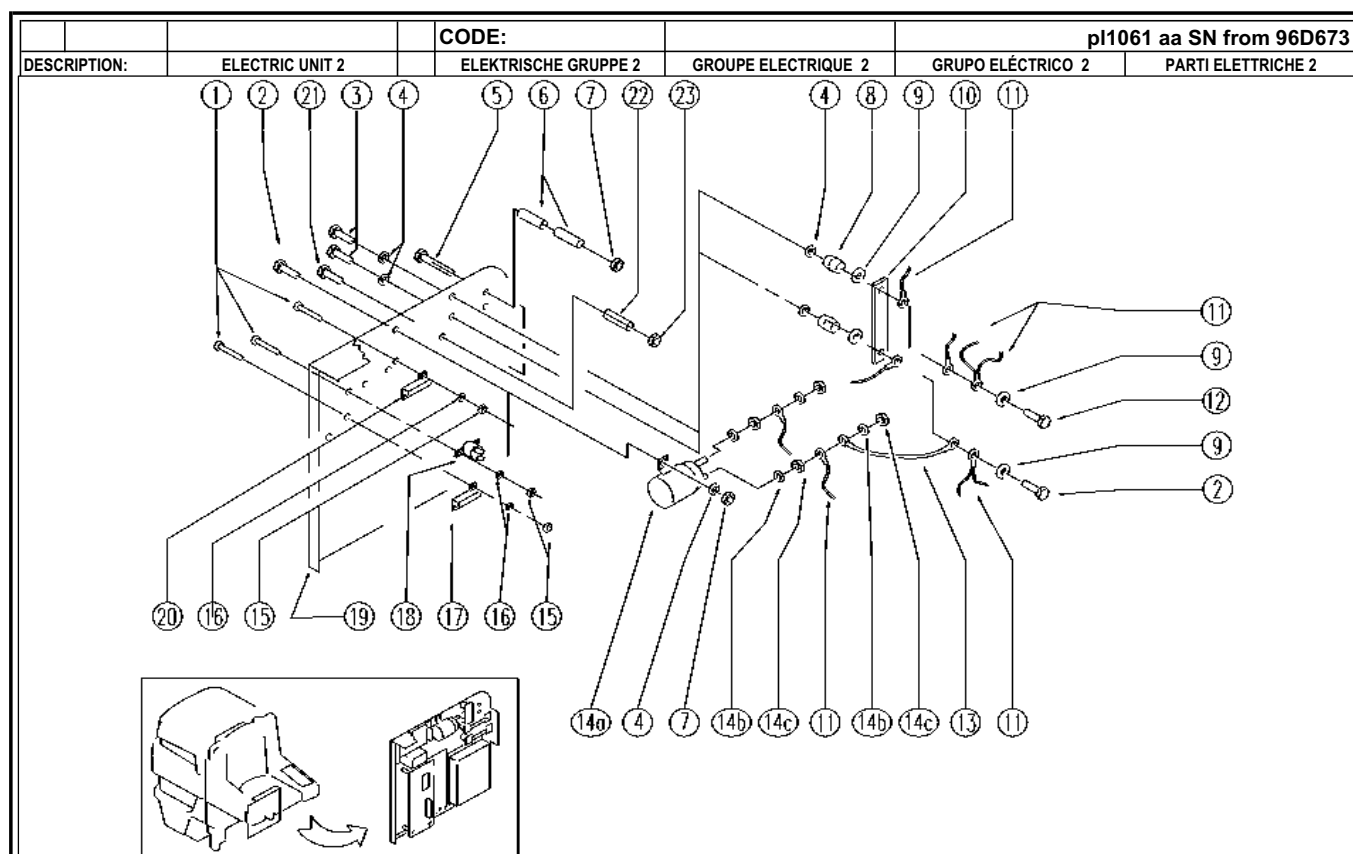


REF.	CODE	DESCRIPTION	QT
1	SL04179	SCREW	12
2	E89244	Screw	3
3	E86706	Screw TE M 6-16	2
4	E86707	Cham Washer D10	6
5	SL04196	SCREW	2
6	SL07176	SPACER	4
7	E87868	Self Locking Nut	4
8	E86563	support	2
9	E86704	Washer D 6-18	4
10	SL23569	BRIDGE / JUMPER	1
11	GR23479	WIRING UNIT	1
12	E86475	Screw TE M .6-20	1
13	SL23125	SHUNT	1
14a	E86829	Remote Control	1
14b	E86702	Cham Washer D8	4
14c	E86703	Nut M8	4
15	E88225	Nut	12
16	SL06009	WASHER	12
17	E89433	Resistor AS30/36	1
18	E87899	thermostat AS36	2
19	SL09682	PLATE	1
20	SL23969	RESISTANCE	1
21	SL04047	SCREW	1
22	SL07337	SPACER	1
23	E86853	Nyloc Hex Nut, M8 Zinc	1


		CODE:	pl1062 aa SN from 97E367	
DESCRIPTION:	ELECTRIC UNIT 3	ELEKTRISCHE GRUPPE 3	GRUPE ELECTRIQUE 3	GRUPO ELÉCTRICO 3
				ELECTRIC UNIT 3

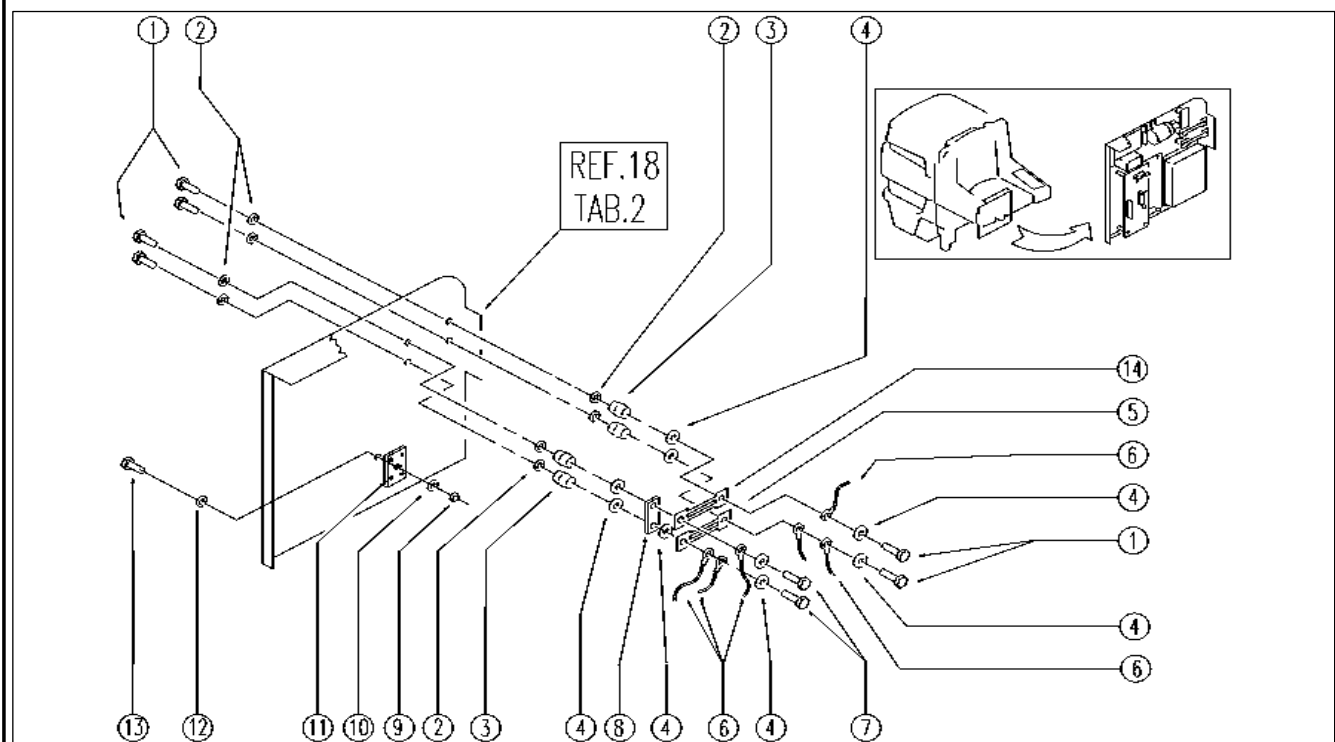


REF.	CODE	DESCRIPTION	QT
1	E89244	Screw	6
2	E86707	Cham Washer D10	8
3	E86563	support	4
4	E86704	Washer D 6-18	9
5	E86836	Fuse 100 amp	1
6	GR23479	WIRING	1
7	SL04180	SCREW	2
8	SL23569	BRIDGE / JUMPER	1
9	E86739	AS28 Nut	1
10	E86797	Washer	1
11	E89088	Rectifier	1
12	E86768	Washer	1
13	SL04088	SCREW	1
14	E86643	Fuse 75 amp	1

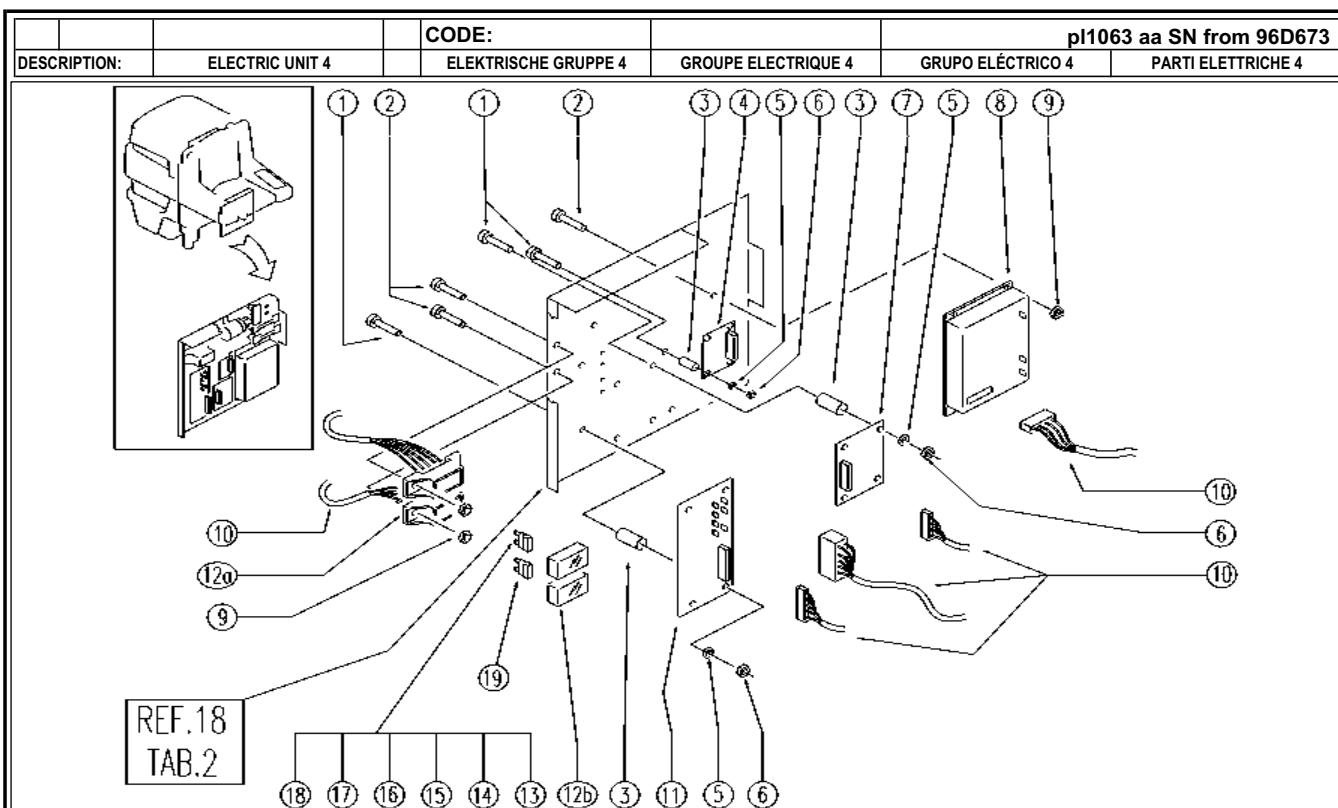

REF.	CODE	DESCRIPTION	QT
1	E86597	screw	12
2	E86903	AS30/36 Screw M.4-16	8
3	SL14184	SPACER	12
4	E87901	Board	1
5	SL06009	WASHER	12
6	E89274	Nut	12
7	E86834	Auxiliary Card - Rhino Uno	1
8	E86838	Traction Card	1
9	E86739	AS28 Nut	8
10	GR23479	WIRING UNIT	2
11	E86833	Pump Card	1
12a	E89468	Fuse Carrier	2
12b	SL23893-2	LID	2
13	E86825	Fuse 5 amp	1
14	E86825	Fuse 5 amp	1
15	E86825	Fuse 5 amp	1
16	E86825	Fuse 5 amp	1
17	E86827	Fuse 25 amp	1
18	E86826	Fuse 15 amp	1
19	E86825	Fuse 5 amp	1

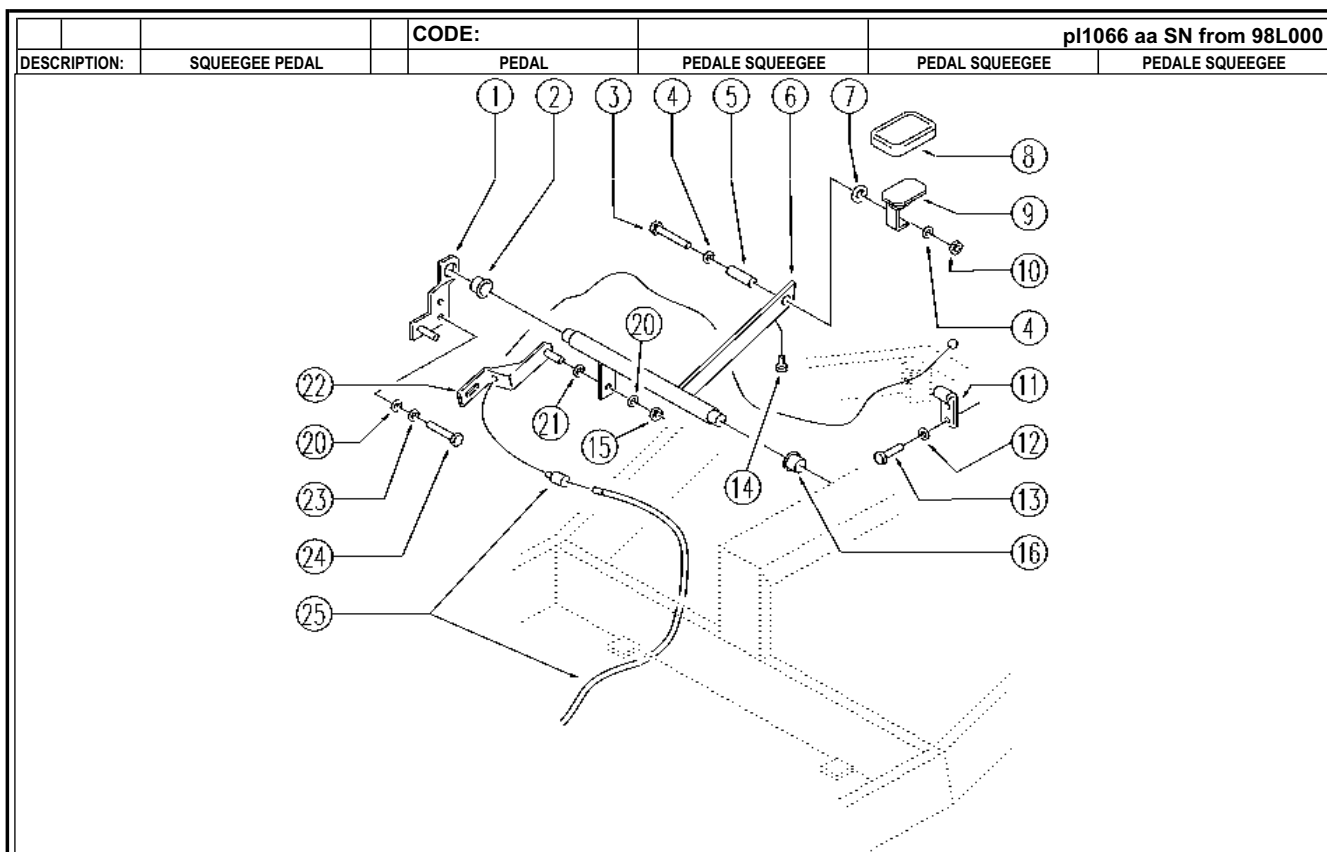


REF.	CODE	DESCRIPTION	QT
1	E86851	Plate	1
2	E89268	Bushing	1
3	E86705	Screw TE M 6-30	1
4	E86707	Cham Washer D10	2
5	E89278	Spacer	1
6	SL09738	LEVER	1
7	E89279	Washer	1
8	E89419	Rubber Shim	1
9	SL09741	TREADLE	1
10	E86875	Self-Locking Nut	1
11	SL09740	BLOCK	1
12	SL06016	WASHER	2
13	SL04223	SCREW	2
14	SL14309	RUBBER	1
15	E86853	Nyloc Hex Nut, M8 Zinc	1
20	E86726	Washer	3
21	E86881	Washer	1
22	E87878	Plate AS36/WS36T	1
23	E86702	Cham Washer D8	2
24	E89194	Screw	2
25	E86818	Squeegee Wire Lift	1
16	E89403	Bushing	1

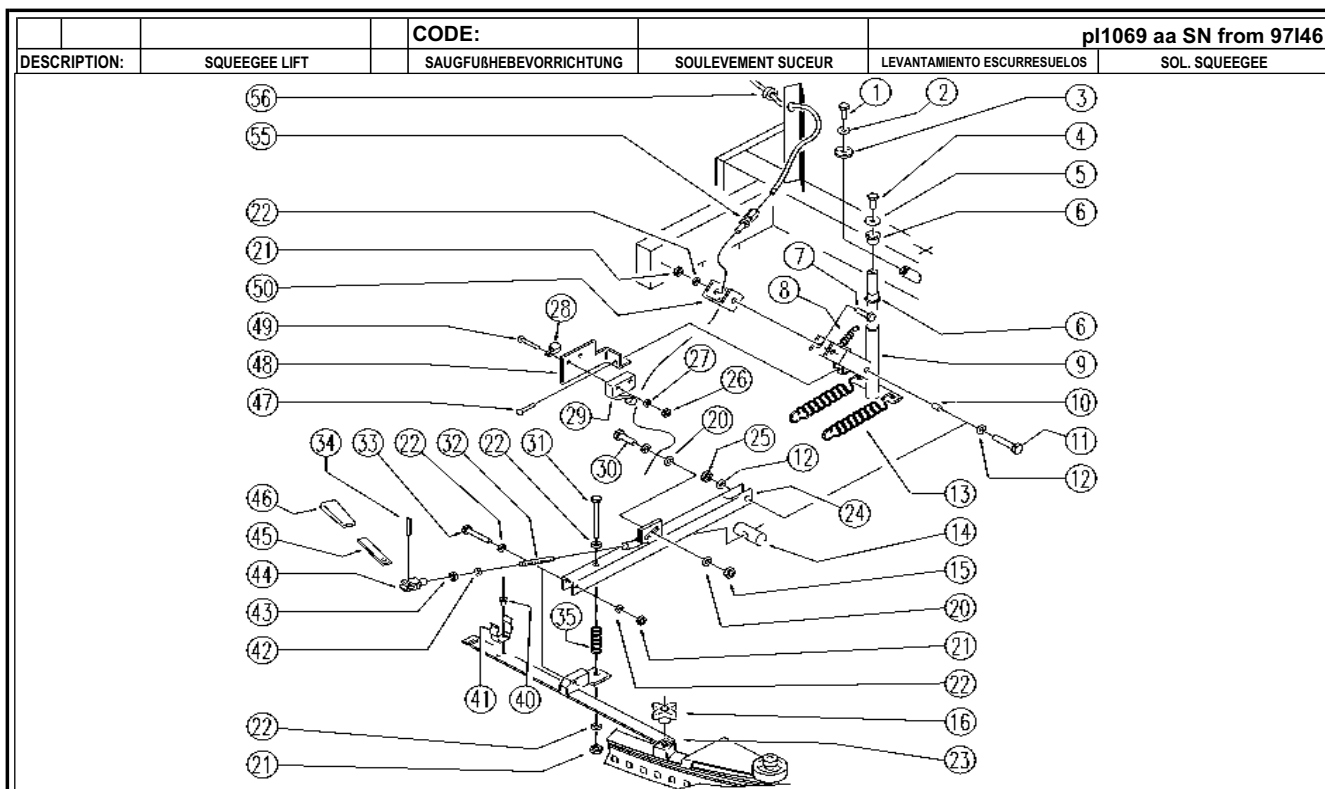


REF.	CODE	DESCRIPTION	QT
1	SL04180	SCREW	1
2	E86758	Washer	1
3	SL06092	WASHER	1
4	E86706	Screw TE M 6-16	1
5	E89202	Washer	1
6	E89403	Bushing	2
7	E86354	Screw AS36	2
8	E86363	spring AS36/WS36	1
9	E86847	Clip	1
10	E89442	Bearing	2
11	SL04312	SCREW	1
12	E88091	Washer	2
13	SL13065	SPRING	2
14	SL09537	HOOKING	1
15	E86489	Nut, M12	1
16	E86852	Squeegee Knob	2
20	E86490	AS20 Washer	2
21	E86853	Nyloc Nut, M8 Zinc	4
22	E86726	Washer	6
23	E86845	Bracket, Squeegee	1
24	E86846	Lever, Squeegee	1
25	E86462	AS20 Nut	1
26	E86739	AS28 Nut	2
27	E86797	Washer	2
28	SL14150	CLAMP	1
29	E86828	Microswitch	1
30	E86353	Screw AS36	1
31	E86872	Screw	1
32	E86319	shaft WS20	1
33	E86486	Screw TE M8-45	1
34	E89204	Pin WS36	1
35	E89495	Spring	1
40	SL14006	TEAR RIVET	2
41	E86847	Clip	1
42	SL06018	WASHER	1
43	E86703	Nut M8	1
44	E86917	AS30/36 Fork	1
45	E89205	Lever WS36	1
46	E86450	Tank Support Handle	1
47	E86336	M4 - 1 Screw	1
48	SL09742	SUPPORT	1
49	SL04107	SCREW	2
50	SL09737	SUPPORT	1
55	SL14222	REGISTER	1
56	SL23050	FAIRLEAD	1

			CODE:		p11070 aa SN from 98L000	
DESCRIPTION:	SQUEEGEE 95		SQUEEGEE 95	SQUEEGEE 95	SQUEEGEE 95	SQUEEGEE 95

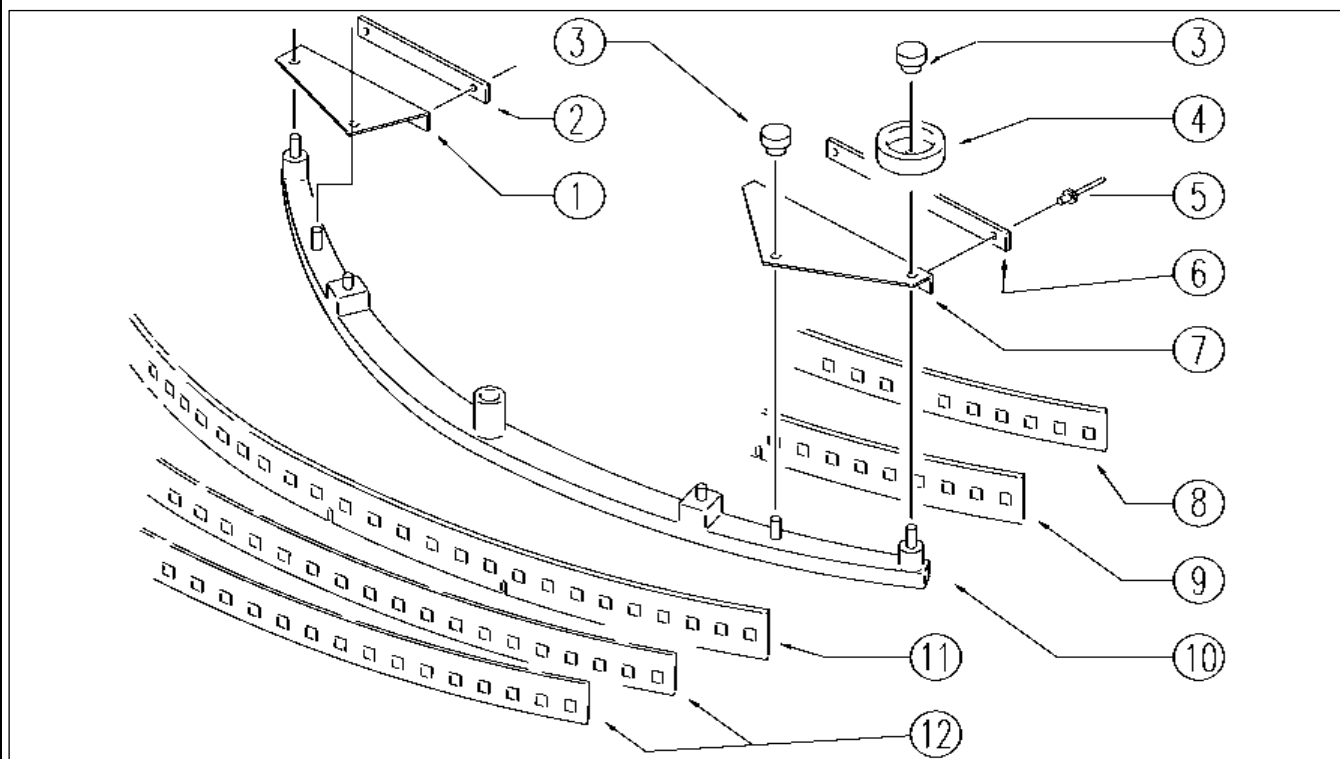


REF.	CODE	DESCRIPTION	QT
1	E89531	Bumper AS36	1
2	E89533	Strip Band AS36	1
3	E86850	Knob	2
4	E86841	Squeegee Wheel Guide	2
5	E89296	Rivet	4
6	E89534	Strip Band AS36	1
7	E89532	Bumper AS36	1
8	SL03289	BLADE	1
9	E86343	Front Squeegee Blade	1
10	E86985	Squeegee Body	1
11	E86929	Rear squeegee blade	1
12	E86345	Blade Retainer	2

		CODE:		pl1071 aa SN from 98L000
DESCRIPTION:	HEAD 78: FLAP AND BOX	KOPF 78	TETE 78	CABEZA 78 TESTATA 78:FLAP E CASSETTO

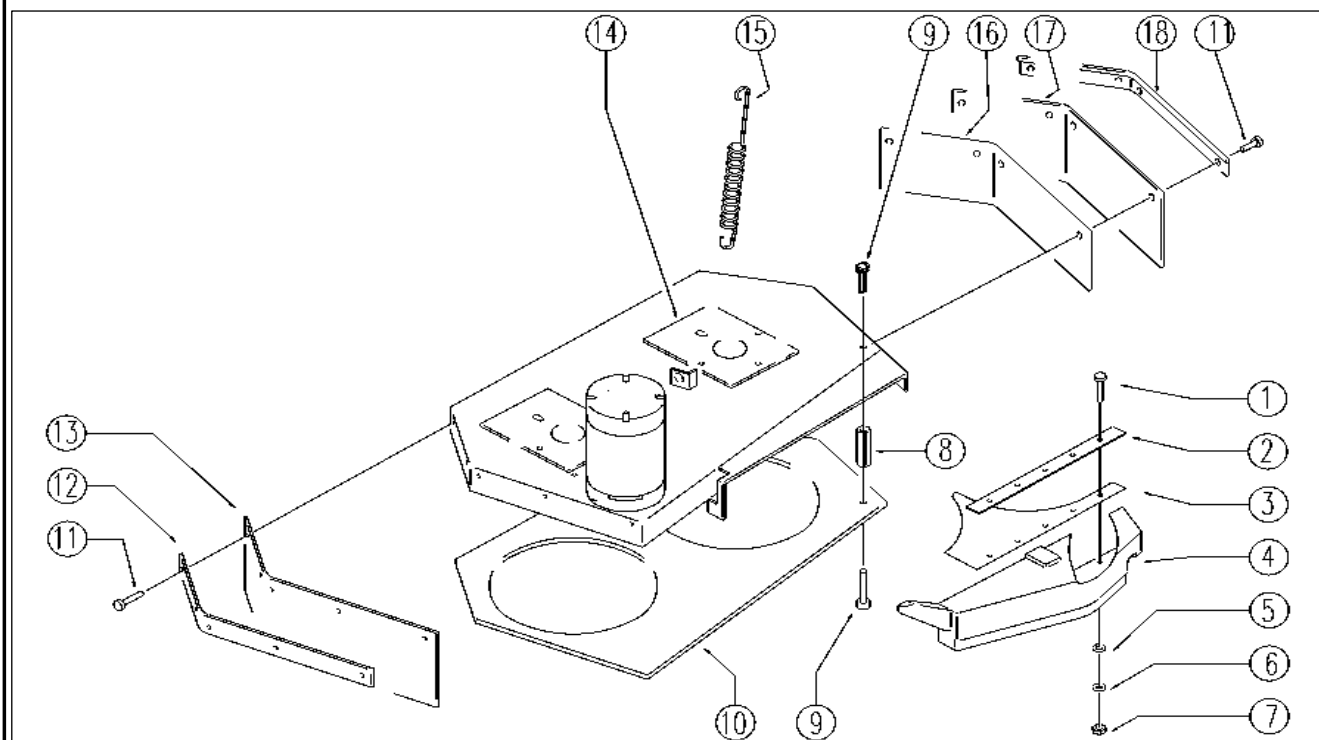


REF.	CODE	DESCRIPTION	QT
1	E86734	Screw	5
2	SL21133	LAMINATION	1
3	E86635	Plastic Part	1
4	E86898	AS30/36 Dust Collector	1
5	E86768	Washer	5
6	E86769	Washer	5
7	E86735	Nut	5
8	SL14205	SPACER	7
9	E86970	Screw - M4, 2-13	14
10	SL03245	GUARD	1
11	E89297	Screw	9
12	E89489	Lt. Strip	1
13	E86808	Right Flap	1
14	SL03291	GASKET	2
15	E86699	Head Spring	1
16	E89494	Reinforcement	1
17	E86807	Left Flap	1
18	E89490	Rt. Strip	1

			CODE:		pl1072 aa SN from 98L000	
DESCRIPTION:	HEAD 78:PULLEY AXLE		KOPF 78	TETE 78	CABEZA 78	TESTATA 78:ASSE SPAZZOLA

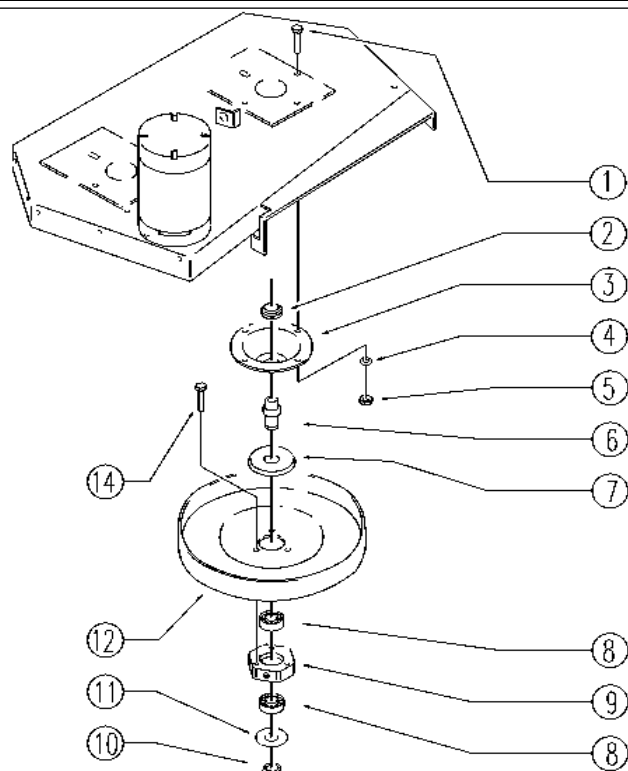


REF.	CODE	DESCRIPTION	QT
1	E86978	Screw M8-25	8
2	E86468	AS20 Nut	2
3	E86725	Flange, WS20	2
4	E86726	Washer	8
5	E86853	Nyloc Hex Nut, M8 Zinc	8
6	E86982	Hexagon Pin - Rhino	2
7	E86618	Upper Protection	2
8	E86409	Bearing, 6005 2RS	4
9	E86983	Hexagon Alum. ASM	2
10	E86812	Seeger	2
11	E86617	Lower Protection	2
12	E89396	Pulley	2
14	SL04100	SCREW	6

			CODE:		pl1073 aa SN from 98L000	
DESCRIPTION:	HEAD 78		KOPF 78	TETE 78	CABEZA 78	TESTATA 78:MOTORE

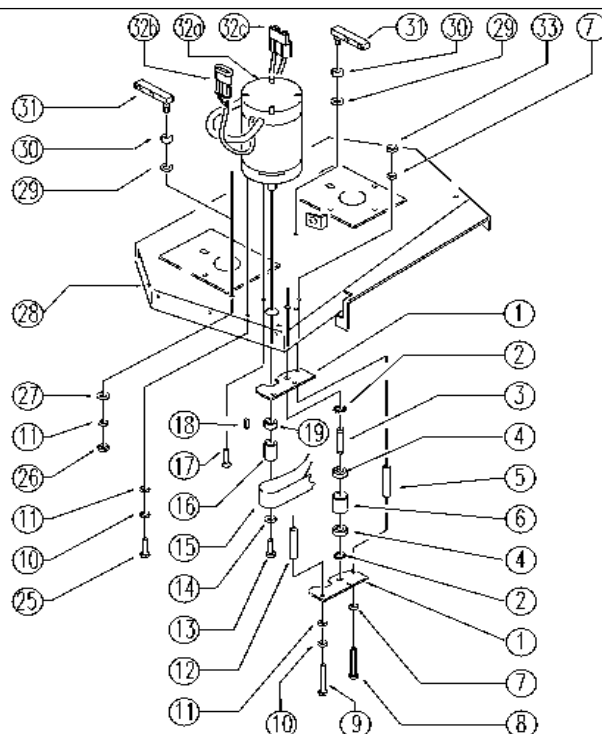

REF.	CODE	DESCRIPTION	QT
1	E86665	Plate (Idler Bearing)	2
2	E89408	Stop Ring	2
3	E86666	AS28 Pin	1
4	E86667	Bearing, 6001 2RS	2
5	E89485	Spacer	1
6	E86727	Neutral Pulley	1
7	E86707	Cham Washer D10	2
8	E86553	screw	1
9	E86554	screw	2
10	E86702	Cham Washer D8	3
11	E86726	Washer	5
12	E86555	spacer	2
13	E87758	Screw	1
14	E87757	Washer	1
15	E86819	Belt	1
16	E87756	Pulley	1
17	SL04283	SCREW	1
18	E86536	Key	1
19	E87755	Spacer	1
25	SL04083	SCREW	1
26	E86853	Nyloc Hex Nut, M8 Zinc	2
27	E86881	Washer	2
28	SL09683	PLATE	1
29	E86980	Washer D13-24-2.5	2
30	E86975	Rubber Gasket	2
31	SL09629	BRACKET	2
33	E86552	nut	1
32a	E86803	Brush Motor	1
32b	E87903	Connector	1
32c	E86580	Connector, SB50,	1
32d	E86804	Carbon Brushes	4

[illegible]

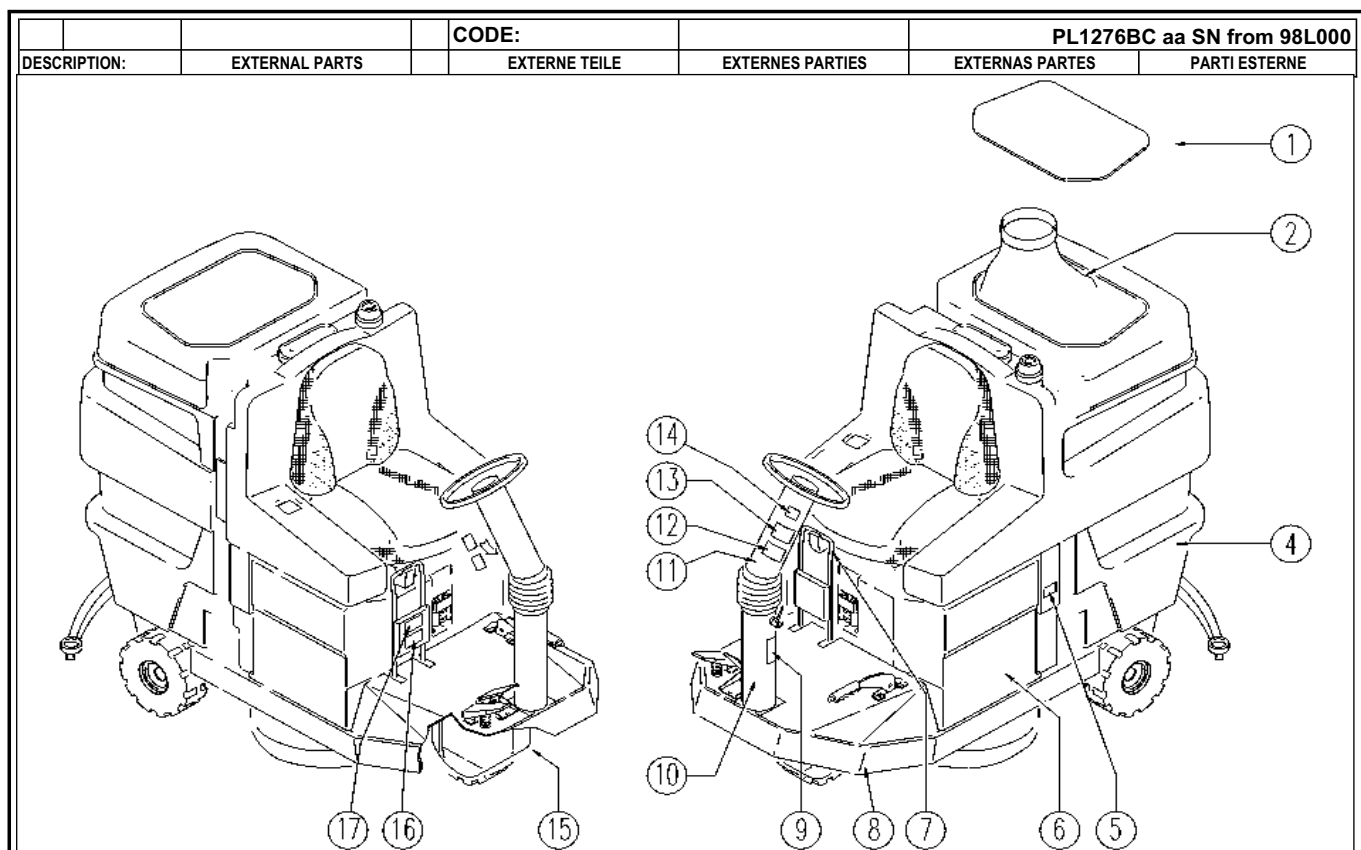

REF.	CODE	DESCRIPTION	QT
1	E86906	AS36 Lid	1
2	AL04714BC	MEMBRANE	1
4	E86907	AS36 Tank	1
5	E89162	Label for fuse FS28	1
6	SL17342BC	TANK / BOX	1
7	SL09523F	HANDLE	1
8	SL09678F	FRAME	1
9	SL25559	LABEL	1
10	SL09696F	STEERING COLUMN	1
11	SL09697F	STEERING COLUMN	1
12	SL25177	LABEL	1
13	SL25053	ADESIVE LABEL	1
14	SL25362	ADESIVE LABEL	1
15	SL17337BC	CASE	1
16	SL25911	LABEL	1
17	SL25912	LABEL	1

CODE:

WD27126 aa SN from 98F217

DESCRIPTION:


WIRING DIAGRAM

SCHALTPLAN

SCHEMA ELECTRIQUE

ESQUEMA ELECTRICO

SCHEMA ELETT. FUNZIONALE

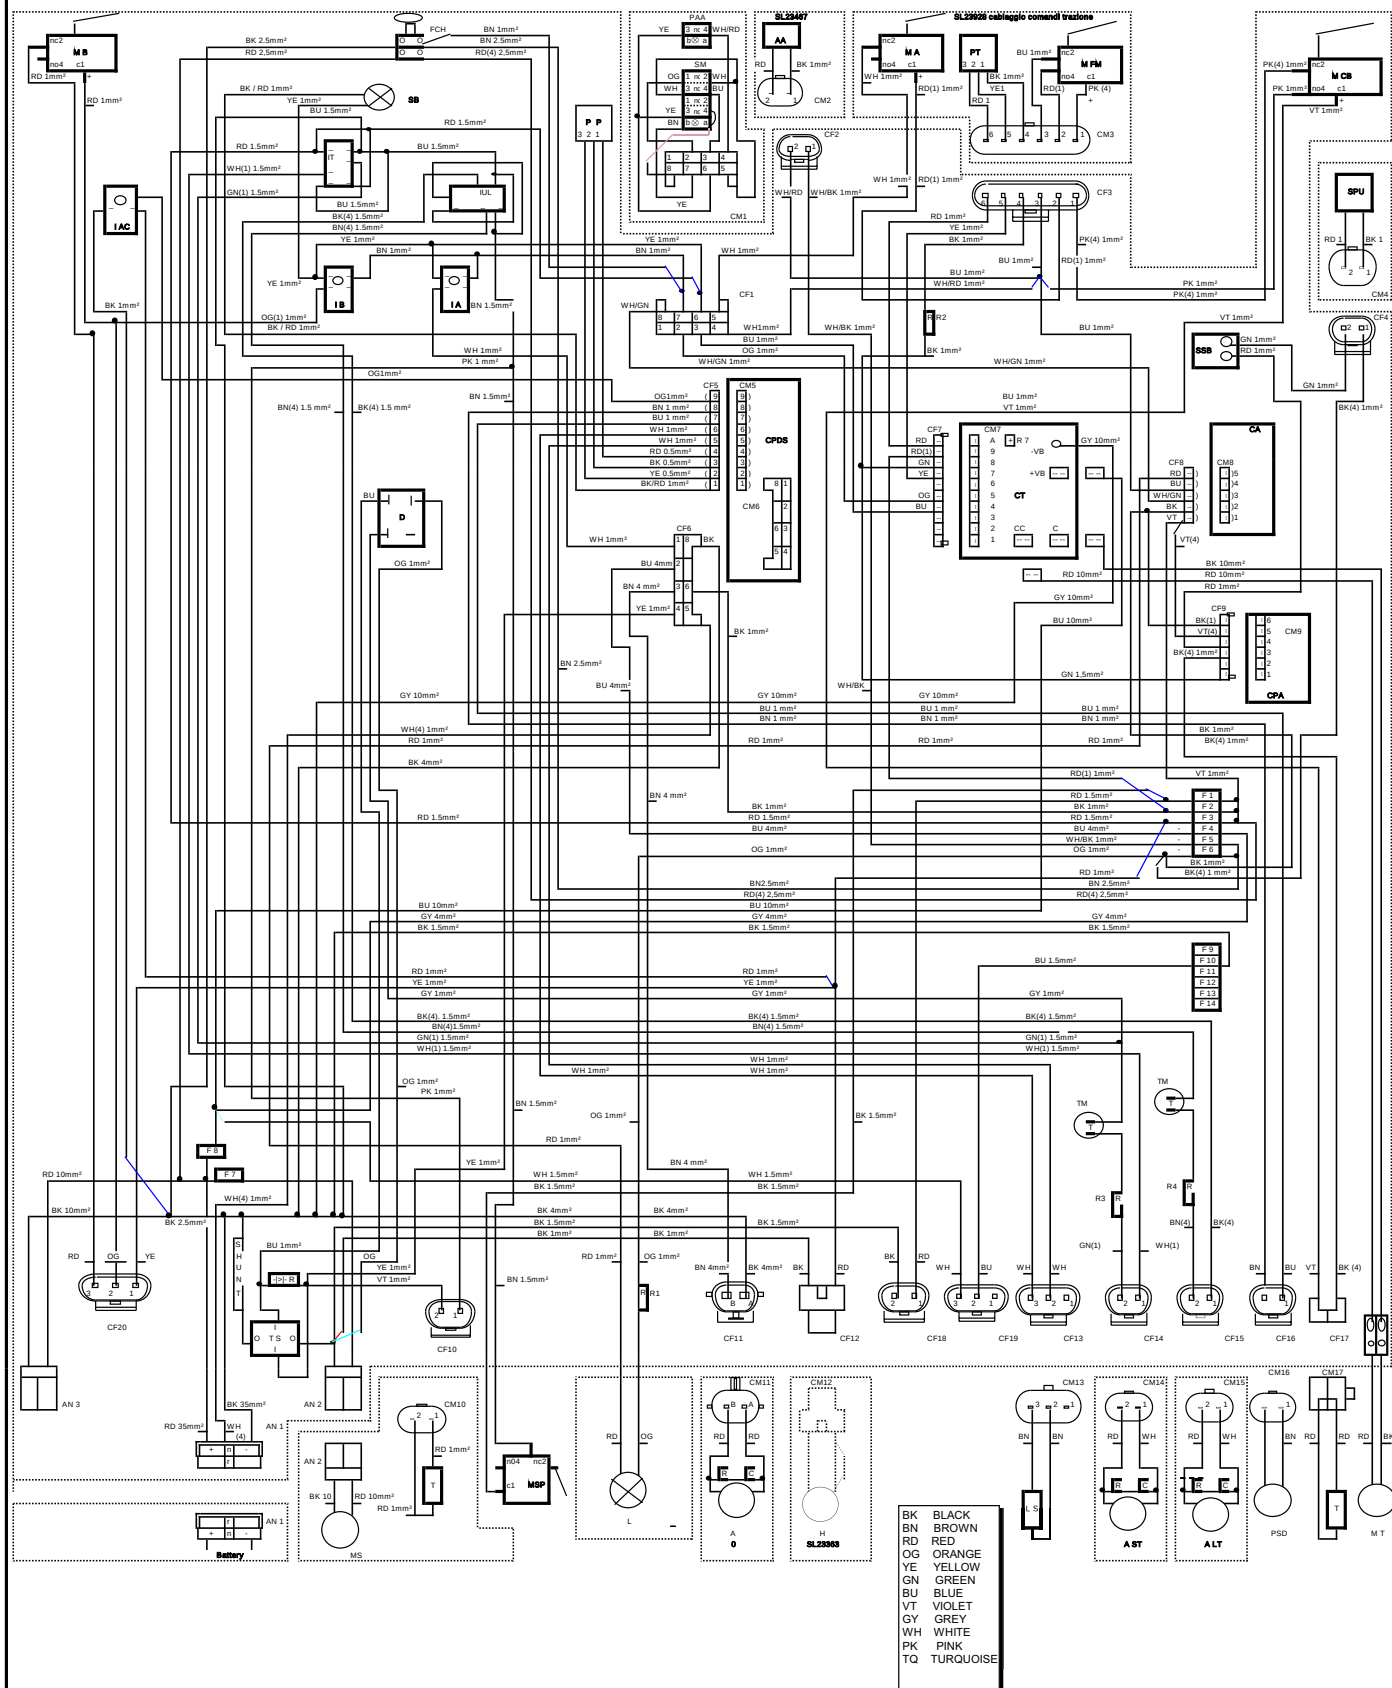

LEGENDE WD27126-1

ZEICHENERKLÄRUNG WD27126-1

LEGENDE WD27126-1

LEGENDE WD27126-1

LEGENDE WD27126-1

				CODE:		wd27126-1 aa SN from 98F217	
DESCRIPTION:							LEGENDA
REF.	CODE	DESCRIPTION	QT				
-K-		DIODE					
A		MOTOR					
AA		WARNING HORN					
ALT		ACTUATOR					
AN#		CONNECTOR					
AST		ACTUATOR					
C		CAPACITOR					
CF#		CONNECTOR					
CM#		CONNECTOR					
CPDS		GEARCASE / BOARD					
CT		GEARCASE / BOARD					
F#		FUSE					
FCH		PUSHLOCK					
H		TIME COUNTER (OPTIONAL)					
IAC		SWITCH					
IA		SWITCH					
IB		SWITCH					
L		FLASHING LIGHT					
LS		PROBE					
MCB		MICROSWITCH					
MFM		MICROSWITCH					
MS		MOTOR					
MT		MOTOR					
PP		POTENTIOMETER					
PSD		PUMP					
PT		POTENTIOMETER					
R		RESISTANCE					
R1		RESISTANCE					
R2		RESISTANCE					
R3		RESISTANCE					
R4		RESISTANCE					
R7		TRIMMER					
SB		PILOT LIGHT					
SHUNT		SHUNT					
SPU		SENSOR					
T		SENSOR					
TS		TELESWITCH					
CPA		GEARCASE / BOARD					
CA		GEARCASE / BOARD					
D		DIODE					
IT		PUSH-BUTTON					
IUL		PUSH-BUTTON					
PAA		PUSH-BUTTON					
PMI		PUSH-BUTTON					
MB		MICROSWITCH					
MA		MICROSWITCH					
MSP		MICROSWITCH					
TM		THERMOSTAT					
SSB		SENSOR					