


WARNING: TO ENSURE PROPER OPERATION FOR YOUR NEW BATTERY CHARGER, PLEASE FOLLOW THE SET UP INSTRUCTIONS BELOW. FAILURE TO COMPLETE THIS SET UP PROCESS CAN CAUSE PERMANENT DAMAGE TO BOTH THE BATTERIES AND THE CHARGER.


If there are any questions, please call our Technical Support Staff @ 877-856-5954

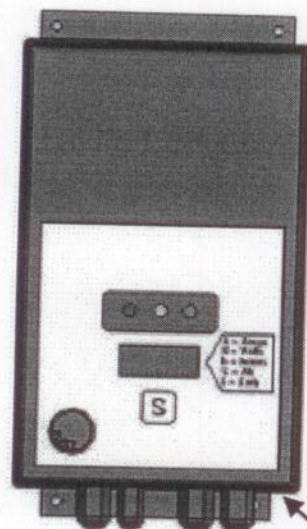

E12628 – On Board Battery Charger

Quick Set-up Guide

Crewman DCBB, XT3-21, XT3-27

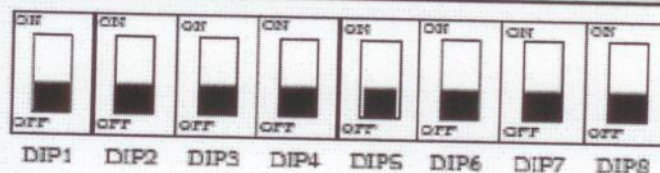

UP IS ON

DOWN IS OFF

DIP SWITCHES ARE LOCATED UNDER LABEL

E85263	Crewman DC 20" Battery Burnisher	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8
	Crown 12v 110ah AGM Battery Profile	OFF DOWN	ON UP	OFF DOWN	ON UP	ON UP	ON UP	ON UP	OFF DOWN
E85263	Crewman DC 20" Battery Burnisher	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8
	Discover 12v 114ah Gel Battery Profile	ON UP	OFF DOWN	OFF DOWN	ON UP	ON UP	ON UP	ON UP	OFF DOWN

IMPORTANT: UP = ON & DOWN = OFF

E12601	XT3-21 Battery Burnisher	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8
	Crown 12v 135ah AGM Battery Profile & Powersonic 12v 140ah AGM Battery Profile	OFF DOWN	ON UP	OFF DOWN	ON UP	ON UP	ON UP	ON UP	OFF DOWN

IMPORTANT: UP = ON & DOWN = OFF

E12603	XT3-27 Battery Burnisher	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8
	Crown 6v 235ah Lead Acid Battery Profile	OFF DOWN	ON UP	ON UP	ON UP	ON UP	OFF DOWN	ON UP	OFF DOWN

Technical Bulletin 20110223-1