




Tech Bulletin: Genesys Orbital Head Vibration Reduction

5/12/2020

In rare instances, the Genesys machine may produce an undesirable level of noise. The following process will set the deck back to the factory setting. This task will require a ratchet, ½" deep well socket, and socket extension.



1) Set the machine to High Down Pressure

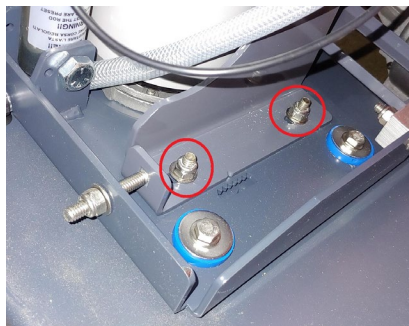

2) Remove the service panel locate the 4 nuts securing the upright bracket. (2 per side)



3) Loosen the 4 upright bracket nuts about 2 complete turns




4) Locate the 2 jackscrew nuts



5) Loosen the 2 jackscrew nuts about 5 complete turns



6) Raise the deck of the machine to relieve tension

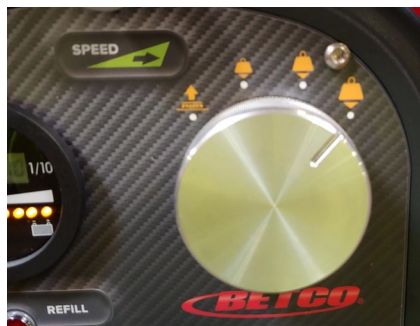

7) Set the machine to High Down Pressure



8) Snug the jackscrew nuts until the rollers are tight on the track



9) Tighten the upright bracket nuts and replace service panel

After tightening the upright bracket nuts, ensure the jackscrew nuts are still snug and that the white rollers on the upright brackets are firmly against the roller track.