



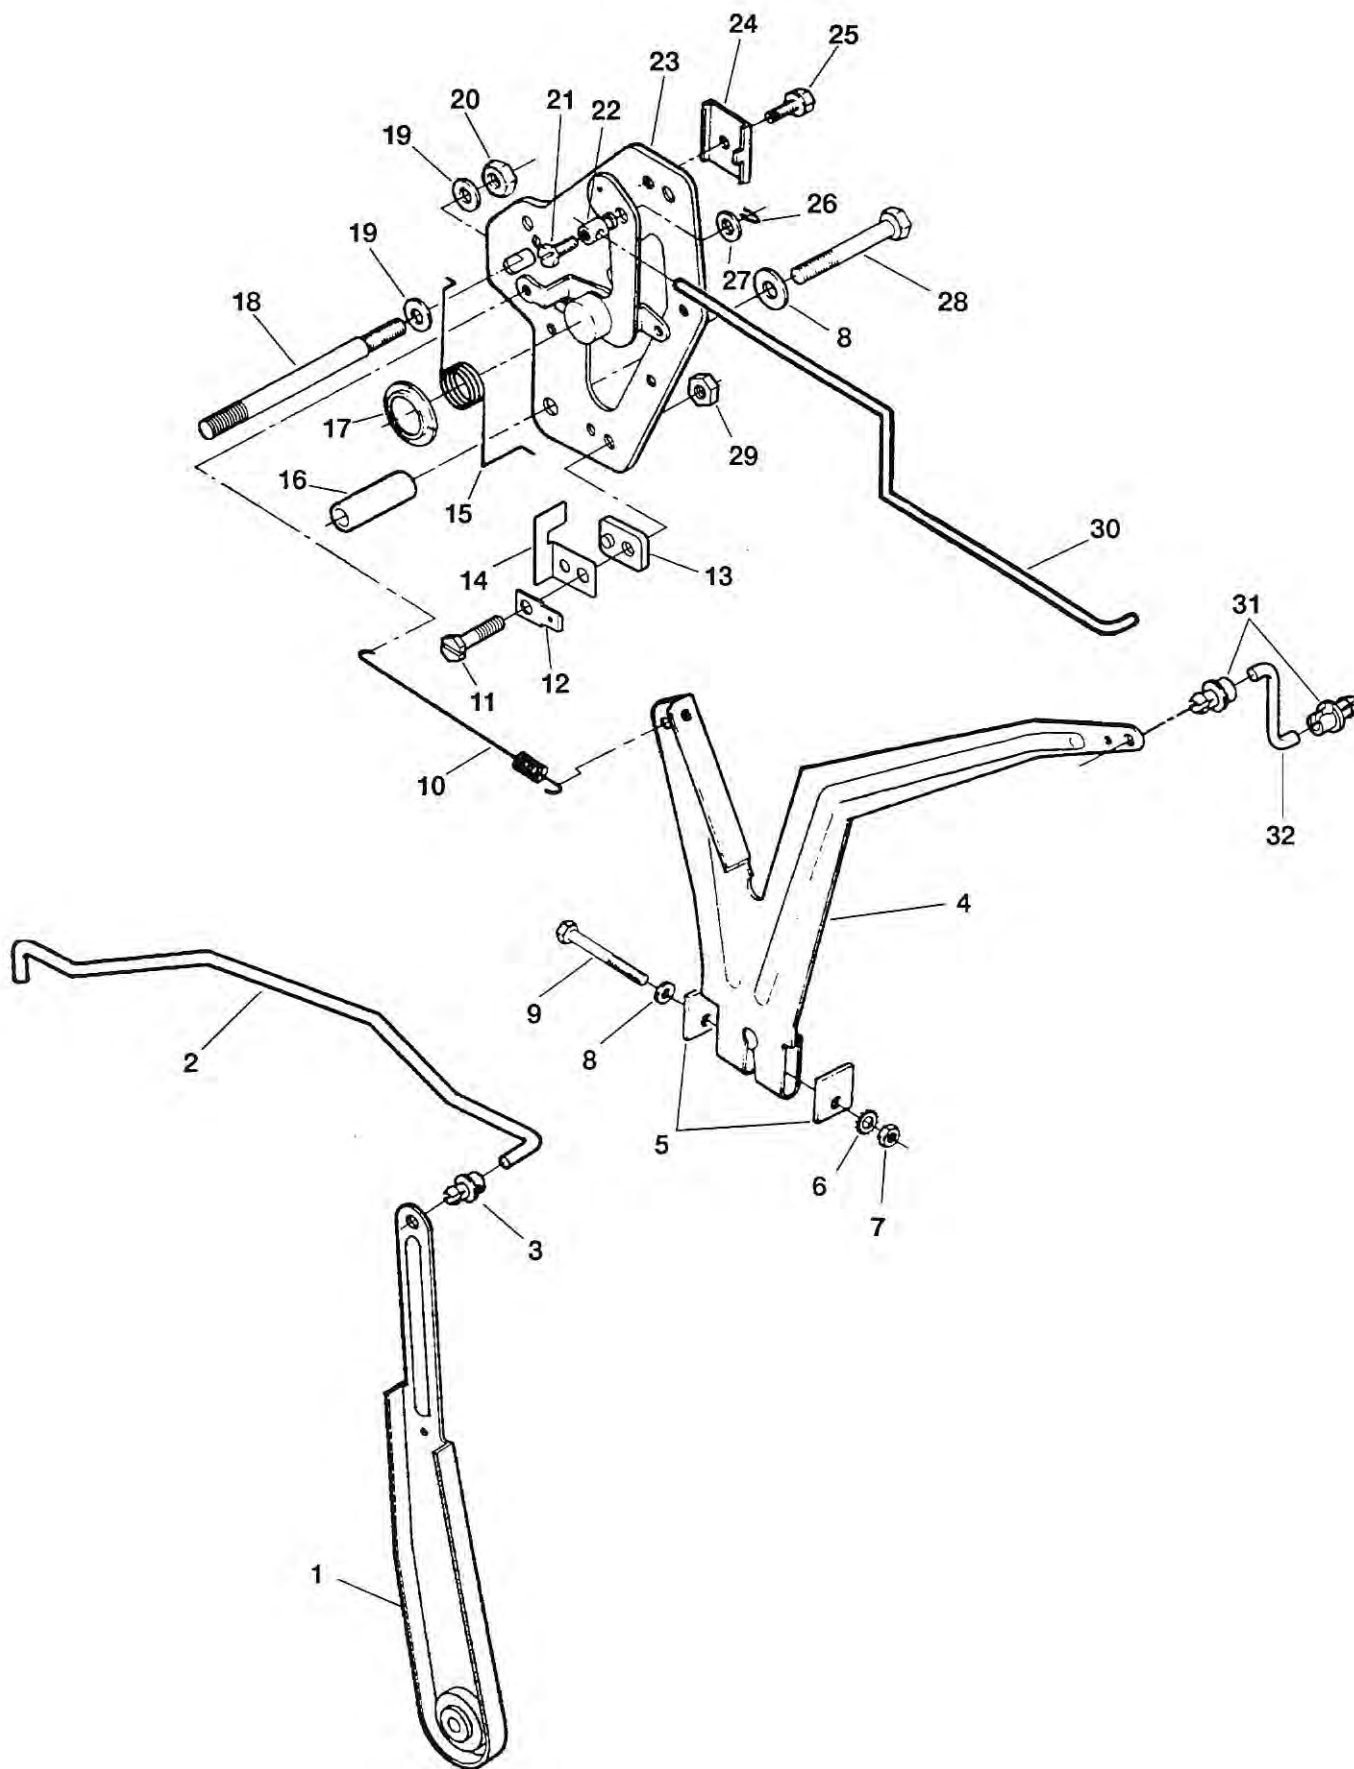


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2515	1	Lever, Governor (Spec 11531)	19	740-1004	2	Washer, Flat (M6)
2	152-0330	1	Link, Throttle (Spec 11531)	20	750-1004	1	Nut, Hex (M6 x 1)
3	152-0343	1	Clip, Link (Spec 11531)	21	800-4072	1	Screw, Hex Head Slotted Machine (M4 x .7 x 8mm) (All Specs Except 11531)
4	150-2338	1	Lever, Governor (All Specs Except 11531)	22	153-0632	1	Swivel, Choke Lever (All Specs Except 11531)
5	150-2351	2	Washer, Governor Lever (All Specs Except 11531)	23	152-0350	1	Plate Assy, Throttle (Includes Control and Choke Levers, Pivot Pin and Flat Washers)
6	853-0016	1	Washer, ET Lock (5/16") (All Specs Except 11531)	24	153-0633-01	1	Clamp, Cable
7	750-1006	1	Nut, Hex (M8 x 1.25")(All Specs Except 11531)	25	815-0359	1	Screw, Hex Washer Head Thread Forming (#10-32 x 7/8")
8	740-1006	2	Washer, Flat (M8)	26	516-0059	1	Pin, Cotter (Hairpin) (All Specs Except 11531)
9	800-2062	1	Screw, Hex Head Cap (M8 x 1.25 x 145mm) (All Specs Except 11531)	27	526-0140	1	Washer, Flat (#10) (All Specs Except 11531)
10			Spring, Governor	28	815-0776	1	Screw, Hex Washer Head Thread Forming (M8 x 40mm)
	150-2290	1	All Specs Except 11531	29	870-0528	1	Nut, Nylon Hex (#10-32) (Code 13DC, 13DH)
	150-2548	1	Spec 11531	30			Link, Choke
11	815-0833	1	Screw, Nylon Hex Slotted (#10-32) (Code 13DC, 13DH)		153-0630	1	All Specs Except 11531
12	332-0527	1	Terminal (Code 13DC, 13DH)		153-0650	1	Spec 11531
13	313-0039	1	Insulator, Switch (Code 13DC, 13DH)	31	152-0343	2	Clip, Link (All Specs Except 11531)
14	313-0038	1	Contact, Switch (Code 13DC, 13DH)	32	152-0319	1	Link, Throttle (All Specs Except 11531)
15	153-0621	1	Spring, Choke Linkage				
16	370-4057	1	Spacer				
17	518-0594	1	Ring, Retaining				
18	520-2212	1	Stud				

Carburetor **(All Specs Except 11531)**

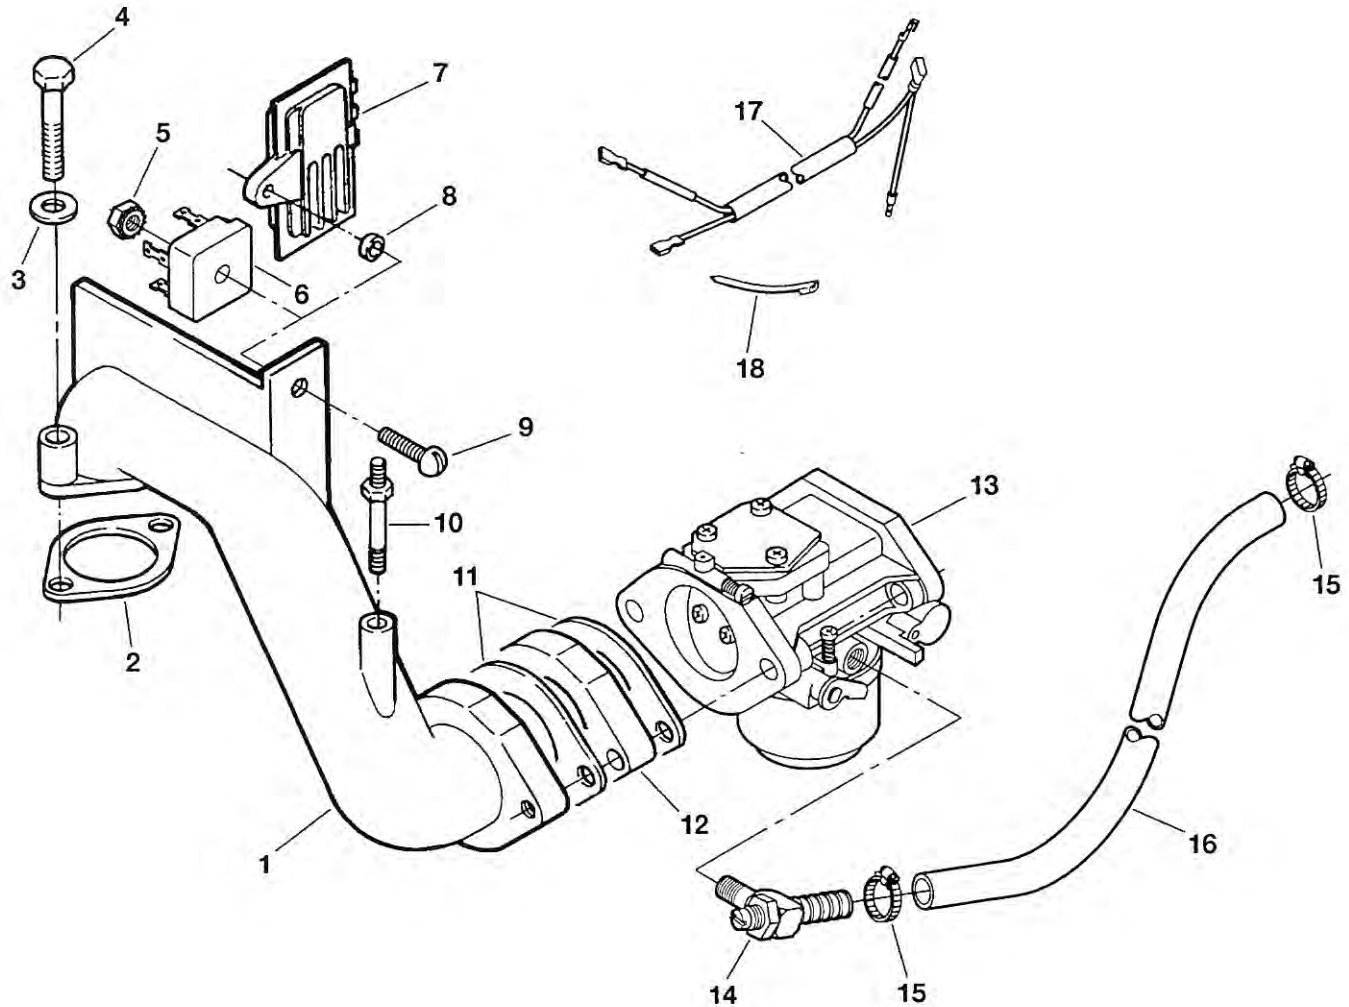


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-2792	1	Elbow, Intake	10	520-2033	1	Stud
2	146-0484	1	Gasket	11	146-0486	2	Gasket
3	526-0115	2	Washer, Flat (M8)	12	146-0485	1	Insulator
4	800-2063	2	Screw, Hex Head Cap (M8 x 1.25 x 50mm)	13	146-0618	1	Carburetor (Includes Main Jet)
5	870-0131	1	Nut, ET Hex (10-32) (Code 31BP, 31BS)	14	145-0706	1	Jet, 90° Main
6	305-0718	1	Rectifier, Bridge (Code 31BP, 31BS)	15	503-0183	2	Clamp, Regulator Hose (1/2")
7	191-2208	1	Regulator, Voltage (Code 31AZ, 31BB)	16	503-0707	1	Hose, LP (1/2"ID x 12" Lg)
8	150-1269	1	Bushing (Code 31AZ, 31BB)	17	338-3044	1	Harness, Engine Wiring
9	813-0103	1	Screw, Round Head Machine Code 31BP, 31BS (#10-32 x 3/4")		338-2527	1	Code 35CU
	821-0011	1	Code 31AZ, 31BB (1/4-20 x 7/8")	18	332-0942	1	Code 35BM
							Tie, Cable

Air Cleaner (All Specs Except 11531)

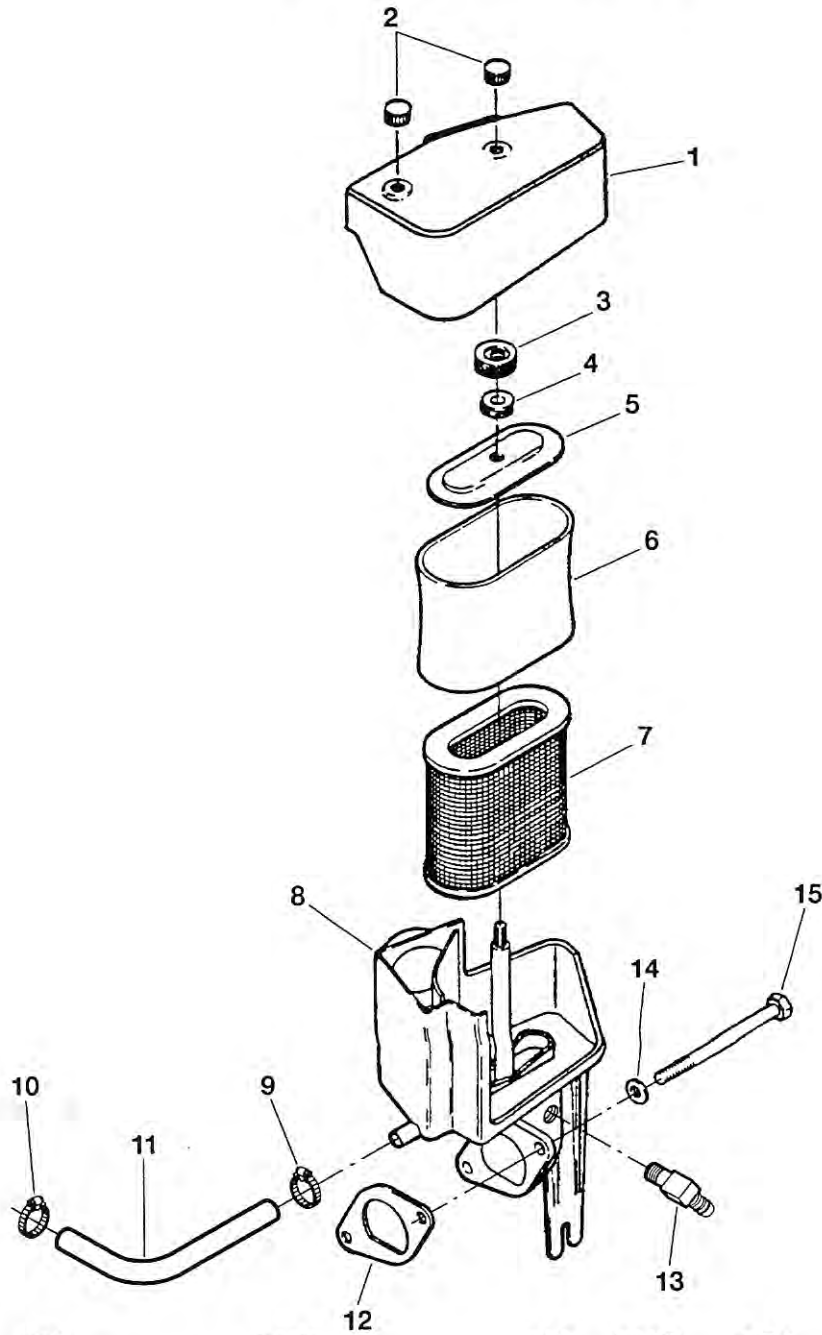

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2584-50	1	Cover, Air Cleaner	12	140-2329	1	Gasket
2	140-2383	2	Knob, Air Cleaner Cover	13	502-0313	1	Elbow, Hose 90° (1/8 NPT) (1/4 ID Hose)
3	140-2533	1	Knob, Inner Cover	14	740-1006	2	Washer, Flat (M8)
4	508-0012	1	Grommet (3/8" Hole)	15			Screw, Hex Head Cap
5	140-2534	1	Cover, Element				Without Carburetor Guard
6	140-2335-01	1	Wrapper, Element		718-1808	2	M8 x 100mm
7	140-3111	1	Element		718-1808	1	With Carburetor Guard
8	140-2527-01	1	Adapter		718-1816	1	M8 x 100mm
9	503-0170	1	Clamp, Hose (5/8")				M8 x 1.25 x 120mm
10	503-0769	1	Clamp, Hose (2 1/32")				
11	503-1396	1	Hose, Breather (7/16"ID x 4")				


TO ORDER:888-773-0002 Fax: 770-773-9903
<Sflowers@eaglefloorsolutions.com>

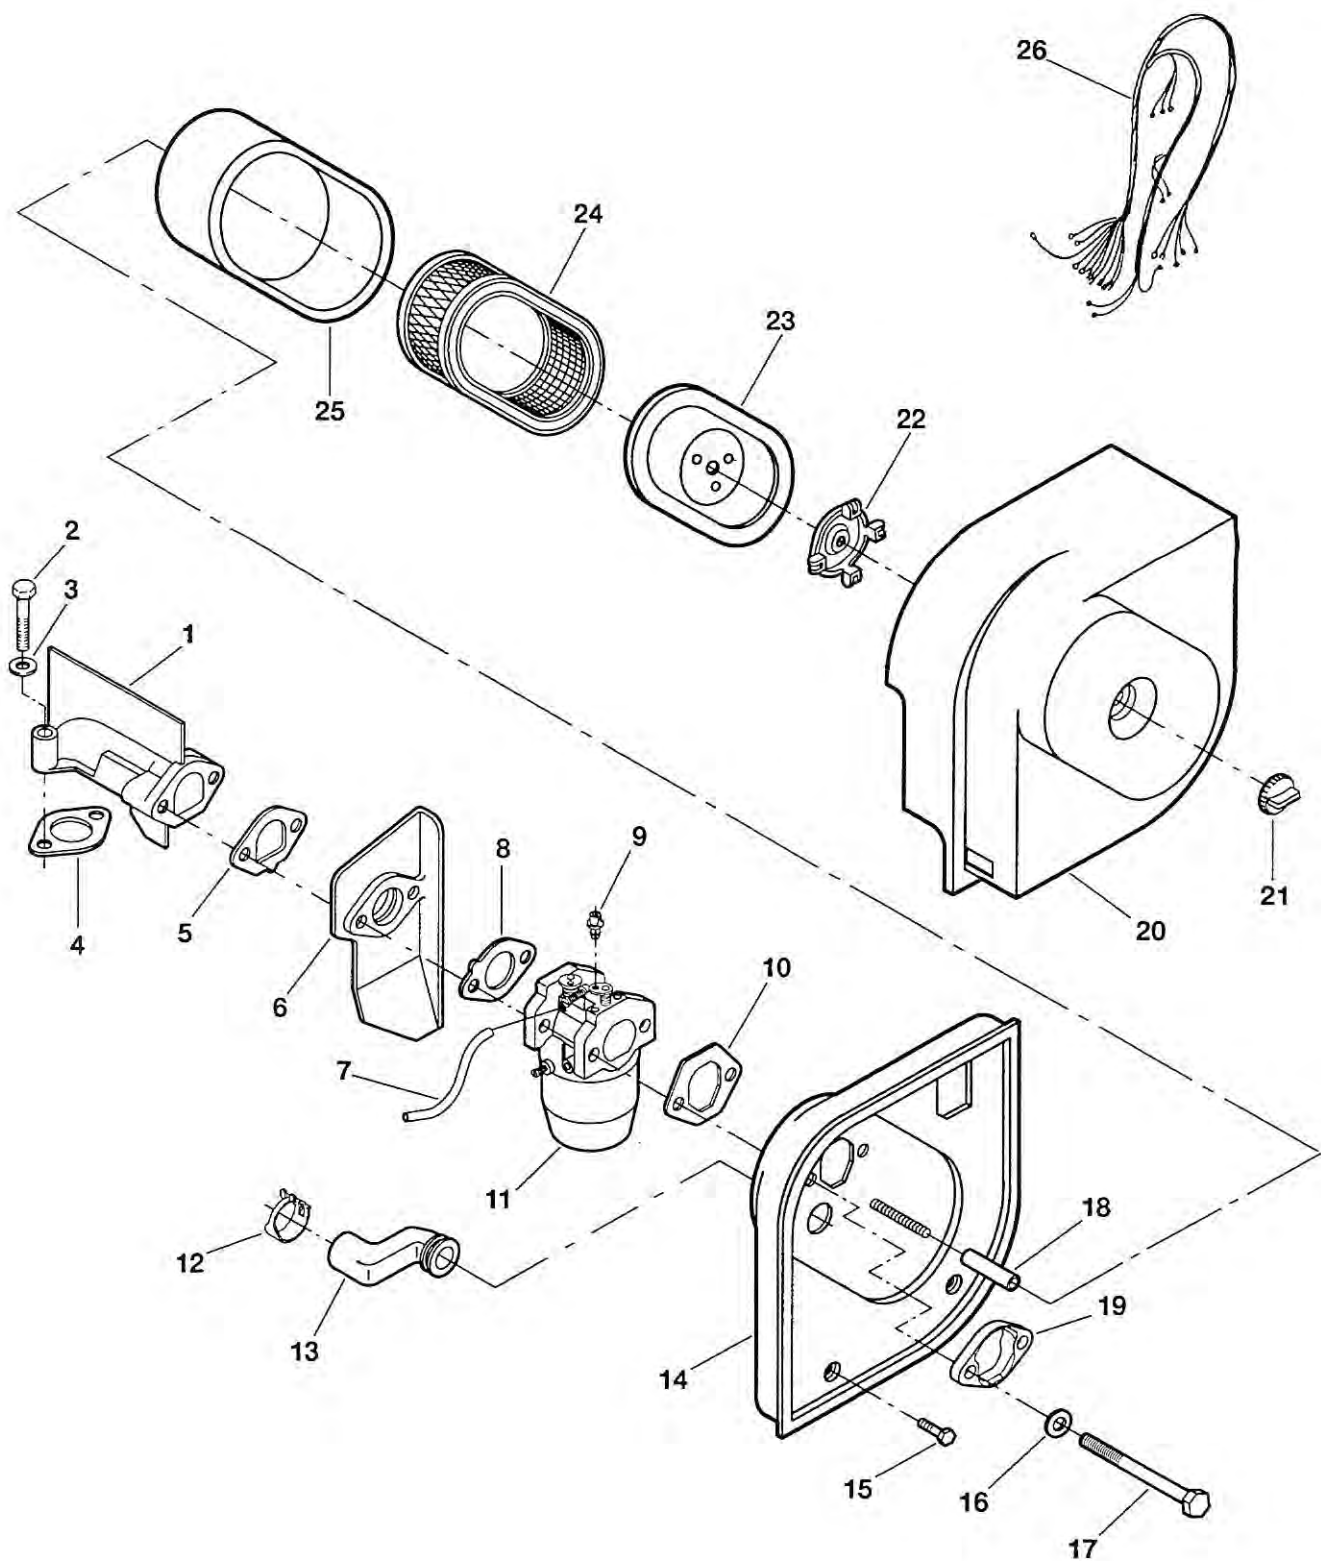

Carburetor (Spec 11531)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-2908	1	Elbow, Intake	15	815-0474	2	Screw (1/4-14 x 1/2")
2	800-2063	2	Screw, Hex Head Cap (M8 x 1.25 x 50mm)	16	740-1004	2	Washer, Flat (M6)
3	526-0115	2	Washer, Flat (M8)	17	815-0816-01	2	Screw, Hex Head Thread Forming
4	146-0584	1	Gasket, Intake	18	140-2536-04	1	Seal, Air Cleaner Spacer
5	146-0571-02	1	Gasket, Insulator	19	145-0694	1	Support, Carburetor (Begin Spec E)
6	146-0567	1	Insulator, Carburetor	20	140-2676	1	Cover, Air Cleaner
7	503-2081	1	Hose, Vacuum	21	140-2761	1	Knob, Air Cleaner Cover
8	146-0571-01	1	Gasket, Carburetor	22	140-2675	1	Knob, Inner Cover
9	152-0343	1	Clip, Link	23	140-2674-01	1	Cover, Element
10	102-1462	1	Gasket, Carburetor	24	140-3010	1	Element, Air Cleaner
11	146-0675	1	Carburetor	25	140-2748-01	1	Wrapper, Element
12	503-1445-04	1	Clamp, Hose	26	338-3651	1	Harness, Engine (See Separ: Page for Components)
13	123-2043	1	Tube, Breather				
14	140-2941-02	1	Pan, Air Cleaner				

Engine Harness (Spec 11531)

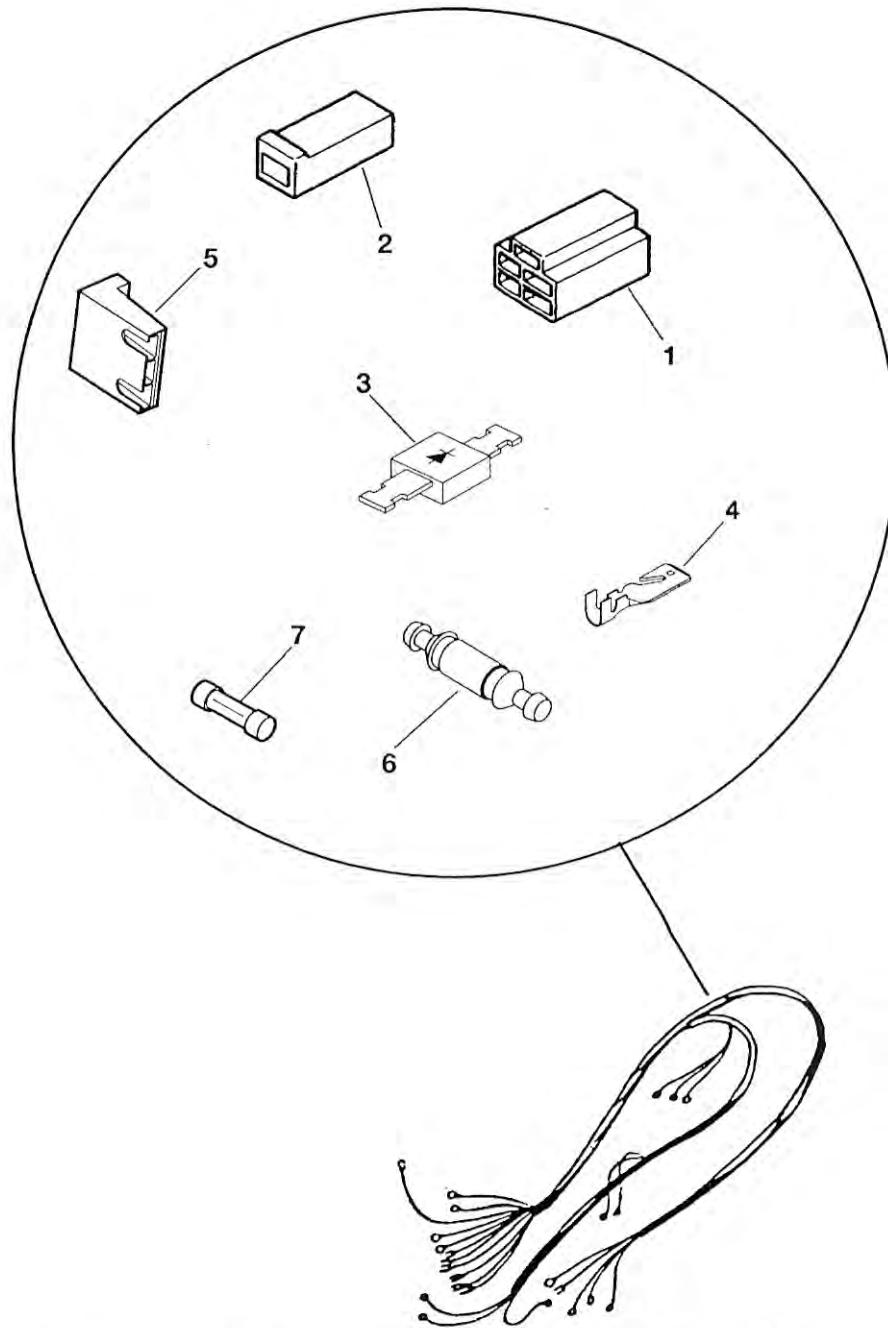

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	338-3651		Harness, Engine	4	332-3225	1	Receptacle, Lock
1	323-0987	1	Housing, Receptacle (5 Rcpt)	5	323-1585	1	Body, Connector
2	332-0819	1	Housing, Receptacle Terminal	6	321-0362	1	Fuseholder (Includes Fuse)
3	357-0030	1	Rectifier, Silicon	7	321-0162	1	Fuse (30A)


**Regulator
(Spec 11217, 11294, 11315, 11330)**

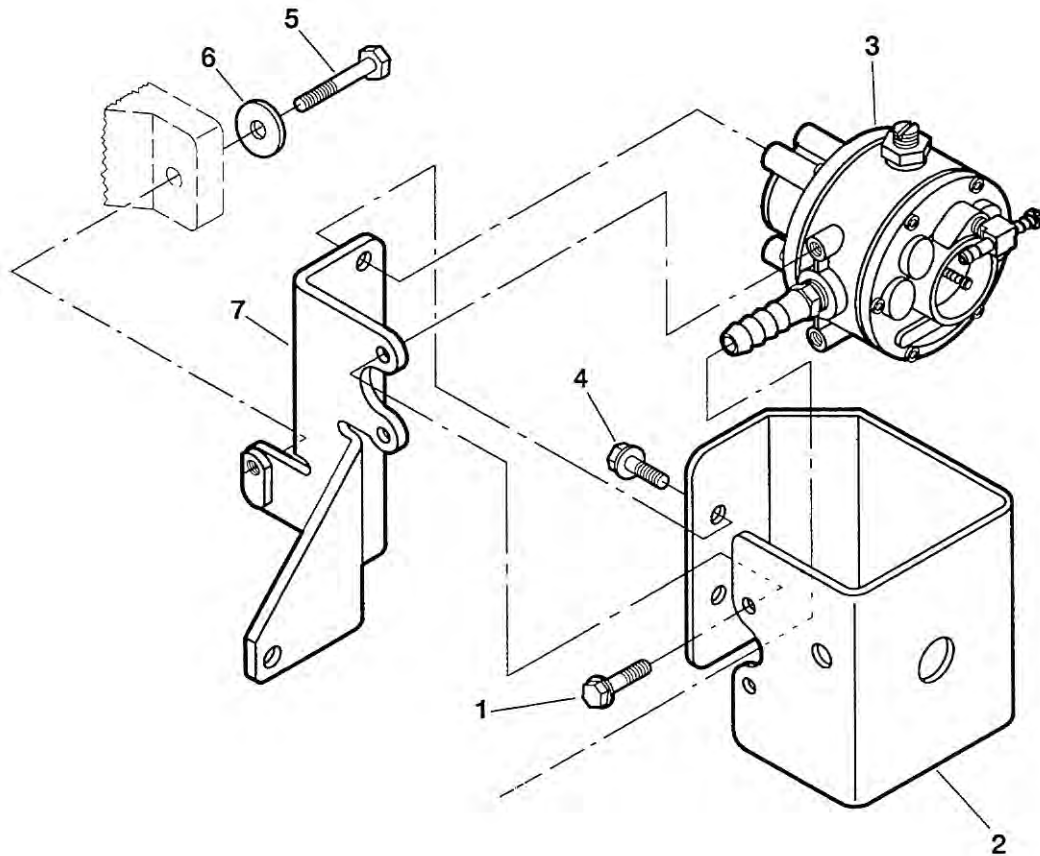

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0005	2	Screw, Brass Hex Head Machine (#10-32 x 1/2")
2	148-0995-02	1	Guard, Regulator
3	148-0992	1	Regulator
4	821-0010	2	Screw, Lock Head Flange (#1/4-20 x 1/2")


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	718-1055	1	Screw (M10 x 1.5 x 30mm)
6	740-1008	1	Washer (M10)
7	148-0993-02	1	Bracket, Regulator Mounting

**Regulator
(Spec 11326, 11474)**

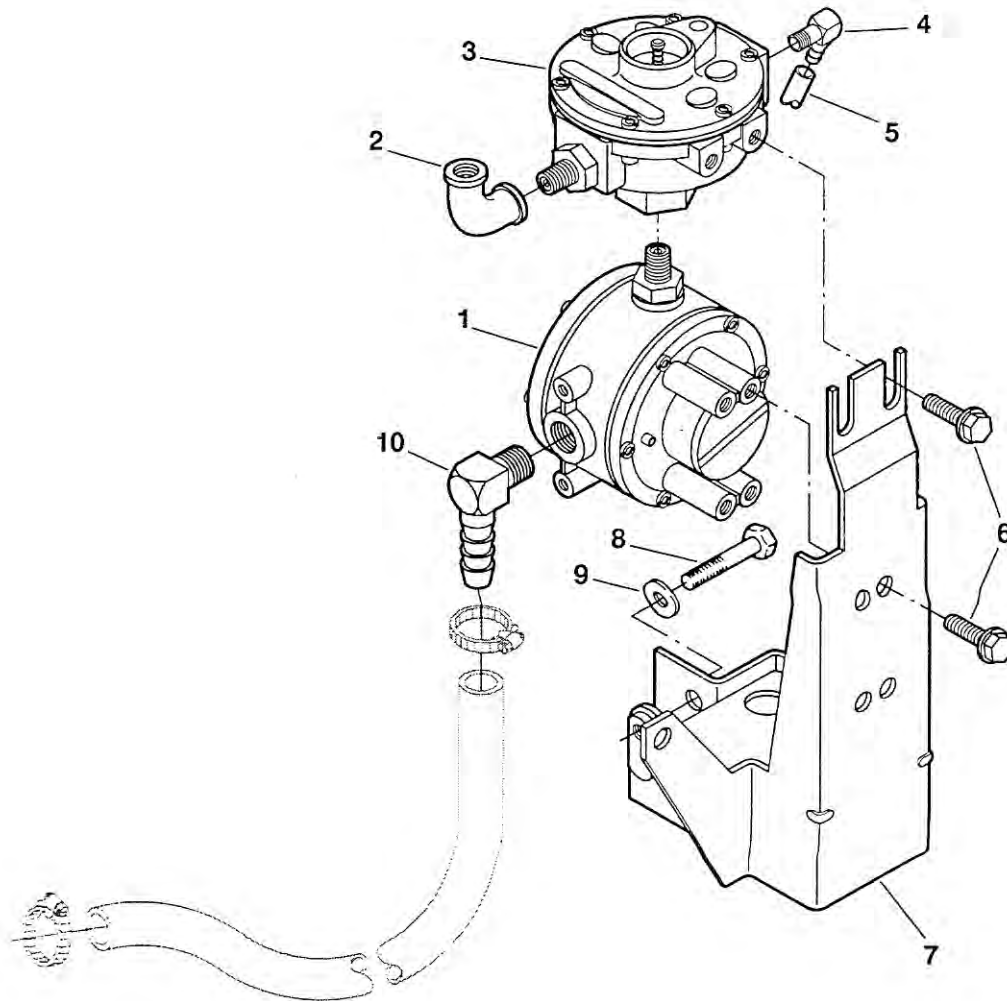

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148-0992-01	1	Regulator	6	821-0010	6	Bolt, Hex Head (1/4-20 x 1/2")
2	502-0056	1	Elbow, 90° Pipe (1/4 NPT)	7	148-1008-02	1	Mount, Regulator
3	148-1061-02	1	Valve, Fuel Shutoff (Includes Valve and Elbows)	8	800-0051	1	Screw, Hex Head Cap (3/8-16 x 1.25")
4	502-0313	1	Elbow (1/8 NPT x 1/4 I.D. Hose)	9	526-0026	1	Washer, Flat (3/8")
5	503-1420	1	Hose	10	502-1258	1	Elbow, Regulator Hose

Regulator (Spec 11531)

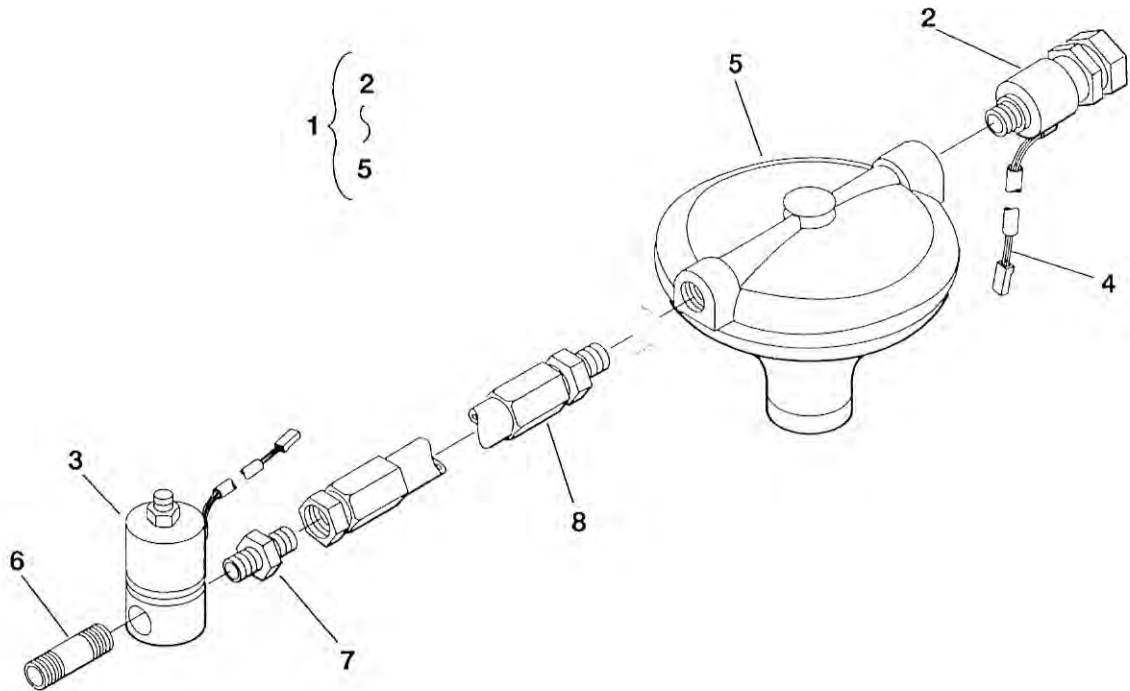


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148-1071	1	System Assy, Fuel (Includes Parts Marked *)
2	148-1074	1	*Solenoid, Fuel Cutoff
3	148-1072	1	*Solenoid, Duty
4	338-3646	1	*Harness, Power Supply
5	148-1073	1	*Regulator, Vapor
6	505-0061	1	Connector, Pipe

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	502-0590	1	Adapter, Pipe
8	148-1075	1	Hose, Fuel


* – Parts Included in LPG Fuel System Assy. (Also Include Control Unit Found on Blower Housing Page and Oxygen Sensor Found on Exhaust Page.)

Fuel Pump (Code 13DC, 13CP)

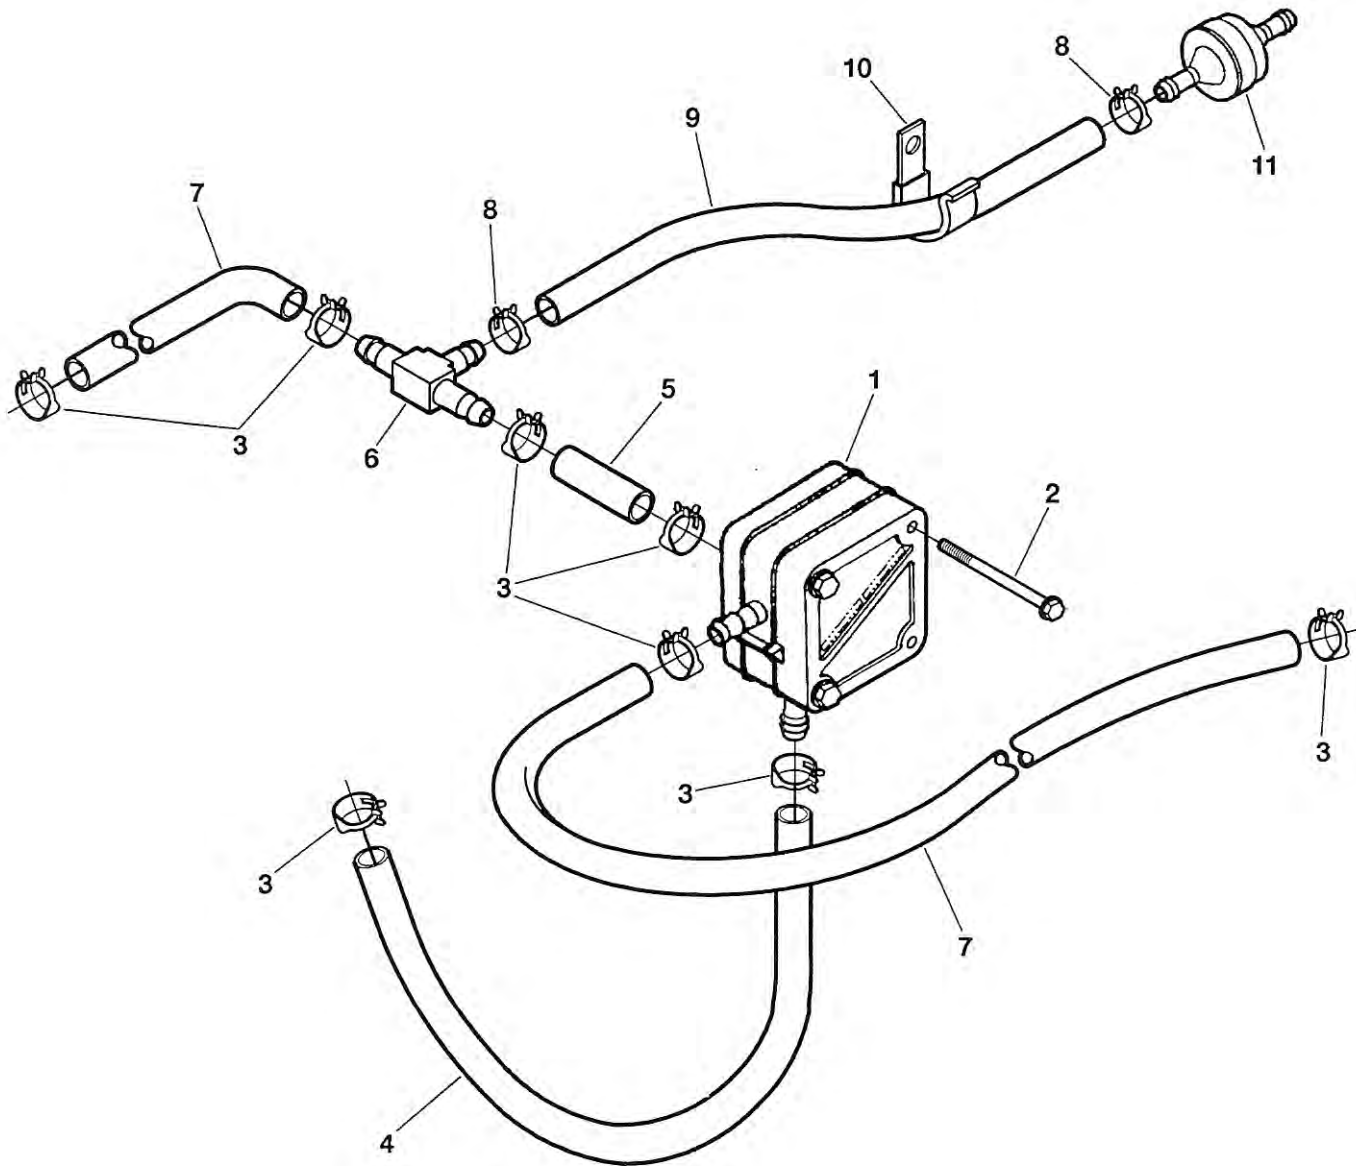


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	149-2299	1	Pump, Fuel	6	502-1222	1	Tee, Union (Code 13DC)
2	815-0775	2	Screw, Hex Washer Head Thread Forming (M4 x 40mm)	7	503-0707	2	Hose, Fuel (1/4"ID) (3-1/4" Code 13CP) (11" Code 15CW)
3			Clamp, Hose (1/2")	8	503-0301	2	Clamp, Hose (7/16") (Code 13DC)
	503-0731	8	Code 13DC, & 15CW	9	503-1252-01	1	Hose, Vacuum Line (3/16"ID x 6"Lg) (Code 13DC)
	503-0731	6	Code 13CP, & 15CW	10	518-0515	1	Clip, Hose (Code 13DC)
	503-0731	4	Code 13CP w/o 15CW	11	146-0590	1	Valve, Vacuum Sustain (Code 13DC)
4	503-1232	1	Hose, Fuel (1/4"ID x 5-1/2"Lg)				
5			Hose, Fuel				
	503-1442	1	Code 13DC (1/4"IDx 1-9/16")				
	503-0707	1	Code 13CP (1/4"ID x 5-1/8")				

Starter Components (Code 33BC)

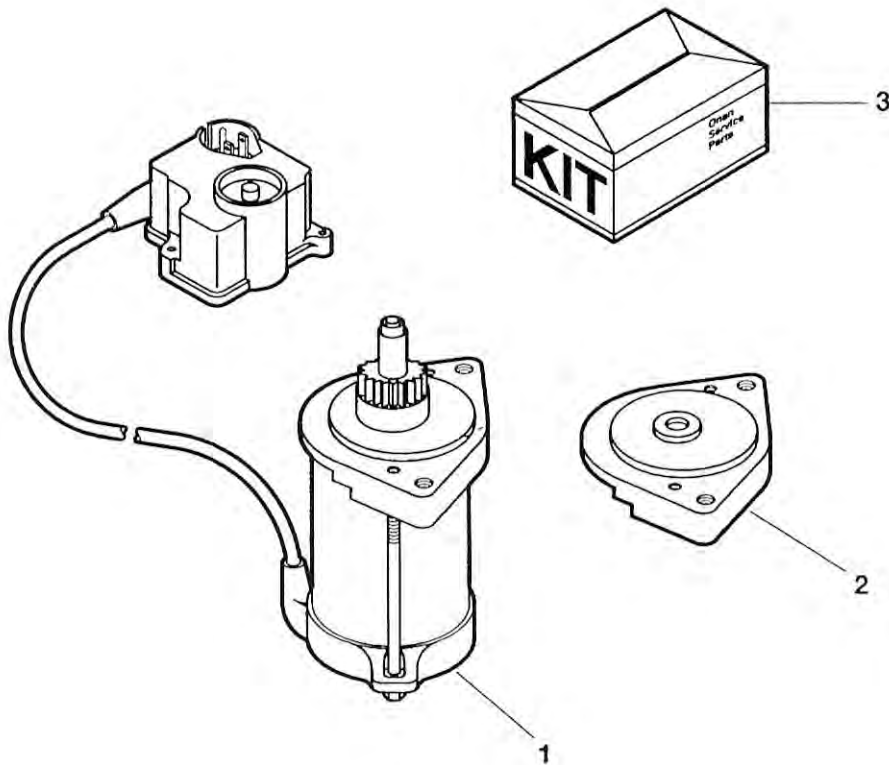


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-2127	1	Starter (110V)
2	191-2153	1	Cap, Drive
3	191-2152	1	Kit, Drive (Includes Spacer, Spring, Pinion Stop, Lock Ring, Dust Cover, Molded Pinion, Plate, Washer)

Starter Components (Code 33AT)

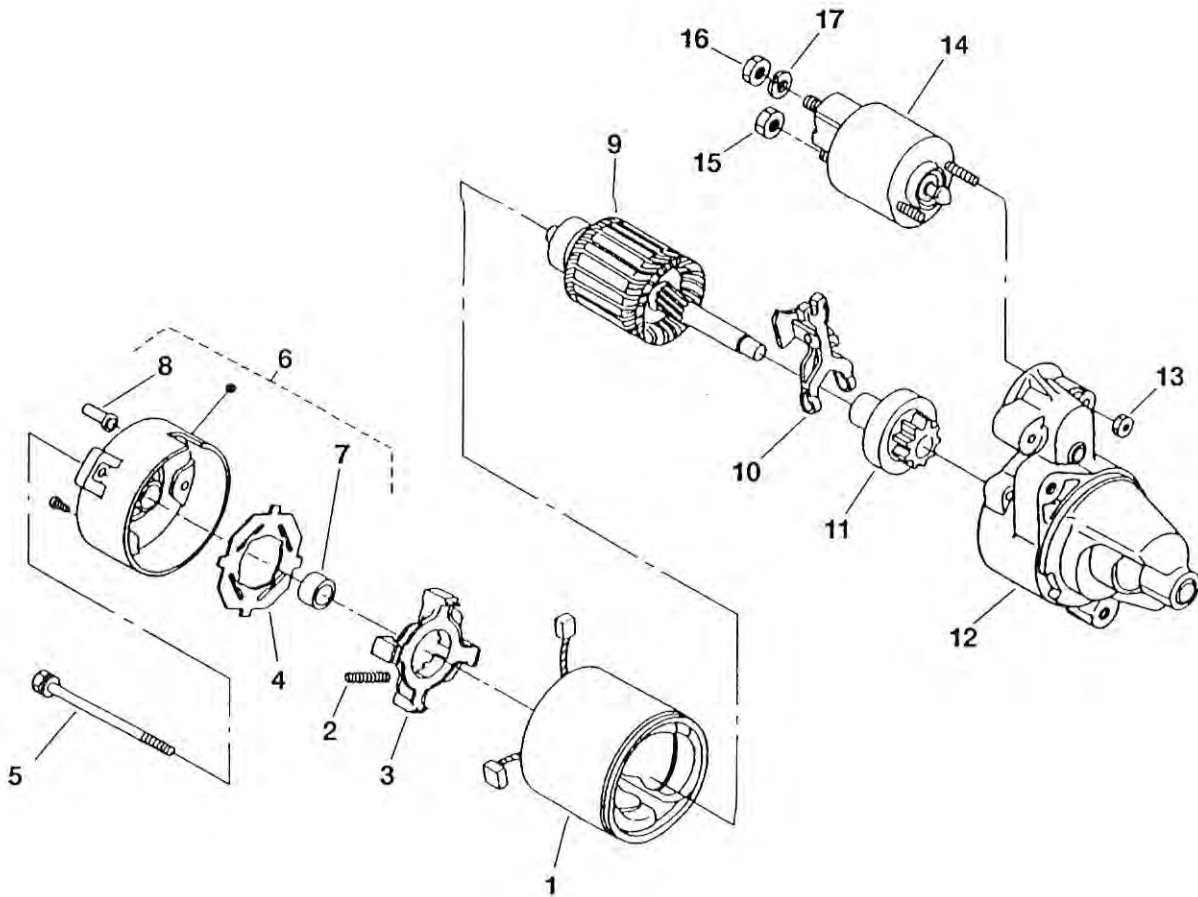

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	191-1906	1	Starter (12V)	9	185-2657	1	Armature, Starter
1	185-2659	1	Frame, Starter	10	185-2656	1	Lever, Starter Drive
2	185-2662	4	Spring, Brush	11	185-2713	1	Clutch, Sub
3	185-2661	1	Holder, Brush	12	—	1	Housing, Starter
4	185-2664	1	Insulator	13	185-2334	2	Nut
5	185-2660	2	Bolt, Through	14	185-2658	1	Switch, Magnetic
6	185-2707	1	Frame, Commutator (Includes Bearing and Cover)	15	870-0465	1	Nut
7	185-2663	1	Bearing, Oilless	16	185-2367	1	Nut
8	185-2965	1	Cover	17	185-6957	1	Washer, Spring
				18	185-6386	1	Ring, Snap


Recoil Starter (Code 33AY)

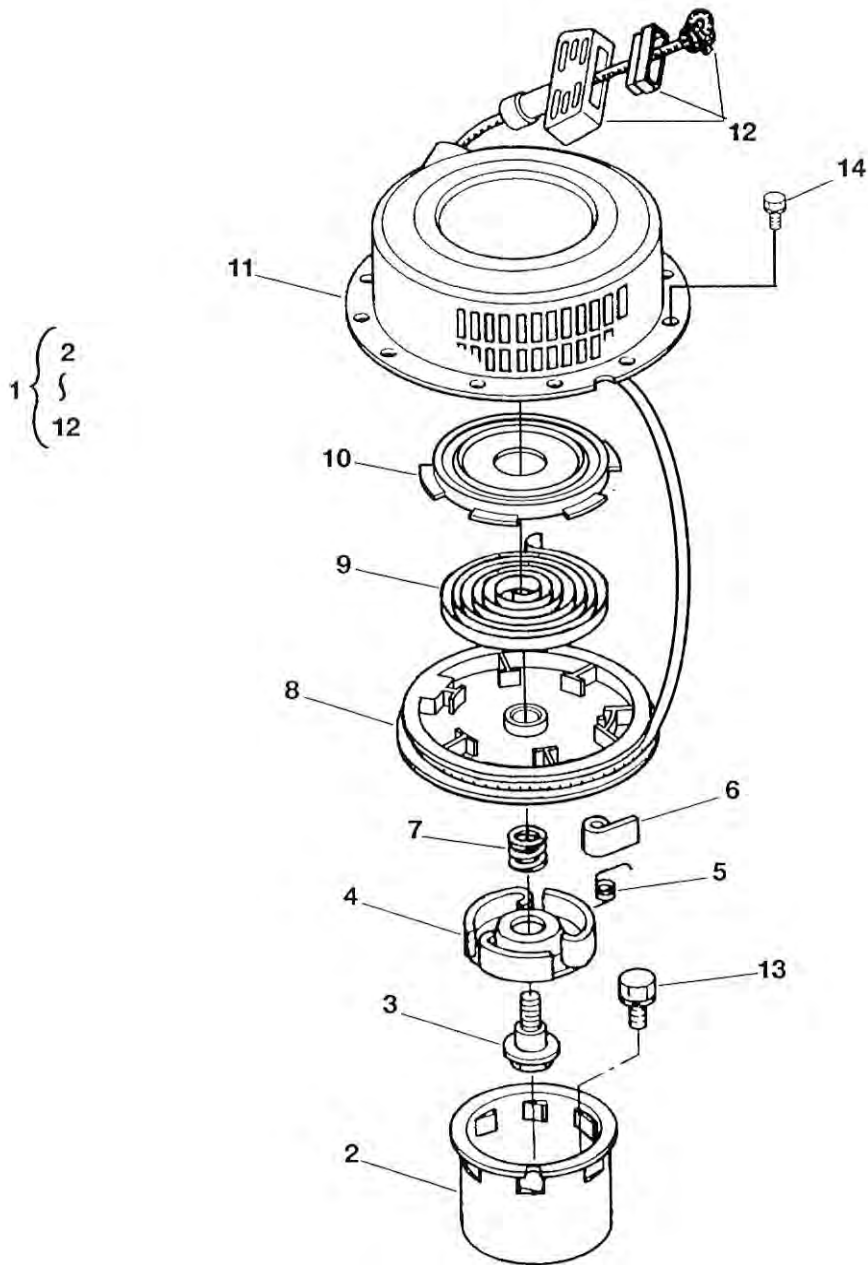

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-0488	1	Kit, Recoil Starter	10	192-0442	1	*Case, Spring
1	192-0433	1	Starter Assy, Recoil (Includes Parts Marked *)	11	185-2717	1	*Case, Recoil
2	185-2722	1	*Pulley, Crank	12	185-3681	1	*Handle Assy (Includes Handle, Rope and Reinforcement)
3	185-5289	1	*Screw, Center	13	821-2045	3	Screw, Hex Head Self-Locking Flange (M8 x 16mm)
4	185-2767	1	*Retainer	14	815-0773	4	Bolt, Flanged (M6 x 1 x 8mm)
5	185-2942	3	*Spring, Dog				
6	185-2889	3	*Dog				
7	185-2768	1	*Spring, Brake				
8	185-2718	1	*Reel				
9	185-2719	1	*Spring, Spiral				

* – Parts Included in Starter Assy.


**Blower Housing
(Spec 11217, 11326, 11474, 11536)**

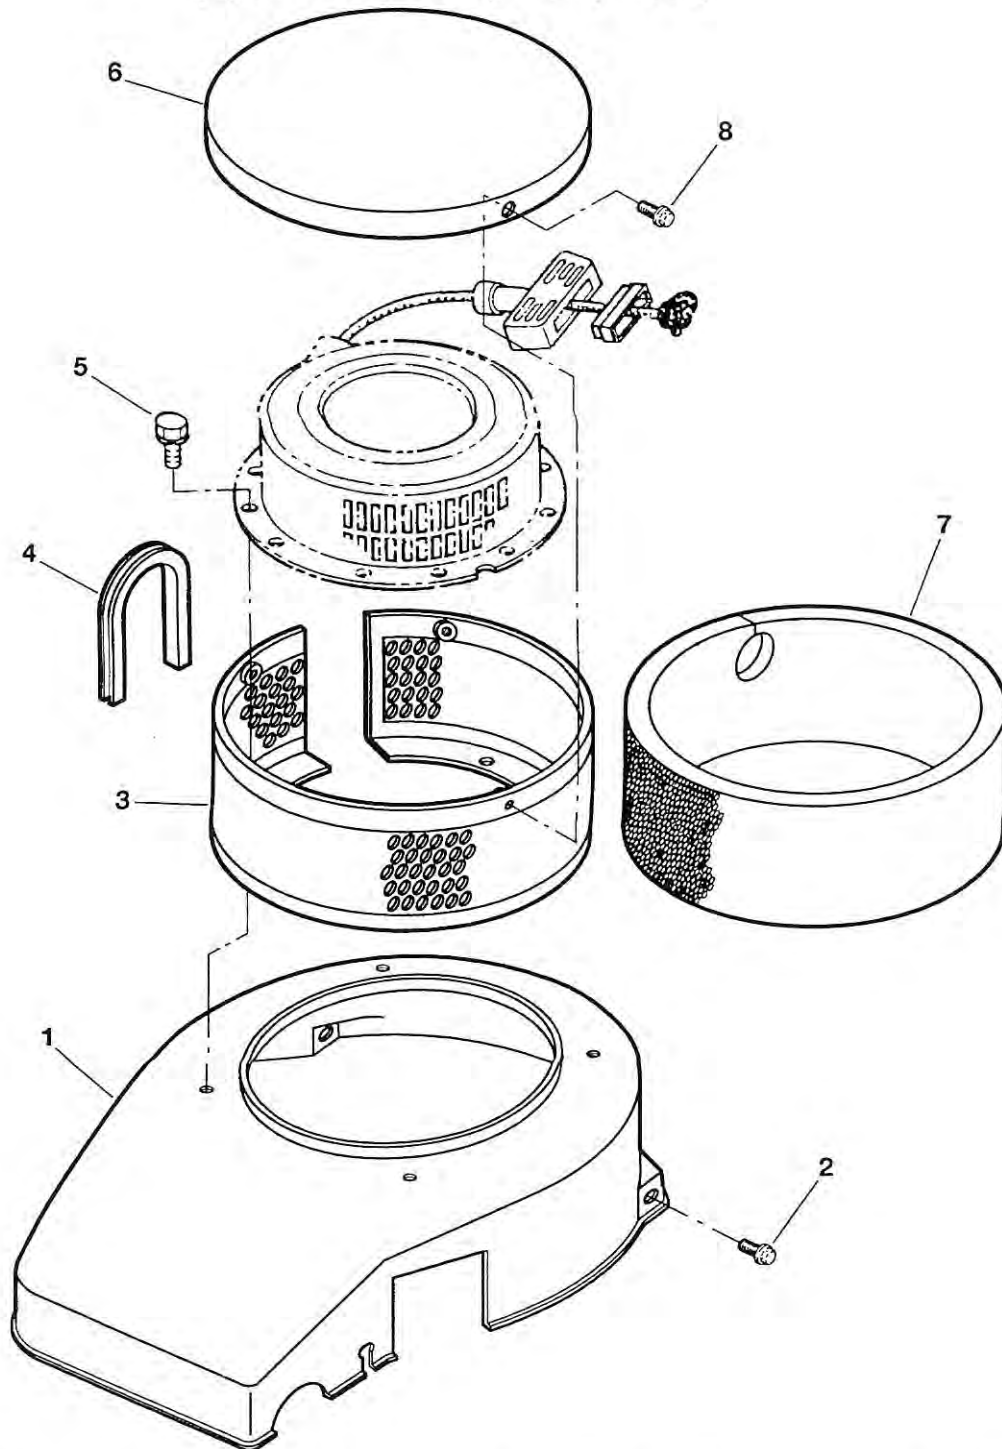

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134-4739-50	1	Housing, Blower	5	815-0773	4	Bolt, Flanged (M6 x 1 x 8mm)
2	815-0756	4	Bolt, Flange Hex Head (M6 x 1 x 14mm)	6	140-2853-02	1	Cover, Precleaner
3	140-2824-02	1	Support, Precleaner	7	140-2825-02	1	Filter, Precleaner
4	508-1083-04	1	Edging (155mm)	8	815-0340	3	Screw, Hex Washer Head (#10-32 x 3/8")

TO ORDER:888-773-0002 Fax: 770-773-9903
<Sflowers@eaglefloorsolutions.com>

Blower Housing (Spec 11330)

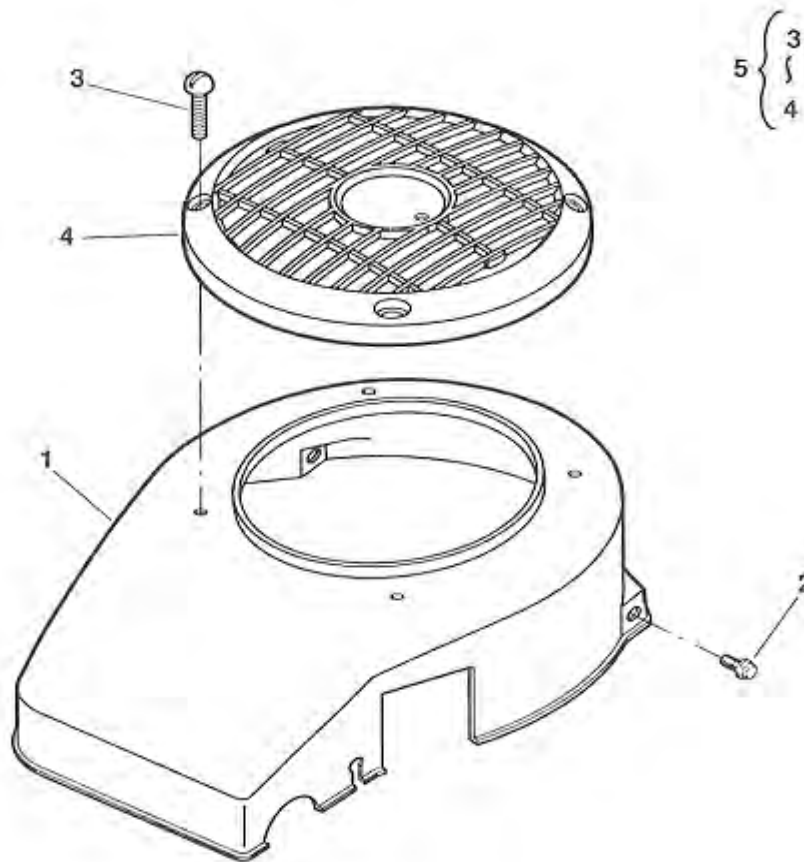

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134-4739-50	1	Housing, Blower
2	815-0756	4	Bolt, Flange Hex Head (M6 x 1 x 14mm)
3	823-1003	4	Screw, Button (M6 x 1 x 20mm)
4	134-4738	1	Guard, Stationary
5	541-0439	1	Kit, Stationary Guard (Includes Guard and Screws)